SEKONIC Spectrometer for Photo/Video/Cinema

SPECTROMASTER C-800 C-800-U

Operating Manual



Please read the operating manual carefully to fully understand the features of this product before use and keep it for future use. Keep the operating manual in a safe place. Please see the Startup Guide for information about the basic operations.

Congratulations on your purchase of a Sekonic SPECTROMASTER C-800 Series. Please read this operating manual to utilize the many features of the SpectroMaster C-800 Series.

The SPECTROMASTER C-800 Series is a high-performance color meter with a CMOS linear image sensor. The SPECTROMASTER C-800 Series makes it possible to precisely measure LED, HMI, Fluorescent lamp, natural light and flash light with color matching function (human eye's characteristic).

The C-800 benefits photographers and cinematographers by enabling the evaluation of light through various color rendering properties, spectral graphs as well as color temperature and filter compensation functions.

The application software of "C-800 Utility" can be used to save the measurement and graphic display, change the meter setting and update the firmware while meter is connected to computer or tablet by USB cable.

* Download the Utility from <u>www.sekonic.com</u>, and install it on your computer. URL: <u>www.sekonic.com/support/downloads/dtssoftwareformacandwindows.aspx</u> To use this Utility, connect your computer to the C-800 Series using a USB cable (Mini-B type, available commercially).

| C-800 Series | |
|---------------------------------------|------------|
| C-800 International version except US | |
| C-800-U | US version |

Terminology and Trademarks

- Windows is a registered trademark of Microsoft Corporation in the United States and/or other countries.
- The official name of Windows is "Microsoft® Windows® Operating System".
- Macintosh and Mac OS are registered trademarks of Apple Computer, Inc. in the United States and/or other countries.
- Rosco, Cinegel and E-Colour+ are the registered trademarks of Rosco Laboratories Inc.
- LEE is a registered trade mark of Lee Filters, a division of Panavision Europe Ltd.
- Kodak and Wratten are trademarks of Eastman Kodak Company.
- Fujifilm is a registered trademark of Fujifilm Corporation.
- X-Rite and ColorChecker are trademarks or registered trademarks of X-Rite, Incorporated in the United States and/or other countries. All rights reserved.
- All other company or product names are trademarks or registered trademarks of the respective companies.

Safety Precautions

Before using this product, please read this "Safety Precautions" for proper operation.

| WARNING The WARNING symbol indicates the possibility of death or series injury if the product is not used properly. | | |
|---|--|--|
| | The CAUTION symbol indicates the possibility of minor to moderate personal injury or product damage if the product is not used properly. | |
| The NOTICE symbol indicates cautions or restrictions when us product. Please read all notes to avoid errors in operation. | | |
| NOTE | The reference symbol indicates additional information about the controls or related functions. Reading these is recommended. | |
| • | The arrow indicates reference pages. | |

🕂 WARNING

- Infants or toddlers may accidentally wrap the strap around their neck, so please place it in a location out of their reach. There is a danger of suffocation.
- Do not place batteries in open flames, attempt to short, disassemble or apply heat to them, use unspecified batteries, or recharge them (except rechargeable batteries). They may burst and cause fires, serious injury, or damage to the environment.

🕂 CAUTION

• Do not handle this product with wet hands, or leave it in the rain or in a location where it may be splashed with water, submerged, or come into contact with moisture. There is a danger of electric shock if the "Flash Light Cord (PC) Mode" is used.

This may also result in damage to the product.

- Do not attempt to disassemble the product for modification or parts replacement. It may affect measurement results or damage the meter.
- Any significant impact to the meter housing or LCD screen can cause physical damage and failure of performance.
 Even when the meter is in the bag or pocket, damage is possible under severe impact or pressure conditions.
- Gently tap the meter's LED panel when changing modes or making selections. Using pointed pens or pencils may scratch the LCD screen or damage the product.
- Infants or toddlers may accidentally grab the strap and swing the product, so
 please place it in a location out of their reach, as the meter may be damaged
 by impacts.
- Be careful that the neck strap does not come loose when carrying the product, as the meter may be damaged when dropped.
- This neck strap is made of polyester fiber. Please refrain from using the product if synthetic fibers cause your skin to become irritated, inflamed or itchy in order to prevent worsening your symptoms.

CA Prop 65

🕂 WARNING

This product can expose you to chemicals including lead,which is known to the State of California to cause cancer, and Di (2-ethylhexyl) phthalate (DEHP), which is known to the State of California to cause birth defects or other reproductive harm.

For more information, go to www.P65Warnings.ca.gov.



- A protective sheet is attached to the LCD. Peel it off before use.
- Although the LCD monitor is manufactured to very high standards, it is possible to observe a few dead pixels on the screen. This is normal and not a malfunction of the meter.
- Do not use the meter in Cord Flash Mode at altitudes above 2,000m (6,561 feet).
- Our company shall not be liable for any data loss caused by, but not limited to, malicious acts and control errors.
- Be sure not to drop the meter or subject it to sudden impacts, as the meter will be damaged.
- Do not store the meter in areas of high temperature of high humidity, as the meter will be damaged.
- Be careful not to transport the meter from cold to warm moist conditions as condensation will form on the meter and may damage it.
- If the meter is operated in temperatures below -10°C, the response of the LCD will greatly slow down and the display may be difficult to view and read. This will not harm the meter. Also, if the temperature exceeds 50°C, the liquid crystal display will darken and become difficult to read, but when it returns to room temperature it will return to its normal condition.
- If the meter is left in direct sunlight, a vehicle, or near a heater, the unit's temperature will rise and may result in damage. Please be careful when using the meter in these types of locations.
- If the meter is left where corrosive gases may be generated, the gases may affect the product and may result in damage. Please be careful when using the meter in these types of locations.
- In case of disposing the meter, follow the rules of disposal in your area.

Maintenance Notes

- Be careful not to let the Light Receptor become dusty, dirty, or scratched as this may affect the precision of the measurement.
- If the meter becomes dirty, wipe it with a dry, soft cloth. Never use organic solvents such as thinner or benzine.



- For used batteries, dispose of them according to the rules of your area.
- Insulate plus and minus terminals with tape or other insulation material.
- Do not disassemble the batteries.

Intended Usage

The meter is designed for:

- Measuring natural or artificial lights to display the various readings for photography and motion picture.
- Displaying the correction values of filters for camera or lighting to match to the target color temperature.
- Managing the aged deterioration of light sources.
- Managing the light source for viewing printed color proofs.
- Checking the color rendering properties of a light source.

Main features of the C-800

| Usage | Features |
|---------------------------------|--|
| for still and motion capture | Measure all lights (LED, HMI, Tungsten, Fluorescent lamp, natural light and flash light) with the bandwidth from 380nm to 780nm. Display the various color rendering properties such as CRI, SSI, TLCI, TLMF, and TM-30. Display the enhanced measurement units. (1) Color temperature (K= Kelvin) (2) Color deviation (∠uv) (3) LB/CC index (4) LB/CC Camera filter number (KODAK WRATTEN 2, FUJIFILM, LEE) (5) LB/CC Light filter number (LEE, ROSCO) (6) Illuminance/luminous exposure (ambient light/flash light) (7) TM-30 (Rf, Rg) (8) SSI (comparison with known standards or memorized value) (9) CIE1931 chromaticity (x, y) (10) Hue/Saturation (11) CRI (Ra, R1 to R15) Various Display modes (1) Text mode (2) Spectrum graph/comparison mode (3) CRI/comparison mode (4) TM-30 mode (5) SSI mode (6) TLCI/TLMF mode (7) Filter (Camera/Light) mode (8) Multi Lights mode (9) White balance correction mode |

Intended Users

The C-800 Series is intended for image makers involved in the photography and motion picture industries, and those who manufacture and rent the light sources which they use. In addition, the C-800 Series is intended for architectural interior lighting design.

Restrictions

There are some cautions and restrictions regarding the use of this product. Please read and understand the following before using the meter.

NOTICE

 The contents of this manual may be subject to change for the product's specification modifications and other reasons without prior notice.
 We recommend that you download the latest operating manual from our website and use this product.

URL: www.sekonic.com/support/instructionmanualuserguidedownload.aspx

- The safety-related precautions such as «Safety Guide and Maintenance» and «Safety Precautions» conform to the legal and industry standards that were applicable at the time this operating manual was created. Therefore, this manual may not contain the latest information. If you are using the previous operating manual, please download and refer to the latest operating manual.
- The product may contain printing materials such as cautions related to safety and/or printing errors as a supplement to the operating manual.
- The contents of this operating manual may be reproduced for non-commercial purposes and for personal use only. However, the reproduced material must contain the copyright notice of our company.
- The reproduction of all or any part of this document without permission is strictly forbidden.
- The product concerned and/or this manual may be subject to future changes without prior notification.
- The screens in this operating manual may differ from the actual displays of the meter you are using. (Colors, letters, etc.)

Accompanying Accessories

The following items are included with the meter in the package. Please be sure to check that all noted items are included.

- * If any items are missing, please contact the distributor or the reseller you purchased the meter from.
- * The USB cable (Mini-B connector) is not included in the package. Please obtain this separately.
- * Batteries (two AA) are not included in the package. Please obtain these separately.

Meter

Soft Case





Neck Strap



Quick Guide



Safety Precaution



Table of Contents

| Terminology and Trademarks | |
|----------------------------|------|
| Safety Precautions | i |
| | i |
| A CAUTION | ii |
| CA Prop 65 | ii |
| Intended Usage | . iv |
| Intended Users | v |
| Restrictions | v |
| Accompanying Accessories | . vi |

| 1. | . Parts Designations and Functions | | | |
|----|------------------------------------|--|----|--|
| | 1-1 | Parts Designations | 1 | |
| | 1-2 | Parts Functions | 2 | |
| 2. | Before L | Jse | 3 | |
| | 2-1 | Attaching the Strap | 3 | |
| | 2-2 | Installing the Batteries | 4 | |
| | 2-3 | Power ON/OFF | 5 | |
| | 2-4 | Automatic Power OFF Function | 9 | |
| | 2-5 | Checking the Battery Capacity | 10 | |
| | 2-6 | Replacing Batteries | 11 | |
| 3. | Screen | Operation | 12 | |
| | 3-1 | Screen and Operation | 12 | |
| | 3-1-1 | Basic Screen and Operation | 12 | |
| | 3-1-2 | Icon Operation | 16 | |
| | 3-1-3 | Input of Numbers/Characters | 17 | |
| | 3-1-4 | Locking and Unlocking the Screen | 19 | |
| 4. | Basic O | perations | 20 | |
| | 4-1 | Basic Measurement Flow | 20 | |
| | 4-2 | Selecting the Measuring Mode | 22 | |
| | 4-2-1 | Matching Measuring Mode with Light Sources | 22 | |
| | 4-2-2 | Selecting the Shutter Speed (Flash Modes Only) | 24 | |

| | 4-3 | Setting the Indication and Items in Measuring Screen | | |
|---|--------|---|-----|--|
| | 4-3-1 | Setting Target Color temperature | | |
| | 4-3-2 | Customizing Display Items in the Measuring Screen | | |
| | 4-4 | Selecting the Display Mode | | |
| | 4-4-1 | Displaying in Text [Text] Mode | | |
| | 4-4-2 | Displaying in Spectrum Graph [Spectrum] Mode | | |
| | 4-4-3 | Displaying in Spectrum Comparison [Spectrum Comp.] Mode | | |
| | 4-4-4 | Displaying in Color Rendering Index [CRI] Mode | | |
| | 4-4-5 | Displaying in Color Rendering Index Comparison [CRI Comp.] Mode | | |
| | 4-4-6 | Displaying in TM-30 [TM-30] Mode | | |
| | 4-4-7 | Displaying in Spectral Similarity Index [SSI] Mode | 51 | |
| | | [Standard Light Source Selection] | | |
| | | [Color Temperature Input] | | |
| | | [Memory Recall Selection] | | |
| | 4-4-8 | Displaying in TLCI or TLMF [TLCI/TLMF] Mode | | |
| | 4-4-9 | Displaying in Filter [Filter] Mode | | |
| | | [Lighting Filter] | | |
| | | [Camera Filter] | | |
| | 4-4-10 | Displaying to Compare Light Sources [Multi Lights] Mode | 74 | |
| | 4-4-11 | Displaying in White Balance Correction Graph [WB Corr.] Mode | | |
| | 4-4-12 | Displaying Setting [Setting] Screen | | |
| M | easuri | ng Light Sources [Measurement Screen] | 85 | |
| | 5-1 | Measurement Method | | |
| | 5-1-1 | Balancing Color Temperatures of Light Sources | | |
| | 5-2 | Measurement in Ambient Light Mode | | |
| | 5-3 | Measurement in Cordless Flash Mode | | |
| | 5-4 | Measurement in Cord (PC) Flash Mode | | |
| | 5-5 | Comparison Function (in Ambient Light Mode only) | | |
| | 5-6 | When [Over], [Under], [Filter N/A] or red letter is Displayed | 100 | |
| | 5-6-1 | Display of [Over], [Under], [Filter N/A] or red letter | 100 | |
| | 5-6-2 | Changing the Light Range | 102 | |


5.

| 6. | Measure | ement Tool [Tool Box] Screen | 103 | |
|----|----------|--|-----|--|
| | 6-1 | Setting Preset Contents [Preset Selection] Screen | 104 | |
| | 6-2 | Using the Memory Function | 107 | |
| | 6-2-1 | Naming Measurement Being Memorized [Memory Title] Screen | 108 | |
| | 6-2-2 | Recalling Measurement Results [Memory Recall] Screen | 111 | |
| | 6-2-3 | Renaming Memory Title [Memory Rename] Screen | 116 | |
| | 6-2-4 | Deleting Saved Measurement Results [Memory Clear] Screen | 119 | |
| | | [Erasing Individual Values] | 121 | |
| | | [Erasing the Memory Title] | 122 | |
| 7. | Meter Se | ettings [Setting] Screen | 124 | |
| | 7-1 | Setting Items | 124 | |
| | 7-1-1 | Item List | 126 | |
| | 7-2 | Customize | 127 | |
| | 7-2-1 | Item Specifications | 128 | |
| | 7-2-2 | Selecting the Shutter Speed Step | 129 | |
| | 7-2-3 | Selecting the LB Step | 132 | |
| | 7-2-4 | Selecting the Camera Filter Brand | 134 | |
| | 7-2-5 | Selecting the Lighting Filter Brand | | |
| | 7-2-6 | Selecting the White Balance Step | 138 | |
| | 7-2-7 | Selecting the Unit of Illuminance | 140 | |
| | 7-2-8 | Selecting the Color Space (Hue/Sat) | 142 | |
| | 7-2-9 | Selecting the Spectrum Y-axis Scale | 144 | |
| | 7-2-10 | Selecting the Auto Power Off Time | 147 | |
| | 7-2-11 | Selecting the Backlight Brightness | 149 | |
| | 7-2-12 | Selecting the Auto Dimmer Time | 151 | |
| | 7-2-13 | Selecting the Language | 153 | |
| | | Reset Customized Items | | |
| | 7-3 | Preset Editing | 156 | |
| | 7-3-1 | Displaying the Preset Selection List | 159 | |
| | 7-3-2 | Setting the Present Name | 161 | |
| | 7-3-3 | Setting the Preset Target Color Temperature | 163 | |
| | | Setting the LB Index Correction Value | | |
| | 7-3-5 | Setting the CC Index Correction Value | 168 | |

| | 7-4 Dark Calibration | | | |
|----|-------------------------------------|-----------------------------|--|--|
| | 7-5 | Product Information Display | | |
| | 7-5-1 | Regulation Display | | |
| 8. | Hardwar | e Setting Screen | | |
| | 8-1 | Adjust Touch Panel | | |
| | 8-2 | Edit User Information | | |
| | 8-3 | Factory Setting | | |
| 9. | Append | i x | | |
| | 9-1 | Glossary | | |
| | | Filter Types | | |
| | 9-3 | Specifications | | |
| | 9-4 | Legal Requirement | | |
| 10 | .Optiona | Accessories | | |
| 11 | 11. Troubleshooting | | | |
| 12 | 12.After-sales Services | | | |
| FC | FCC & IC compliance information 206 | | | |


1. Parts Designations and Functions

1-1 Parts Designations

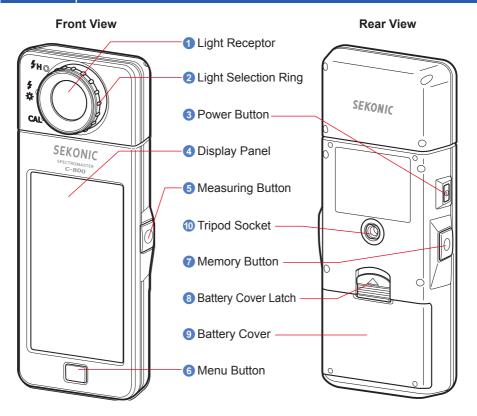

Bottom View

Battery Compartment Section

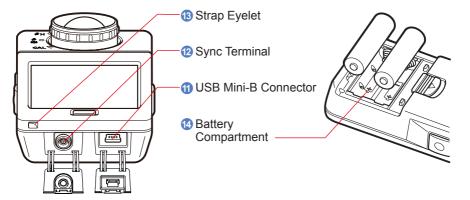

1-2 Parts Functions


The following table lists the functions of each part.

| No. | Part Name | Functions | |
|-----|--|---|--|
| 1 | Light Receptor | Point light receptor directly at light source during reading. Head rotates 270 degrees to aid reading. | |
| 2 | Light Selection Ring | Rotate to select dark calibration, normal measuring range or high range for flash light. | |
| 3 | Power Button | Press to turn ON/OFF. | |
| 4 | Display Panel | Displays the setting screens and measuring screens. The built- in touch panel function enables setting, selection or operation by touching the display panel. (➡ P16) | |
| 6 | Measuring Button | Press for measurement. | |
| 6 | Menu Button | Press to shift display to Display Mode Selection screen. | |
| 7 | Memory Button | Press after measuring to save the measured data. | |
| 8 | Battery Cover Latch | Latch for the battery cover. | |
| 9 | Battery Cover | Secures the batteries. | |
| 10 | Tripod Socket | Female mounting threads (1/4-20) for hands free mounting on tripods. | |
| 1 | USB Mini-B Connector | The USB connector for connecting to the PC with the installed utility and USB bus power. USB terminal: Mini-B-5pin | |
| 12 | Sync Terminal Accepts an optional synchro cord when using meter in Co Flash Mode. | | |
| 13 | Strap Eyelet | Used to attach the included strap. | |
| 14 | Battery Compartment | Holds the batteries. Insert the batteries in the correct direction. | |

2. Before Use

2-1 Attaching the Strap

- 1. Pass the strap (included) through the outer hole of the Strap Eyelet (3).
- 2. Pass the opposite end of the strap through the loop at the end of the strap.

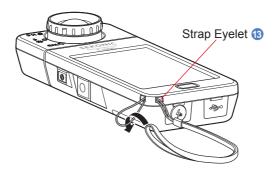

🔥 WARNING

Infants or toddlers may accidentally wrap the strap around their neck, so please place it in a location out of their reach. There is a danger of suffocation.

AUTION


- Infants or toddlers may accidentally grab the strap and swing the product, so please place it in a location out of their reach, as the meter may be damaged by impacts.
- Be careful that the neck strap does not come loose when carrying the product, as the meter may be damaged when dropped.

• This neck strap is made of polyester fiber. Please refrain from using the product if synthetic fibers cause your skin to become irritated, inflamed or itchy in order to prevent worsening your symptoms.

2-2 Installing the Batteries

- **1.** Prepare two AA batteries.
- 2. Slide the Battery Cover Latch (3) in the direction of the arrow and remove the Battery Cover (9).
- 3. Insert the batteries according to the "+" and "-" symbols in the Battery Compartment (2).

4. While lining up the two tabs on the Battery Cover (9), press the Battery Cover (9) back into place from above.

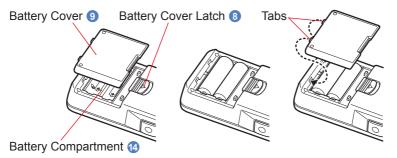

Do not place batteries in open flames, attempt to short, disassemble, apply heat to, or recharge them (except rechargeable batteries). They may burst and cause fires, serious injury, or damage to the environment.

AUTION

- Use the manganese or alkaline batteries.
- Do not use batteries with any other rating than the one specified. Also, do not mix old and new batteries.
- Please insert the batteries minus "-" side first.
 When removing the batteries, remove them plus "+" side first.
- If the meter will not be used for an extended period of time, it is recommended to remove the batteries to avoid possible damage caused by battery leaking.

^{*} As shown in the diagram below, please note both positive sides of the batteries are facing in the same direction.

2-3 Power ON/OFF

Power ON

- 1. Turn the Light Selection Ring 2 to set to the dark calibration position **CAL** (
- 2. Press the Power Button 3.

The meter will turn on and the Startup screen will be displayed (for 2 seconds).



Power Button 3





- The blue lettered "SEKONIC" logo screen is displayed after battery replacement and 24 hours after power OFF.
- The meter is executing a memory check while the blue progress bar is moving on the Logo Screen, so please do not turn OFF the power, as doing so may lead to damage.

Logo Screen



- If the LCD screen shows no display, check if the batteries are installed properly (Pos/Neg positioning) and have enough capacity.
- You can reduce start up time by simply tapping the screen when the Startup screen appears.

3. Select the language. (Appears only when turned ON for the first time)

The Language Selection screen is displayed. Select the language to use.



4. Press the [OK] to select the language.

The language can be switched at any time. (\Rightarrow P153)

5. Dark calibration.

The C-800 measuring system must be calibrated before use. Turn Light Selection Ring to calibration indication. "Dark calibration in progress. Please wait" and the status bar will appear while calibrating. The Measuring screen will appear when operational.





Dark calibration is performed when there is a big change in temperature between turning power OFF and ON.

Except the cases above, dark calibration after power ON is skipped.



When the Light Selection Ring ② is not set to the dark calibration position, the message "Please set Light Selection Ring for dark calibration." is displayed. Set the Light Selection Ring ② to the dark calibration position
 CAL ()) to calibrate the system.

 If dark calibration is not successful, "Dark calibration failed. Please check Light Selection Ring position." is displayed. Set the Light Selection Ring 2 to the dark calibration position CAL () to calibrate the system.



Dark Calibration Position Confirmation Screen

Dark Calibration Confirmation Screen





6. Press the Measuring Button **5** to measure.

Turn the Light Selection Ring 2 to select the range.

When measuring ambient light, make sure to select Range L $\frac{2}{24}$ (

When measuring flash units, select Range L $\stackrel{\bigstar}{\underset{\bigstar}{\leftarrow}}$ () or Range H $\stackrel{\bigstar}{\underset{\leftarrow}{\leftarrow}}$ () depending on the brightness of of the flash. ($\stackrel{\diamond}{\Rightarrow}$ P100, $\stackrel{\diamond}{\Rightarrow}$ P102)



When the Measuring Button () is pressed at the dark calibration position, the message "Measurement failed. Please check Light Selection Ring position." is displayed. Set the Light Selection Ring
(2) to the correct position and the Measuring screen will be displayed.





Measurements and display will take longer in light levels below 30lx. The LCD illumination will normally switch off during measurements to avoid influence to measurements.

Power OFF

NOTICE

1. Press and hold the Power Button **3** for 1 second or longer. The meter will turn OFF.

The meter will turn OTT.

Please wait 3 seconds between repeated power on and power off sessions.




All settings and measurements made during use are saved in memory even after the meter is powered off.

2-4 Automatic Power OFF Function

To save battery capacity, the meter will automatically turn off 5 minutes (default setting) after the last button is pressed.



- All measurements, settings and indications are saved in memory even after the meter has automatically turned off. When the power is turned ON, they will be displayed again.
- The default setting of Auto Power Off is 5 minutes. Other settings or "No auto power off" can be selected in the Customize of Setting screen. (+ P147)
- If, while in transport, the Power Button (3) is inadvertently and continually pressed in, the meter will turn ON for about 1 minute and then turn automatically turn OFF to save battery power.

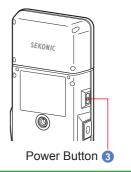

2-5 Checking the Battery Capacity

When the power is turned ON, the LCD screen will show the battery capacity indicator.



Sufficient battery life remaining. Adequate battery life remaining.

Replace the battery immediately.

Have a spare battery ready.

Battery capacity indicator





• When battery power is low and the meter is turned ON, the LCD screen will appear and then turn off immediately. This is an indication that the batteries are depleted and should be replaced immediately.

Having spare batteries on hand is recommended.

• When the meter is continuously used at room temperature, the battery life should last 8 hours (based on Sekonic testing methods).

2-6 Replacing Batteries

- Always turn off the power before replacing batteries. If you replace batteries while the power is turned on, the measured values that are obtained during operations are not saved. Also, this may cause a failure.
- If an unexpected display appears on the LCD during battery replacement or measurement, ie. settings other than selected, or if the meter does not respond when a button is pressed, remove the batteries, wait at least 10 seconds, and then re-install them.

3. Screen Operation

| 3-1 | Screen and Operation |
|-------|----------------------------|
| 3-1-1 | Basic Screen and Operation |


The touch-screen display enables selecting Display Modes and settings with the touch of your finger.

Measuring Screen

The Measuring screen is displayed after the meter is turned ON and the dark calibration is complete.

On the Measuring screen, it is possible to select the Measuring mode or change the measuring condition. Touch the icons with blue under-bar to change the setting. To change the Display Modes, refer to each explanation of Display Modes.

* Pressing the Menu Button (6) on the meter returns the meter to the Display Mode Selection screen.

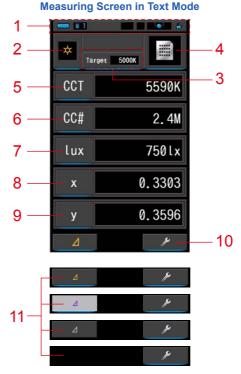

- * The display changes depending on the set measuring mode.
- * For this description, all icons and menus are displayed.

Item List

| No. | Part Name | Description | | |
|-----|---|---|---|--|
| 1 | Status Bar | Displays the setting contents. (➡ P14) | | |
| 2 | [Measuring Mode] Icon | Displays the o Touch the ico screen. | Displays the current Measuring Mode. (→ P22) Touch the icon to switch to the Measuring Mode Selection screen. | |
| 3 | [Target] Indication | | arget color temperature. (➡ P26) n to switch to the Target Color Temperature | |
| 4 | [Display Mode] Icon | | current Display Mode. (✦ P30) n to switch to the Display Mode Selection | |
| 5~9 | [Display Item] Indication | Touch the ico screen. (⇒ P2 | n to switch to the Display Item Selection 28) | |
| 10 | [Tool Box] Icon | Switches to the | ne Tool Box screen. (➡P103) | |
| | [Delta] Icon (in Ambient Light Mode only) | ⊿ | Displayed when comparison measurement can be performed. | |
| | | ⊿ | When there is no reference measurement value, the icon is disabled. | |
| | | | When comparison measurement cannot be performed, the ($$) icon is not displayed. | |
| 11 | | When holding differences of and the curre Measuring Bu | is touched, the displayed measurement and Comparison Function is activated. g the Measuring Button (3), the value if the memorized items (except filter names) nt reading will be displayed. When the utton (3) is released, the display will revert to alues of the first reading. (A graph displays | |
| | | When 4 | is touched, the icon returns to | |
| | | | and the last measured values are displayed. Function is cancelled when the power is | |
| | | Note Caution | : When the Comparison Function icon is Memory Button 7 is disabled. | |

When values are outside the display or measurement range, [Under], [Over] or [Filter N/A] is displayed.

Under: Displayed if value is lower than measurement range (too dark) or color temperature value is too low.

Over: Displayed if value is higher than measurement range (too bright) or color temperature value is too high.

Filter N/A: Displayed if there is no more combination of Filter name and number.

Status Bar




* For this description, all icons and menus are displayed.

| No. | Part Name | Description | |
|-----|---|-------------|--|
| | | | Sufficient battery life remaining. |
| | | - | Adequate battery life remaining. |
| 1 | Battery Capacity Indicator | ļ | Have a spare battery ready. |
| | | ļ | Replace the battery immediately. |
| | | ÷ | Appears when powered by USB. |
| 2 | Memory Count | M | Displays the number of measured data stored in memory. The number in memory is displayed until 99 to the right of the mark. |
| 3 | Preset Selection | P 2 | Displays the preset number when a preset is selected. |
| 4 | Temperature Fluctuation Warning | ! | When the mark appears, the referenced environment temperature is fluctuating, and accurate measurement may not be possible. Please perform dark calibration. |
| | | M | Appears when the Light Selection Ring 2 is selected by the dark calibration position. |
| 5 | Light Selection Ring Status Indicator | 0 | Appears when the Light Selection Ring 2 has range "L" selected. |
| | | 0 | Appears when the Light Selection Ring 2 has range "H" selected. |
| 6 | Key Lock Status | | Appears when the screen is unlocked. |
| б | Indicator | _ | Appears when the screen is locked. When the screen is locked, touch panel operations are disabled. |

Tool Box Screen

The following setting can be performed after touching the [Tool Box ()] icon on the measuring screen.

* All icons are displayed for explanatory purposes for the Tool Box screen. It is not the default.

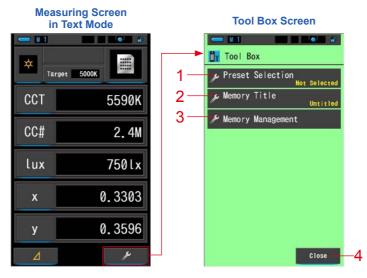

[Tool Box: Item List]

| No. | Part Name | Description | |
|-----|--|---|--|
| 1 | Preset Selection | Switches to the Preset Selection screen. (➡ P104) | |
| 2 | Memory Title Switches to the Memory Title Input screen. (+ P108) | | |
| 3 | Memory Management | Switches to the Memory Management screen. (⇒ P111) | |
| 4 | [Close] Button | Closes the Tool Box screen and returns to the Measuring screen. | |

3-1-2 Icon Operation

Touch Operation

Touch the icons on screen to perform various operations.

(Ex.) Measuring Screen in Text Mode

| Target 5000K | | | | | | |
|--------------|--------|--|--|--|--|--|
| CCT | 5590K | | | | | |
| CC# | 2.4M | | | | | |
| lux | 750lx | | | | | |
| x | 0.3303 | | | | | |
| у | 0.3596 | | | | | |
| ⊿ | × | | | | | |

Touch-enabled Icons

Icons with blue under-bar indicate which icons are operational.






Touch-enabled Icons

Touch-disabled Icons

Slide Operation

Slide your finger tip up or down over a value to change the value amount. Sliding your finger over scroll bar provides fast navigation of large menus.

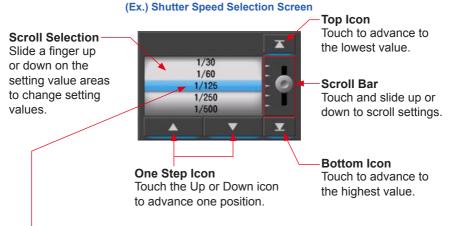

* Blue bar indicates the value selected.

3-1-3 Input of Numbers/Characters

You can input numbers and characters.

Numeric Number Input Screen

(Ex.) Target Color Temperature Input Screen



Numeric Number Method


| No. | Key | Description | | |
|-----|--------------------------|--|--|--|
| 1 | 0-9 | Value displayed on screen when key touched. | | |
| 2 | Delete | Deletes input value at cursor position. | | |
| 3 | $\leftarrow \rightarrow$ | Moves input position. | | |
| 4 | ок | Confirms input value and returns to previous screen. | | |
| 5 | Cancel | Cancels input value and returns to previous screen. | | |

(8) (12)

(6)

9

Character Input Screen

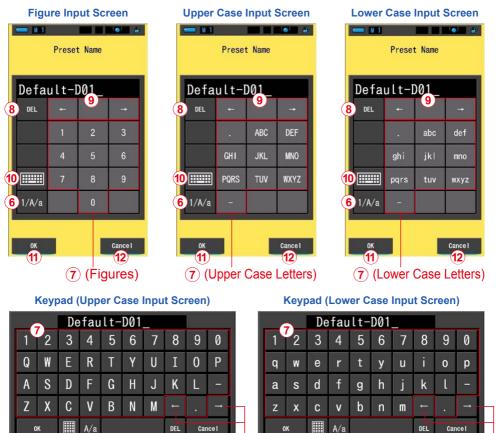

Input Method of Characters and Numbers

(8) (12)

(6)

(10)

| No. | Кеу | Description | |
|-----|-------------------------------------|--|--|
| 6 | 1/A/a | Shifts between numbers/upper case letters/lower case letters. | |
| 7 | 0-9, ABC, abc, hyphen, period | Value displayed on screen when key touched. Repeated touching of the same button for alphabet (ABC/abc) will change the alphabet character in order. | |
| 8 | Delete | Deletes the character at the cursored position. | |
| 9 | $\leftarrow \rightarrow$ | Moves input position. | |
| 10 | Keypad | Shifts between Standard Keypad and Qwerty Keypad. | |
| 1 | ОК | Confirms input value and returns to previous screen. | |
| 12 | Cancel | Cancels inputting and returns to previous screen. | |

9


3-1-4 Locking and Unlocking the Screen

You can lock the screen to prevent misoperation.

When the screen is locked, touch operation is disabled.

However, the Memory Button 7, Measuring Button 5, and Power Button 3 are still operational.

The screen will stay locked even when power is turned OFF and ON.

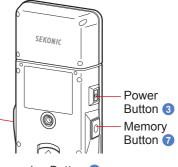

Measuring Button 5


To Lock

In any measuring mode, press and hold the Menu Button (5) to see the Locked icon [1] appear at the upper right corner of the LCD screen. Function Icons cannot be operated while the screen is locked.

The Locked icon [


approximately 1 second at the center of the screen when function Icons are touched or MENU button (6) is pressed.

* This lock function can be set in the Measuring screens only.

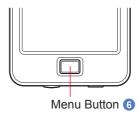

To Unlock


When the Menu Button 6 is pressed and held again, the screen is unlocked.

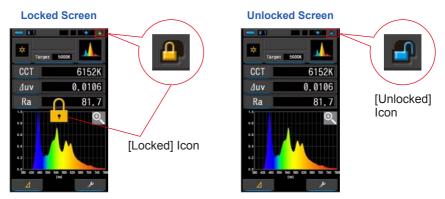


4. Basic Operations

4-1 Basic Measurement Flow

The basic operations and screens are as follows. Measurements and measurement changes are operated from the Measuring screen.

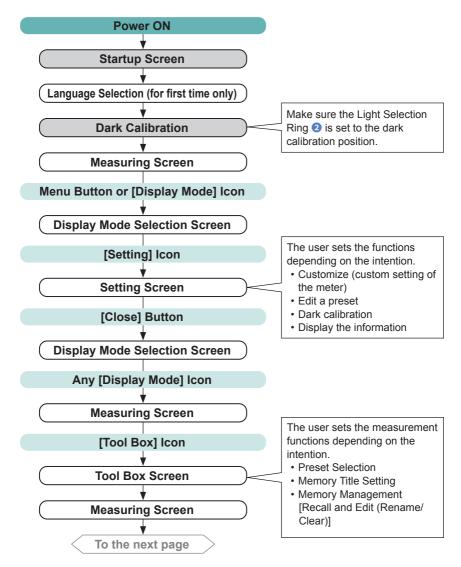

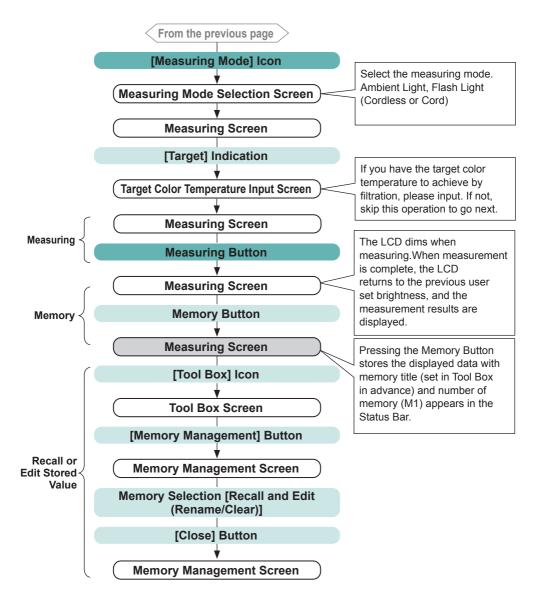


4-2 Selecting the Measuring Mode4-2-1 Matching Measuring Mode with Light Sources

Select the Measuring Mode to use.

NOTICE

If you change the Measuring Mode, the currently displayed measurement is cleared.

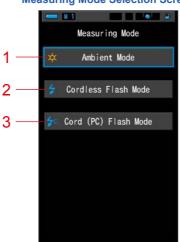


Measuring Mode Selection Screen

| No. | Measuring Mode | lcon | Description |
|-----|----------------------|------------|---|
| 1 | Ambient Light Mode | * | Measures continuous light such as sunlight, tungsten, fluorescent, and LED lights. (➡ P86) |
| 2 | Cordless Flash Mode | \$ | Detects flash light without meter-flash connection after Measuring Button pressed to arm meter (for 90 seconds) and flash fired separately. (+ P89) |
| 3 | Cord (PC) Flash Mode | ≱ c | Detects flash light with PC (synchro) cord meter-flash connection. (➡ P93) |




1. Touch the [Measuring Mode] icon in the upper left corner of the screen. The Measuring Mode Selection screen will be displayed.

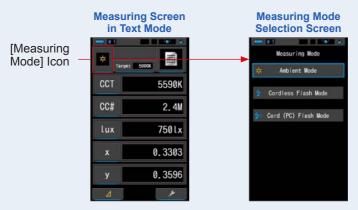

2. Touch an icon to select the Measuring mode.

Select the desired Measuring mode.

Making selection returns the display to previous Measuring screen using selected mode.

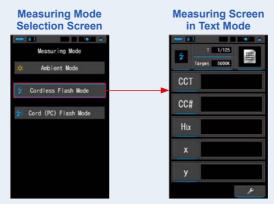


Ex.) Ambient Light Mode → Cordless Mode


- Ambient light includes continuous light sources such as natural light (sunlight), tungsten lamps, fluorescent lamps, LED lights, etc.
- Flash light includes brief and intense burst of light sources such as electronic flash units or flash bulbs.

4-2-2 Selecting the Shutter Speed (Flash Modes Only)

Set a shutter speed that is appropriate for the intended flash measurement.

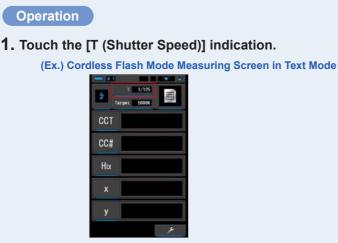

2. Select the desired shutter speed.

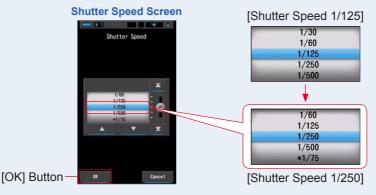

3. Touch the [OK] button.

Confirms the settings, and returns to the previous Measuring screen. To cancel the setting, touch the [Cancel] button.

The shutter speed is set.





Shutter speeds can be selected by the item [Shutter Speed Step] in page 1 of "Customize" in the Setting screen.

You can choose 1 step, 1/3 step, and 1/2 steps. (
P129)

Shutter Speed Selections

| 1 Step | 4/0.04 | 4/2 01 |
|-------------------|----------|----------|
| (Factory default) | 1/3 Step | 1/2 Step |
| 1s | 1s | 1s |
| 1/2 | 0.8 | 0.7 |
| 1/4 | 0.6 | 1/2 |
| 1/8 | 0.5 | 1/3 |
| 1/15 | 0.4 | 1/4 |
| 1/30 | 0.3 | 1/6 |
| 1/60 | 1/4 | 1/8 |
| 1/125 | 1/5 | 1/10 |
| 1/250 | 1/6 | 1/15 |
| 1/500 | 1/8 | 1/20 |
| *1/75 | 1/10 | 1/30 |
| *1/80 | 1/13 | 1/45 |
| *1/90 | 1/15 | 1/60 |
| *1/100 | 1/20 | 1/90 |
| *1/200 | 1/25 | 1/125 |
| *1/400 | 1/30 | 1/180 |
| | 1/40 | 1/250 |
| | 1/50 | 1/350 |
| | 1/60 | 1/500 |
| | 1/80 | *1/75 |
| | 1/100 | *1/80 |
| | 1/125 | *1/90 |
| | 1/160 | *1/100 |
| | 1/200 | *1/200 |
| | 1/250 | *1/400 |
| | 1/320 | |
| | 1/400 | |
| | 1/500 | |
| | *1/75 | |
| | *1/80 | |
| | *1/90 | |
| | *1/100 | |
| | *1/200 | |
| | *1/400 | |

* Special shutter speed setting.



Measuring data will be erased when the shutter speed setting is changed.

4-3 Setting the Indication and Items in Measuring Screen

4-3-1 Setting Target Color temperature

Use this setting to establish a "target" color temperature for camera and light source filtration selection.

The target color temperature is displayed in the upper central part of the Measurement screen.

Operation

1. Touch the [Target] indication on the Measurement screen.



(Ex.) Measuring Screen in Text Mode

2. Enter the Target color temperature value.

The current target color temperature value is displayed in the left side, and input color temperature value is displayed in the right side.



Target CCT Input Screen

3. Touch the [OK] button.

Confirms input value and returns to previous Measurement screen.

To cancel the setting, touch the [Cancel] button.

The target color temperature is set.



- Set the meter's target color temperature to the same color temperature set on your camera for manual white balance. Some digital cameras have the recommended color temperature for true color reproduction. For details, please refer to your digital camera's operating manual.
- You can set the color temperature from 2,500K to 10,000K in steps of 10K.
- When you frequently use multiple reference color temperatures, use preset for convenience. (
 P104)

(⇒ P43)

Measurement Screen CRI Display

85.3

¢

Ra

4-3-2 Customizing Display Items in the Measuring Screen

You can customize displayed information to see exactly what you need in single view.

Operation

1. Touch the [Display Item] indication on the Measuring screen. The Display item library screen will be displayed. (⇒ P35)

Measuring Screen

Spectrum Display

5614K

0.0030

85.3

CCT

Auv

Ra

(⇒P37)

2. Select the items to be displayed.

Selected items and the values will be displayed.



Display Item List

Description No. Indication **Display Item Name Color Temperature** 1 CCT Displays correlated color temperature. Display **Color Temperature** 2 ∆uv Displays deviation from the black-body radiation. Deviation lux. fc 3 Illuminance * Displays illuminance in lux or foot-candle. Hix, Hfc Exposure * 4 Displays exposure in lux-second or foot-candle-second. **CC Index** 5 CCi Displays the CC correction value in CC index. Correction CC Filter Displays the CC corrected value in total value of CC 6 CC# Number filter number CC Camera CCcf Displays the CC correction value in the compensation Filter Correction 7 filter name. The filter brand is selected in the **CC** Liahtina Measuring screens and Setting Mode. CClf Filter Correction I B Index 8 LBi Displays the LB correction value in LB index. Correction LB Camera Displays the LB correction value in the compensation LBcf Filter Correction filter name. The filter brand is selected in the 9 LB Lighting Measuring screens and "Customize" in the Setting LBlf **Filter Correction** screen.

* Models sold in some countries do not display illuminance and exposure in "fc (fc·s)" due to legal restrictions.

| No. | Indication | Display Item Name | Description |
|-----|------------|------------------------------|---|
| 10 | Rf | Fidelity Index | Displays the Fidelity index of TM-30 in the value from 0 to 100. |
| 11 | Rg | Gamut Index | Displays the Gamut index of TM-30 in the value from 0 to 200. |
| 12 | SSIt | SSI Tungsten | Displays the SSI index in the value from 0 to 100 in comparison with CIE Tungsten (3200K). |
| 13 | SSId | SSI Daylight | Displays the SSI index in the value from 0 to 100 in comparison with CIE D55 (5500K). |
| 14 | SSI1 | SSI #1 | Displays the SSI index in the value from 0 to 100 in comparison with #1 selected light source (yellow graph) in SSI mode. |
| 15 | SSI2 | SSI #2 | Displays the SSI index in the value from 0 to 100 in comparison with #2 selected light source (red graph) in SSI mode. |
| 16 | TLCI | TLCI | Displays the TLCI index in the value from 0 to 100. |
| 17 | TLMF | TLMF | Displays the TLMF index in the value from 0 to 100 in comparison with selected memorized value. |
| 18 | X | Chromaticity coordinate x | CIE1931 Chromaticity coordinate x |
| 19 | У | Chromaticity coordinate y | CIE1931 Chromaticity coordinate y |
| 20 | Hue | Hue | Displays the color (i.e. red, green, blue) in the value from 0 to 359 degrees. |
| 21 | Sat | Saturation | Dispays the saturation in the value from 0 to 100. |
| 22 | Ra | Average CRI | Displays the average value of CRI R1 to R8 in the value of from 0 to 100. |
| 23 | R1 ~ R15 | CRI Number | Displays Individual CRI number from R1 to R15 in the value of from 0 to 100. |

4-4 Selecting the Display Mode

Touching an icon on the Display Mode Selection screen displays lighting information in different ways to suit your needs.

* Pressing the Menu Button 6 on the meter returns to the Display Mode Selection screen.

Display Mode Selection Screen



| 1 Te | xt |
|------------|----------|
| - 100 * | P1 0 0 0 |
| CCT | 5614K |
| CC# | 0.5M |
| lux | 216lx |
| x | 0.3298 |
| у | 0.3447 |
| 4 | * |

4 CRI



7 SSI



10 Multi Lights

| | 2011 | 0 |
|-------|------|-------|
| | CCT | 4768K |
| A 🔹 🧕 | LBI | |
| | CCi | 0,6M |
| | CCT | 51060 |
| B * • | LBi | _ |
| | CCi | 0,44 |
| | CCT | 49968 |
| C * • | LBI | |
| | CCi | 0, 5M |
| | CCT | 5197K |
| D 🔹 🔹 | LBI | |
| - | 001 | 0, 3M |
| Clear | | |



5 CRI Comparison



8 TLCI/TLMF



11 White Balance Correction

| - 11 | | | |
|------|----------|---|-------|
| LBi | Tarpos 🔛 | | 8MK-1 |
| CCi | | | 1.8G |
| в | | | |
| 4 | 5.04° | - | |



6 TM-30



9 Filter

| Tare | ex 500X |
|-------|--------------------------------------|
| CCT | 5505K |
| LBi | 18MK-1 |
| LBtf | |
| CCi | 1.4M |
| CClf | L249 1/4 MINUS G L279 1/8 MINUS G |
| Brand | LEE |
| 4 | 1 |

12 Setting

| - 10 P1 61 41 |
|---|
| 🚮 Setting 🛛 🔹 • |
| Custonize |
| o₀ Shutter Speed Step |
| o, LB Step |
| Camera Filter Brand |
| o _o Lighting Filter Brand |
| ooNhite Balance Step BL:5.0MP / CH:2.5 |
| on Unit of Illuminance Ix(Ixe) + fe(fee) |
| o₀ Color Space(Hue/Sat) HSI / K65 |
| |
| Statement Statement |

Display Mode Icons List

| No. | lcon | Display Mode Name | Description |
|-----|-------------------|------------------------------------|--|
| 1 | Text | [Text] Icon | Displays user-selected 5 items in numeric values. (➡ P34) |
| 2 | Spectrum | [Spectrum] Icon | Displays 3 user-selected values and spectrum distribution graph. (➡ P37) |
| 3 | Spectrum Comp. | [Spectrum Comparison] Icon | Compares the current measurement value and up to 2 memorized values in the spectrum distribution graph. (➡ P39) |
| 4 | CRI | [CRI] Icon | Displays the average CRI (Ra) or individual CRI (R1 ~ R15) numerically. Each CRI is displayed in a graph. (➡ P43) |
| 5 | CRI Comp. | [CRI Comparison] Icon | Compares the current measurement value and memoried value to show the color temperature and average CRI (Ra). Also, individual CRI (R1 to R15) is displayed in a graph. (➡ P45) |
| 6 | TM-30 | [TM-30] Icon | Displays four current measurement values (Rf, Rg, CCT, \triangle uv) and color vector graphic. (\Rightarrow P49) |
| 7 | SSI | [SSI] Icon | Compares the current measurement value and up to 2 reference values (color temperature and $ ightarrow$ uv), and displays SSI index with the SSI spectrum graph. (\Rightarrow P51) |
| 8 | TLCI/TLMF | [TLCI/TLMF] Icon | Displays the current measurement values and memorized values (in color temperature and |
| 9 | Filter | [Filter] Icon | Displays correction values and camera filter names or lighting filter names required to adjust measured light source to target color temperature. (P66) |
| 10 | Multi Lights | [Multi Lights] Icon | Displays and compares up to four measurement values on the same screen, Displays the correction value from the selected measurement value. (➡P74) |
| 11 | WB Corr. | [White Balance Correction] Icon | Displays correction values in LB index and CC index between the current measurement value and the target color temperature in a white balance graph. (➡ P81) |
| 12 | Setting | [Setting] Icon | Displays Setting screen. (✦P83) |

* 1 ~ 11 are the Measuring screen.




1. Touch the [Display Mode] icon on the Measuring screen or press Menu Button ⁽³⁾ on the meter.


The Display Mode Selection screen will be displayed. (⇒ P30)

Display modes from No.1 to 11 are for measurement. Display mode No.12 is for settings.

2. Touch a desired Display Mode icon to display.


The Measuring screen in selected Display Mode appears on the screen.

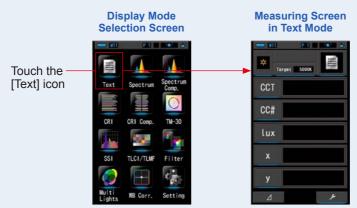

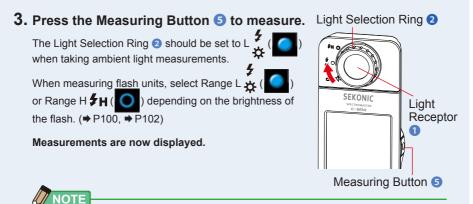

- To measure the color temperature of a light source properly, point Light Receptor 1 directly at light source during reading.
- Measurements and display will take longer in light levels below 30lx. The LCD illumination will normally switch off during measurements to avoid influence to measurements.

4. Measurement result appears on the Measuring screen (Text Mode).

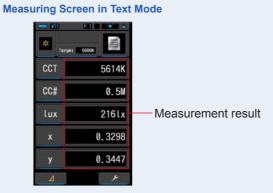


5. Memorize the measurement results.

To record measurements, press Memory Button 🥑 . (> P107)

4-4-1 Displaying in Text [Text] Mode

Displays five user-selected items in numeric value.

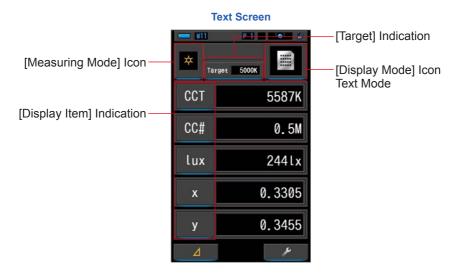


Operation

- Touch the [Text] icon on the Display Mode Selection screen. A Text screen will be displayed. (⇒ P30)
- **2.** Touch the [Measuring Mode] icon.

The Measuring Mode Selection screen will be displayed. Select the desired measuring mode to use. (\Rightarrow P22)

 3. Touch the [Target] indication.



Target CCT Input screen will be displayed. (⇒ P26) Set the desired color temperature number.

4. Touch the [Display Item] indication to change.


The Display Item Library screen will be displayed.

The currently selected display item will be encircled in blue.

5. Touch the desired Display Item indication and [OK] button.

The currently selected display item will be encircled in blue.

Pressing [OK] button confirms the settings, and returns to the Measuring screen. To cancel the setting, touch the [Cancel] button.

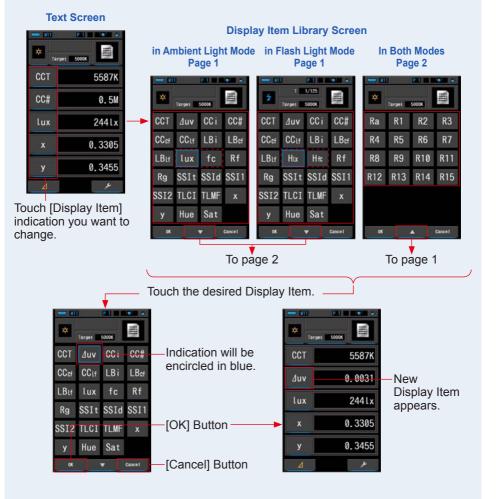

* Models sold in some countries do not display "fc (fc·s)" due to legal restrictions.

It may take longer time in case of taking measurement under low light (under 30lx).

It is not defect that LCD backlight becomes darker while taking measurement to avoid any influence.


 When using the Hue & Saturation function, it is possible for the hue value to turn from white text to red text. This is an indication that the saturation of the light measured is too low for an accurate hue measurement. You will find this if a light has a saturation below 30%.

7. Memorize the measurement results.

To record measurements, press Memory Button ⑦. (⇒ P107)

4-4-2 Displaying in Spectrum Graph [Spectrum] Mode

Displays three user-selected values and spectral distribution graph.

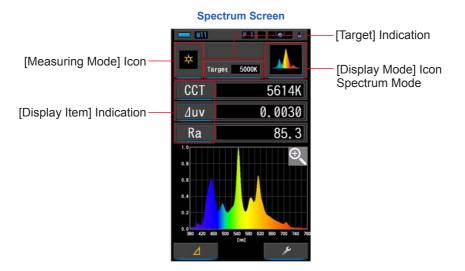

Operation

- 1. Touch the [Spectrum] icon on the Display Mode Selection screen. A spectrum distribution graph screen will be displayed. (⇒ P30)
- 2. Touch the [Measuring Mode] icon.


The Measuring Mode Selection screen will be displayed. Select the desired measuring mode to use. (\Rightarrow P22)

3. Touch the [Target] indication.

Target CCT Input screen will be displayed. (⇒ P26) Set the desired color temperature number.

4. Touch the [Display Item] indication to change.

The Display Item Library screen will be displayed. (⇒ P35) Touch the desired Display Item and [OK] button.

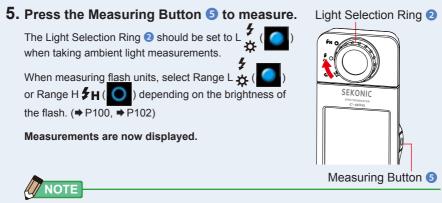


Measurements and display will take longer in light levels below 30lx. The LCD illumination will normally switch off during measurements to avoid influence to measurements.

6. Touch the [Magnifying Glass (+)] icon on the screen.

The spectrum distribution graph will be enlarged.

The enlarged graph is displayed on the whole screen (landscape).

To return to the Spectrum screen, touch the [Magnifying Glass (-)] icon on the enlarged spectrum distribution graph.

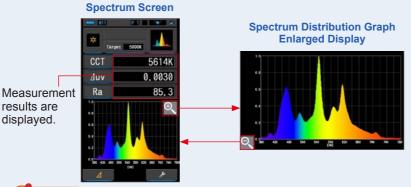

NOTICE

When the enlarged graph is displayed, measurement cannot be performed.


The maximum display value of the Y-axis can be selected by the item [Spectrum Y-axis Scale] icon in page 2 of Setting. (\Rightarrow P144)

7. Memorize the measurement results.

To record measurements, press Memory Button 🥑 . (
P107)

4-4-3 Displaying in Spectrum Comparison [Spectrum Comp.] Mode

Compares the current measurement value and up to 2 memorized values as yellow and/or red lines in the spectrum distribution graph.

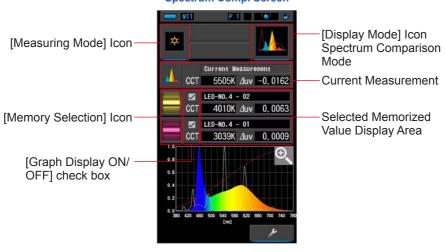

Spectrum Comp. Screen

Operation

1. Touch the [Spectrum Comp.] icon on the Display Mode Selection screen.

The Spectrum Comp. screen will be displayed. (⇒ P30)

2. Touch the [Measuring Mode] icon.


The Measuring Mode Selection screen will be displayed. Select the desired measuring mode to use. (+ P22) Light Selection Ring 2


3. Press the Measuring Button 5 to measure.

The Light Selection Ring 2 should be set to L when taking ambient light measurements.

When measuring flash units, select Range L (() or Range H () depending on the brightness of the flash. (\Rightarrow P100, \Rightarrow P102)

Measurements are now displayed.

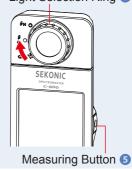

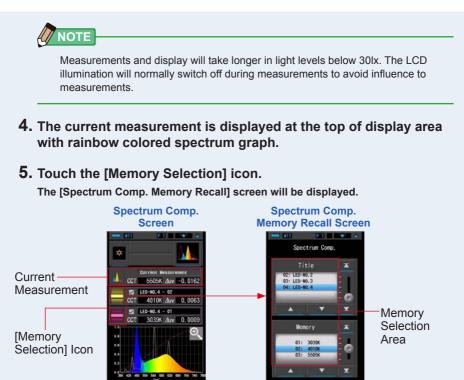

If no measurements have been memorized, the pop-up screen appears to indicate no memorized value.

Cancel




After you confirmed the message "No memorized value.", touch the [Close] button. Returns to the Spectrum Comp. screen.

After memorizing several values, select the memorized value again.

6. Select the desired memory data to compare the spectrum.

When a title is selected, the memory linked to the title will be displayed. Select a memorized reading for display and comparison.

To select a title and a memory, match them with the blue background positions.

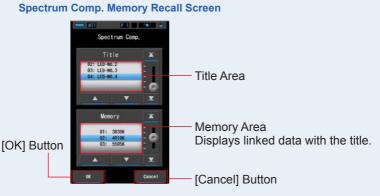

7. Touch the [OK] button.


Confirms the setting and returns to the Spectrum Comp. screen. To cancel the setting, touch the [Cancel] button.

8. The titles and measurements of the selected memories will be displayed on the Spectrum Comp. screen.

| Men | nory Title Dis | play | |
|-----|----------------|--------|------------------------------|
| | LED-N0.4 - 02 | | —Memory Title |
| CCT | 4010K ⊿uv | 0.0063 | —Memorized Measurement Value |

9. Line graphs will be displayed in the spectrum graph.

Touch the [Graph Display ON/OFF] check box to hide/show a line graph on the screen. * [☑] shows line. [□] hides line.

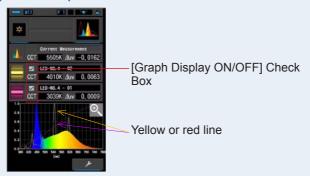


Spectrum Comp. Screen

10. Touch the [Magnifying Glass (+)] icon.

The spectrum comparison graph will be enlarged.

The enlarged graph is displayed on the whole screen (landscape).

To return to the Spectrum Comp. screen, touch the [Magnifying Glass (-)] icon on the enlarged spectrum comparison graph.

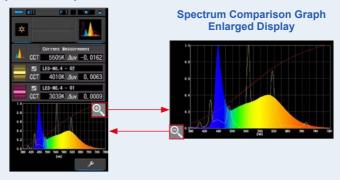

Spectrum Comp. Screen

NOTICE

When the enlarged graph is displayed, measurement cannot be performed.




- The maximum display value of the Y-axis can be selected in the [Spectrum Y Axis Scale] in "Customize" on page 2 of Setting screen. (+ P144)
- During Spectrum Comparison Mode, the Comparison Function is not available and [4] button will be hidden.

11. Memorize the measurement results.

To record only current measurements, press Memory Button ⑦. (⇒ P107)

4-4-4 Displaying in Color Rendering Index [CRI] Mode

Displays the selected average CRI (Ra) or individual CRI (R1 ~ R15) numerically. Each CRI is also displayed in a graph.

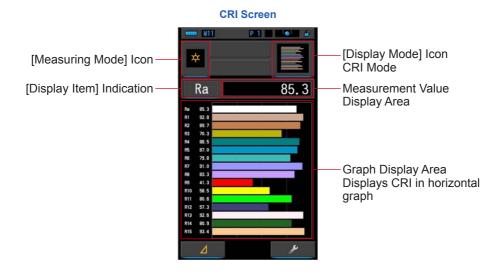

Operation

 Touch the [CRI] icon on the Display Mode Selection screen. The CRI screen will be displayed. (⇒ P30)

2. Touch the [Measuring Mode] icon.


The Measuring Mode Selection screen will be displayed. Select the desired Measuring mode to use. (\Rightarrow P22)

3. Press the Measuring Button 5 to measure.

The Light Selection Ring 2 should be set to L when taking ambient light measurements.

When measuring flash units, select Range L $\stackrel{\bullet}{\not{\star}}$ () or Range H $\stackrel{\bullet}{\not{\star}}$ H () depending on the brightness of the flash. (\Rightarrow P100, \Rightarrow P102)

Measurements are now displayed.

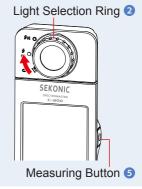



- Graph display areas Ra, R1 to R15 are always displayed.
- Measurements and display will take longer in light levels below 30lx. The LCD illumination will normally switch off during measurements to avoid influence to measurements.
- Ra is the avaraged value from R1 to R8 only. R9 to R15 are not included in the Ra.

4. Touch the [Display Item] indication to change.

The Display Item Library screen will be displayed.




5. Touch the desired Display Item.

Select the item to display above the graph. Indication will be encircled in blue.

6. Touch the [OK] button.

Confirms the setting and returns to the CRI screen.

To cancel the setting, touch the [Cancel] button.

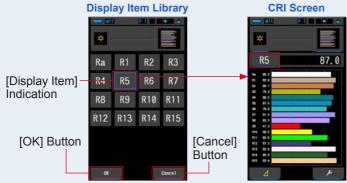


7. Memorize the measurement results.

To record only current measurements, press Memory Button 🥑 . (>P107)

4-4-5 Displaying in Color Rendering Index Comparison [CRI Comp.] Mode

Compares the current measurement value and memoried value to show the color temperature and average CRI (Ra). Also individual CRI (R1 to R15) is displayed in each graph.

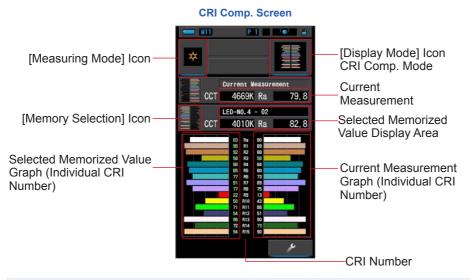

Operation

1. Touch the [CRI Comp.] icon on the Display Mode Selection screen.

The CRI Comp. screen will be displayed. (⇒ P30)

2. Touch the [Measuring Mode] icon.


The Measuring Mode Selection screen will be displayed. Select the desired measuring mode to use. (+ P22) Light Selection Ring 2

3. Press the Measuring Button **5** to measure.

The Light Selection Ring 2 should be set to L when taking ambient light measurements.

When measuring flash units, select Range L $\overset{\bullet}{\not{H}}$ () or Range H $\overset{\bullet}{\not{F}}$ () depending on the brightness of the flash. (\Rightarrow P100, \Rightarrow P102)

Measurements are now displayed.

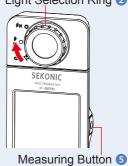




- Graph display areas Ra, R1 to R15 are always displayed.
- Measurements and display will take longer in light levels below 30lx. The LCD illumination will normally switch off during measurements to avoid influence to measurements.
- Ra is the avaraged value from R1 to R8 only. R9 to R15 are not included in the Ra.

4. Current measurement appears with the graph in the right side of display.


5. Touch the [Memory Selection] icon.

The [CRI Comp. Memory Recall] screen will be displayed.

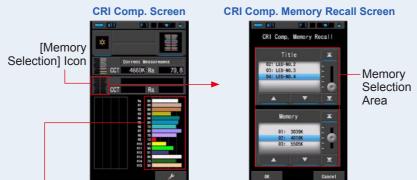

Current Measurement Graph (Individual CRI Number)

If no measurements have been memorized, the pop-up screen appears to indicate no memorized value.

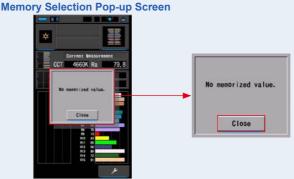


After you confirmed the message "No memorized value.", touch the [Close] button. Returns to the CRI Comp. screen.

After memorizing several values, select the memorized value again.

6. Select the desired memorized value to compare the CRI.

When a title is selected, the memory linked to the title will be displayed. Select a memorized reading for display and comparison.

To select a title and a memory, match them with the blue background positions.

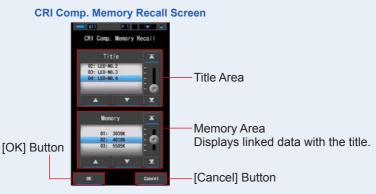

7. Touch the [OK] button.

Confirms the setting and returns to the CRI Comp. screen.

To cancel the setting, touch the [Cancel] button.


8. The titles and measurements of the selected memories will be displayed on the CRI Comp. screen.

Memory Title Display



9. Selected memorized value and graph are displayed on the CRI Comp. screen

Current measurement appears on the right side of graph, and selected memorized value appears on the left side of graph.

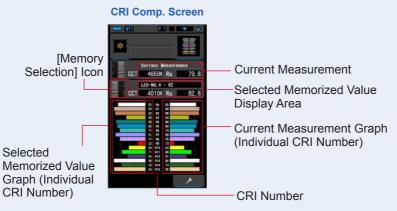


10. Memorize the measurement results.

To record only current measurements, press Memory Button 🥑 . (>P107)

4-4-6 Displaying in TM-30 [TM-30] Mode

Displays four current measurement values (Rf, Rg, CCT, \triangle uv) and color vector graphic.(\Rightarrow P188)

The C-800 with latest firmware shows TM-30-18.

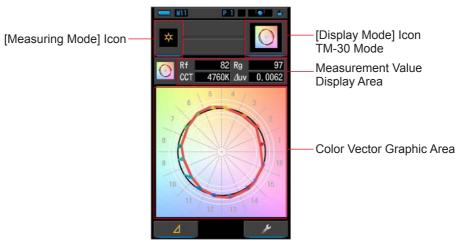

TM-30 Screen

Operation

1. Touch the [TM-30] icon on the Display Mode Selection screen. A TM-30 distribution graph screen will be displayed. (⇒ P30)

2. Touch the [Measuring Mode] icon.


The Measuring Mode Selection screen will be displayed. Select the desired measuring mode to use. (+ P22)

 
3. Press the Measuring Button **5** to measure.

The Light Selection Ring 2 should be set to L . (when taking ambient light measurements.

When measuring flash units, select Range L $\overset{\bullet}{\not{\star}}$ () or Range H $\overset{\bullet}{\not{\star}}$ H () depending on the brightness of the flash. (\Rightarrow P100. \Rightarrow P102)

Measurements are now displayed.

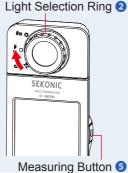



Measurements and display will take longer in light levels below 30lx. The LCD illumination will normally switch off during measurements to avoid influence to measurements.

4. Current measurements and color vector graphic are displayed.

Default Display Items are Rf, Rg and CCT, ightarrow uv.


Color vector graphic is the visual representation of hue and chroma shifts around the hue circle divided by 16.

Color vector graphic shows the current measurement in the red line.

The standard light source is displayed in black slid line, and arrow shows the difference for current measurement.

White circles with radius shows Rg80, 90, 110 and 120.

Numbers from 1 to 16 represent hue-angle bins divided by 16 in 22.5 degree increment, which assign from 1 of red to 16 of reddish purple.

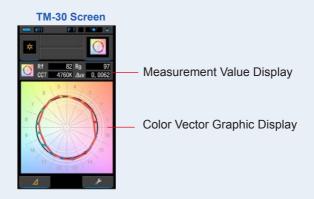


5. Memorize the measurement results.

To record measurements, press Memory Button ⑦. (⇒ P107)

4-4-7 Displaying in Spectral Similarity Index [SSI] Mode

Compares the current measurement value and up to 2 reference values (color temperature and \triangle uv), and displays SSI index with the SSI spectrum graph. Reference light source can be set in three ways from standard illuminant, color temperature input or memory recall. (\Rightarrow P188)

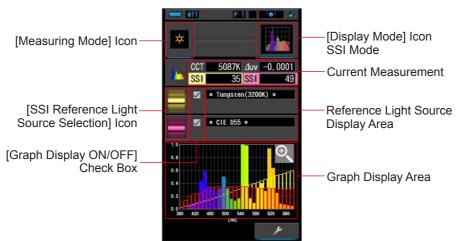

SSI Screen

Operation


 Touch the [SSI] icon on the Display Mode Selection screen. The SSI screen will be displayed. (⇒ P30)

 
2. Touch the [Measuring Mode] icon.

The Measuring Mode Selection screen will be displayed. Select the desired measuring mode to use. (+ P22)



Measurements are now displayed.

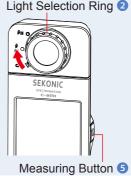



4. The current measurement is displayed in the graph display area.

5. Touch the [Select SSI Reference] icon.

The [Select SSI Reference Light] screen will be displayed.



Current Measurement Graph (SSI)

6. There are three ways to select the [Select SSI Reference Light].

Select the item to compare from three options; [Select SSI Standard Light Source], [Input SSI Color Temperature] and [SSI Memory Recall].



[Standard Light Source Selection]

You can select the reference light source from standard illuminants. There are [Tungsten 3200K] and supplementatry standard illuminant [CIE D55] as the SSI standard light source, [CIE A(2856K)] and [CIE D65] as CIE standard illuminant, and [CIE D50] and [CIE D75] as the CIE supplementary standard illuminant.

1. Touch the [Standard Light Source] indication on the Select SSI Reference Light screen.



The Select SSI Standard Light Source screen will be displayed.

2. Select the desired standard illuminant to compare.

To select the standard illuminant, match it with the blue background position.



3. Touch the [OK] button.

Confirms the setting and returns to the SSI screen.

To cancel the setting, touch the [Cancel] button.

4. The selected standard illuminant will be displayed in the reference light source display area on the SSI screen.

You can select up to two reference light sources.

Reference Light Source Display Area



5. SSI value of current measurement to compare with the reference light source will be displayed.

Current Measurement Display Area

6. Yellow and Red line graphs will be displayed in the SSI spectrum graph.

Touch the [Graph Display ON/OFF] check box to hide/show a line graph on the screen. * [☑] shows line. [□] hides line.




7. Touch the [Magnifying Glass (+)] icon.

The SSI spectrum graph will be enlarged.

The enlarged graph is displayed on the whole screen (landscape).

To return to the SSI screen, touch the [Magnifying Glass (-)] icon on the enlarged SSI spectrum graph.

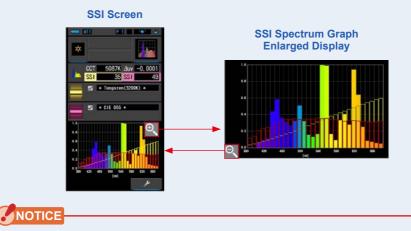

When the enlarged graph is displayed, measurement cannot be performed.


8. Memorize the measurement results.

To record current measurements, press Memory Button 🥑 . (>P107)

[Color Temperature Input]

Input the color temperature in 100K step from 2500K to 7500K.

1. Touch the [Input Color Temperature] indication on the Select SSI Reference Light screen.

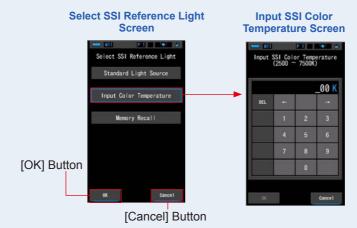

The Input SSI Color Temperature screen will be displayed.

2. Input the desired color temperature to compare.


Input value is displayed in the color temperature display area.



3. Touch the [OK] button.


Confirms the setting and returns to the SSI screen.

To cancel the setting, touch the [Cancel] button.

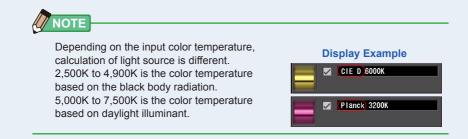

4. The input color temperature will be displayed in the reference light source display area on the SSI screen.

 You can select up to two reference light sources.



5. SSI value of current measurement to compare with the reference light source will be displayed.

| (| Current Measurement Display Area | | | | | | |
|---|----------------------------------|-----|-------|-----|---------|---------------------|--|
| | 1. | CCT | 5087K | ∆uv | -0.0001 | Current Measurement | |
| | | SST | 48 | SSI | 37 | —SSI Value | |

6. Yellow and Red line graphs will be displayed in the SSI spectrum graph.

Touch the [Graph Display ON/OFF] check box to hide/show a line graph on the screen. * $[\square]$ shows line. $[\square]$ hides line.




7. Touch the [Magnifying Glass (+)] icon.

The SSI spectrum graph will be enlarged.

The enlarged graph is displayed on the whole screen (landscape).

To return to the SSI screen, touch the [Magnifying Glass (-)] icon on the enlarged SSI spectrum graph.

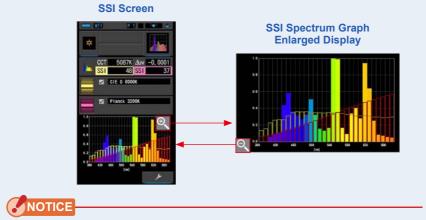

When the enlarged graph is displayed, measurement cannot be performed.

8. Memorize the measurement results.


To record current measurements, press Memory Button 🥑 . (>P107)

[Memory Recall Selection]

You can select the reference light source from memory recall.

Memorize the measurements to be used as reference light source in advance, and compare the current measurement with memorized light source to see the difference in quality.

1. Touch the [Memory Recall] indication on the Select SSI Reference Light screen.

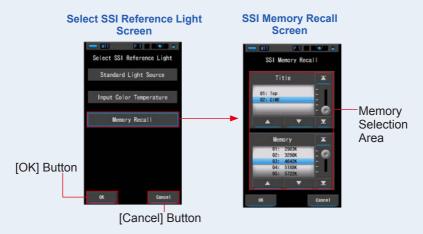


The SSI Memory Recall screen will be displayed.

2. Select the desired memory data to compare.

When a title is selected, the memory linked to the title will be displayed.

Select a memorized reading for display and comparison.

To select a title and a memory, match them with the blue background positions.

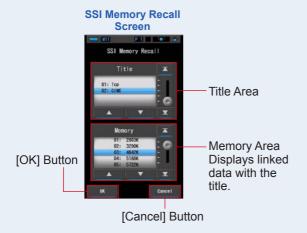

3. Touch the [OK] button.

Confirms the setting and returns to the SSI screen.

To cancel the setting, touch the [Cancel] button.

4. The selected memorized value will be displayed in the reference light source display area on SSI screen.

You can select up to two reference light sources.

Reference Light Source Display Area




5. SSI value of current measurement to compare with the reference light source will be displayed.

Current Measurement Display Area



6. Yellow and Red line graphs will be displayed in the SSI spectrum graph.

Touch the [Graph Display ON/OFF] check box to hide/show a line graph on the screen. * $[\square]$ shows line. $[\square]$ hides line.

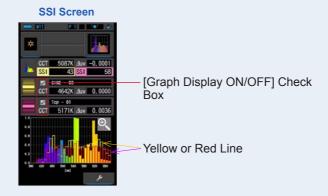

7. Touch the [Magnifying Glass (+)] icon.

The SSI spectrum graph will be enlarged.

The enlarged graph is displayed on the whole screen (landscape).

To return to the SSI screen, touch the [Magnifying Glass (-)] icon on the enlarged SSI spectrum graph.




When the enlarged graph is displayed, measurement cannot be performed.

8. Memorize the measurement results.

To record current measurements, press Memory Button 🥑 . (> P107)

4-4-8 Displaying in TLCI or TLMF [TLCI/TLMF] Mode

Displays the current measurement values and memorized values (in color temperature and ightarrow uv), TLCI and TLMF with spectrum graph. TLCI stands for Television Lighting Consistency Index. TLMF stands for Television Luminaire Matching Factor. (\Rightarrow P188)

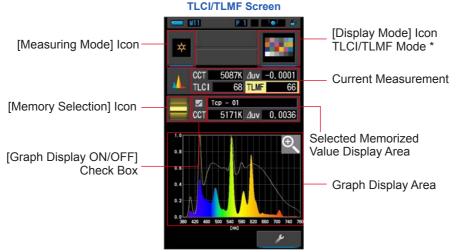

* X-Rite ColorChecker is used for TLCI/TLMF mode icon

Operation

1. Touch the [TLCI/TLMF] icon on the Display Mode Selection screen.

The TLCI/TLMF screen will be displayed. (⇒ P30)

2. Touch the [Measuring Mode] icon.


The Measuring Mode Selection screen will be displayed. Select the desired measuring mode to use. (+ P22) Light Selection Ring 2

 
3. Press the Measuring Button 5 to measure.

The Light Selection Ring 2 should be set to L when taking ambient light measurements.

When measuring flash units, select Range L $\underset{\leftarrow}{\leftarrow}$ () or Range H $\underset{\leftarrow}{\neq}$ H () depending on the brightness of the flash. (\Rightarrow P100, \Rightarrow P102)

Measurements are now displayed.

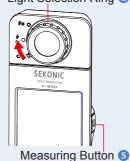




4. Current measurement appears with the spectrum graph.


5. Touch the [Memory Selection] icon.

The [TLMF Memory Recall] screen will be displayed.

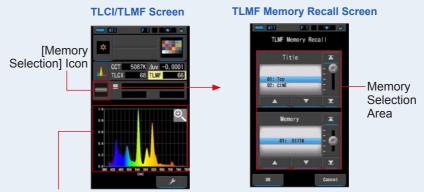

Current measurement in graph

If no measurements have been memorized, the pop-up screen appears to indicate no memorized value.

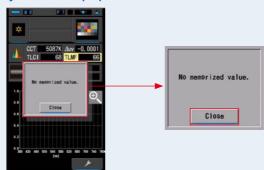

After you confirmed the message "No memorized value.", touch the [Close] button. Returns to the TLCI/TLMF screen.


After memorizing several values, select the memorized value again.

Memory Selection Pop-up Screen

6. Select the desired memorized value to compare.

When a title is selected, the memory linked to the title will be displayed. Select a memorized reading for display and comparison.

To select a title and a memory, match them with the blue background positions.

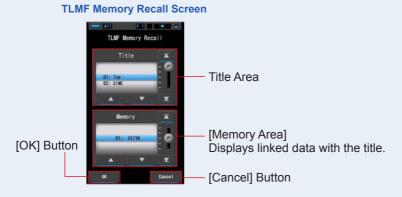

7. Touch the [OK] button.

Confirms the setting and returns to the TLCI/TLMF screen.

To cancel the setting, touch the [Cancel] button.

8. The title of selected memory will be displayed on the TLCI/TLMF screen.




9. TLMF index is displayed to compare with the selected memorized value.

Current Measurement Display Area



10. Line graphs will be displayed in the TLCI/TLMF graph.

Touch the [Graph Display ON/OFF] check box to hide/show a line graph on the screen. * $[\square]$ shows line. $[\square]$ hides line.

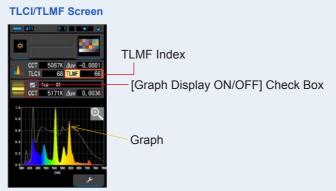


11. Touch the [Magnifying Glass (+)] icon.

The spectrum comparison graph will be enlarged.

The enlarged graph is displayed on the whole screen (landscape).

To return to the TLCI/TLMF screen, touch the [Magnifying Glass (-)] icon on the enlarged spectrum comparison graph.

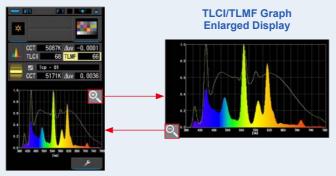

TLCI/TLMF Screen

NOTICE

When the enlarged graph is displayed, measurement cannot be performed.

12. Memorize the measurement results.


To record current measurements, press Memory Button 🥑 . (>P107)

4-4-9 Displaying in Filter [Filter] Mode

Displays correction values and camera filter names or lighting filter names required to adjust measured light source to target color temperature. You can select either [Lighting Filter] or [Camera Filter].

[Lighting Filter]

Displays correction values and lighting filter names required to adjust measured light source to target color temperature. You can select filter brand on this screen or in Setting screen (LEE, ROSCO E-COLOUR+ or CINEGEL).

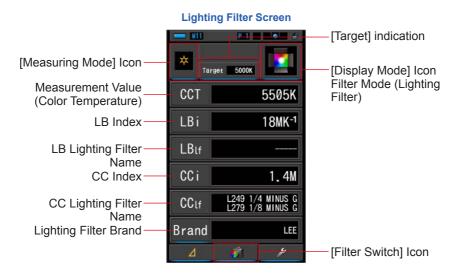


Operation

1. Touch the [Filter] icon on the Display Mode Selection screen. The Lighting Filter or Camera Filter screen will be displayed. (⇒ P30)

2. Set the Filter mode to use.

The Camera Filter screen and Lighting Filter screen can be switched by toggling the [Filter Switch] icon.

When the current screen shows Camera Filter screen, touch the [Filter Switch] icon to display the Lighting Filter screen.

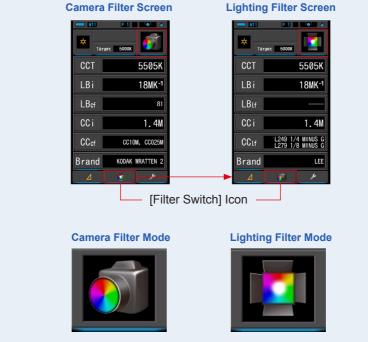

Touch the [Measuring Mode] icon. The Measuring Mode Selection screen will be displayed. Select the desired measuring mode to use. (⇒ P22)

4. Touch the [Target] indication.

Target CCT Input screen will be displayed. (⇒ P26) Set the desired color temperature number.

5. Touch the [Brand] indication. The Lighting Filter Brand Selection screen is displayed.

Select the filter brand to use.

Filtration is available in LEE, ROSCO CINEGEL or ROSCO E-COLOUR+.

The meter will display the brand filter number and generic filter value for both LB (CTO,



The lighting filter brand can also be selected in [Lighting Filter Brand] in [Customize] of [Setting] mode on page 1. (+ P136)

6. Touch the [OK] button.

Confirms the setting and returns to the Lighting Filter screen.

To cancel the setting, touch the [Cancel] button.


7. Press the Measuring Button **5** to measure.

The Light Selection Ring 2 should be set to L when taking ambient light measurements.

When measuring flash units, select Range L

or Range H \clubsuit () depending on the brightness of the flash. (\Rightarrow P100, \Rightarrow P102)

Measurements are now displayed.

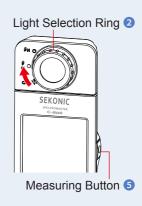



Measurements and display will take longer in light levels below 30lx. The LCD illumination will normally switch off during measurements to avoid influence to measurements.

8. Memorize the measurement results.

To record measurements, press Memory Button ②. (⇒ P107)




LBi (LB index) is the correction value between target color temperature and actual measured color temperature. CCi (CC index) and CC# (CC filter number) are the values to correct a difference from black body radiation. In the past years when film mode is available (such as C-700, C-500 and other traditional photographic color meters), LBi, CCi or CC# can be correlated with actual lighting filter or camera filter number (LBIf, LBcf, CCIf or CCcf). However, digital mode or industrial spectrometer, LBi, CCi or CC# has no more correlation with actual lighting filter or camera filter number (LBIf, LBcf, CCIf or CCcf). (>P189)

[Camera Filter]

Displays correction values and camera filter names required to adjust measured light source to target light source.

You can select filter brand on this screen or in Setting screen. (Kodak WRATTEN 2,FUJIFILM or LEE).

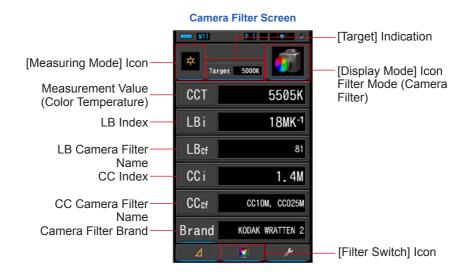


Operation

 Touch the [Filter] icon on the Display Mode Selection screen. The Camera Filter or Lighting Filter screen will be displayed. (⇒ P30)

2. Set the Filter mode to use.

The Camera Filter screen and Lighting Filter screen can be switched by toggling the [Filter Switch] icon.

When the current screen shows Lighting Filter screen, touch the [Filter Switch] icon to display the Camera Filter screen.

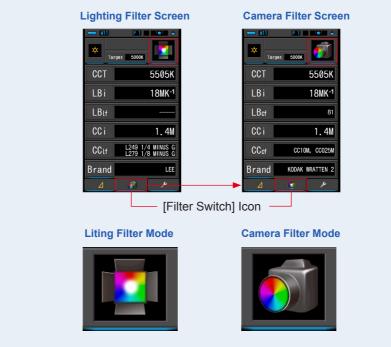

3. Touch the [Measuring Mode] icon. The Measuring Mode Selection screen will be displayed. Select the desired measuring mode to use. (⇒ P22)

4. Touch the [Target] indication.

Target CCT Input screen will be displayed. (⇒ P26) Set the desired color temperature number.

5. Touch the [Brand] indication.

The Camera Filter Brand Selection screen is displayed.

Select the filter brand to use.

Filtration is available in KODAK WRATTEN 2, FUJIFILM or LEE.



The camera filter brand can also be selected in [Camera Filter Brand] in [Customize] of [Setting] mode on page 1.(➡ P134)

6. Touch the [OK] button.

Confirms the setting and returns to the Camera Filter screen.

To cancel the setting, touch the [Cancel] button.

7. Press the Measuring Button 5 to measure.

The Light Selection Ring 2 should be set to L * (when taking ambient light measurements.

When measuring flash units, select Range L $\frac{1}{44}$ () or Range H $\frac{1}{44}$ H () depending on the brightness of the flash. (\Rightarrow P100, \Rightarrow P102)

Measurements are now displayed.





Measurements and display will take longer in light levels below 30lx. The LCD illumination will normally switch off during measurements to avoid influence to measurements.

8. Memorize the measurement results.


To record measurements, press Memory Button ⑦. (⇒ P107)



LBi (LB index) is the correction value between target color temperature and actual measured color temperature. CCi (CC index) and CC# (CC filter number) are the values to correct a difference from black body radiation. In the past years when film mode is available (such as C-700, C-500 and other traditional photographic color meters), LBi, CCi or CC# can be correlated with actual lighting filter or camera filter number (LBIf, LBcf, CCIf or CCcf). However, digital mode or industrial spectrometer, LBi, CCi or CC# has no more correlation with actual lighting filter or camera filter number (LBIf, LBcf, CCIf or CCcf). (>P189)

4-4-10 Displaying to Compare Light Sources [Multi Lights] Mode

Displays and compares up to four measurement values on the same screen and displays the correction value from the selected measurement value.

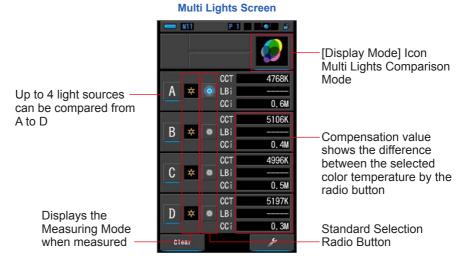


Operation


1. Touch the [Multi Lights] icon on the Display Mode Selection screen.

The Multi Lights screen will be displayed. (⇒ P30)

2. Touch the [A] button.

The Measuring screen of [A] will be displayed.

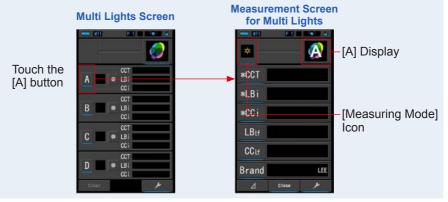

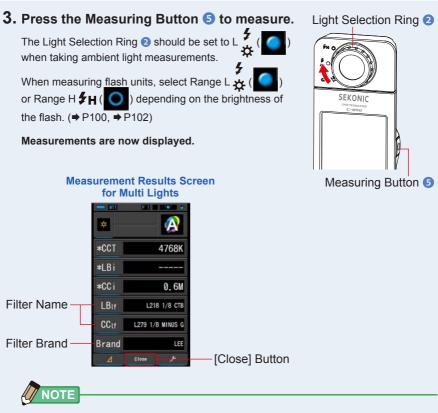

- Measurements and display will take longer in light levels below 30lx. The LCD illumination will normally switch off during measurements to avoid influence to measurements.
- When Memory button is pressed while in this Measurement Result Screen in Multi Lights, the value can be stored in memory.

4. Touch the [Display Item] indication to change.

The Display item library screen will be displayed.


The currently selected display item will be encircled in blue.



5. Touch the desired Display Item indication and [OK] button.

Confirms the settings, and returns to the Measuring screen. The first three selections marked by * will be displayed on the Multi Lights screen for this and subsequent measurements.

To return to the Measuring screen without changing, touch the [Cancel] button.

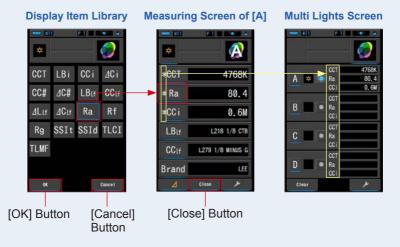

| |] |
|--------------|---|
| CC i | CC index number is to compensate the difference from the black body radiation. |
| ⊿Ci | ${\timescale}$ CC index number is the difference between standard light source and other light sources instead of difference from the black body radiation. |
| CC# | CC filter number is the CC correction value from black body radiation in total value of CC filter number. |
| <u>⊿C</u> # | ightarrow CC filter number is the CC correction value in camera filter name from the reference light source CC filter number to measured light source CC filter number. This is useful when the light source selected as standard cannot be filtered to correct (such as fluorescent lamp on the ceiling), and need to match all other light sources to the standard light source in CC filter. |
| LBlf | LB lighting filter is the LB correction value in the lighting filter name from the set color temperature (black body). |
| CClf | CC camera filter is the CC correction value in CC camera filter name from black body radiation. |
| <u>⊿Lı</u> f | ightarrow LB lighting filter is the LB correction value in LB lighting filter name from the reference light source LB filter number to measured light source LB filter number. This is useful when the light source selected as standard cannot be filtered to correct (such as fluorescent lamp on the ceiling), and need to match all other light sources to the standard light source in LB filter. |
| ₫Ċţf | ightarrow CC lighting filter is the CC correction value in CC lighting filter name from the reference light source CC filter number to measured light source CC filter number. This is useful when the light source selected as standard cannot be filtered to correct (such as fluorescent lamp on the ceiling), and need to match all other light sources to the standard light |

source in CC filter.

LBi (LB index) is the correction value between target color temperature and actual measured color temperature. CCi (CC index) and CC# (CC filter number) are the values to correct a difference from black body radiation. In the past years when film mode is available (such as C-700, C-500 and other traditional photographic color meters), LBi, CCi or CC# can be correlated with actual lighting filter or camera filter number (LBIf, LBcf, CCIf or CCcf). However, digital mode or industrial spectrometer, LBi, CCi or CC# has no more correlation with actual lighting filter or camera filter number (LBIf, LBcf, CCIf or CCcf). (➡ P189)

6. Touch the [Close] button.

The message "Set the measured value. Are you sure?" will be displayed.

Message Confirmation Screen M11 Set the measured value. Are you sure? [Yes] Button [No] Button

7. Touch the [Yes] button.

Returns to the Multi Lights screen. (Measurement results are reflected in the light source [A])

To return to the Multi Lights screen without reflecting the results, touch the [No] button.



Measurement results are displayed.

8. Measure other light sources for comparison.

Repeat steps 1 through 7 for display areas B, C and D. Up to 4 light sources can be compared.

- Touch the A, B, C or D button to confirm the measured values.
- Measurements and display will take longer in light levels below 30lx. The LCD illumination will normally switch off during measurements to avoid influence to measurements.
- When Memory button is pressed while in this Measurement Result Screen in Multi Lights, the value can be stored in memory.

9. Touch the radio button of the light source to set as the standard.

(: Selected, : Not selected)

Correction value of each other light sources (not selected as standard) are displayed in any value you selected on the Display Item screen.

If LB/CC index or LB/CC Light Filter is selected, the reference value area will display "-----". Also if any selected indication values in other light sources displays "-----", it means there is little value to correct.

CCT A 🗱 💿 D. 00.00 0, 6M 5106K B 🗱 80,4 Ra 0.4M 4996K C 🗱 Ra 81.0 0.5M CCT D # 80.6 Clear

Multi Lights Screen

Standard Selection Radio Button Selected Status

Corrected Value Display



To clear all of the measurement results and start a measurement comparison again, touch the [Clear] button.

The Multi Lights Clear Confirmation screen will be displayed.



[Clear] Button


Touch the [Yes] button.

All (A \sim D) will be deleted, and it will return to the Multi Lights screen. When the [No] button is touched, the display returns to the Multi Lights screen

without deleting the values.

4-4-11 Displaying in White Balance Correction Graph [WB Corr.] Mode

Displays the correction values in LB index and CC index between the current measurement value and the target color temperature in a white balance correction graph.

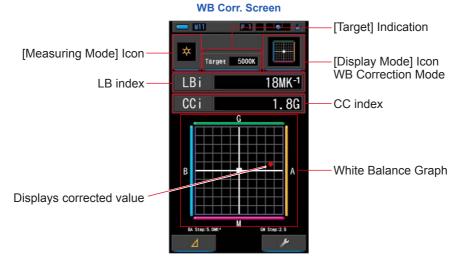

The value per grid can be changed in the [White Balance Step] of "Customize" in the Setting screen. Match the value with your camera. (>P138)


Operation

- Touch the [WB Corr.] icon on the Display Mode Selection screen. The WB Corr. screen will be displayed. (⇒ P30)
- 2. Touch the [Measuring Mode] icon. The Measuring Mode Selection screen will be displayed. Select the desired measuring mode to use. (⇒ P22)
- Touch the [Target] indication.
 Target CCT Input screen will be displayed. (⇒ P26) Set the desired color temperature number.



Measurements and display will take longer in light levels below 30lx. The LCD illumination will normally switch off during measurements to avoid influence to measurements.

5. The red point shows the correction value from the target color temperature.

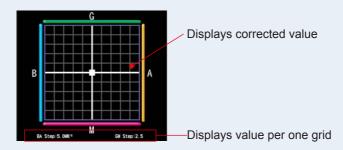

6. Memorize the measurement results.

To record measurements, press Memory Button ⑦. (⇒ P107)

4-4-12 Displaying Setting [Setting] Screen

 
Displays the settings. The contents can be changed according to usage. For more information about how to set and the details of specifications, see "7-1-1 Item List". (\Rightarrow P126)



* Models sold in some countries do not display illuminance and exposure in "fc (fc·s)" due to legal restrictions. In this case, Unit of Illuminance is not displayed.




Pressing the Menu Button **(5)** will exit the settings and return to the Display Mode Selection screen.





1. Touch the [Setting] icon on the Display Mode Selection screen. The Setting screen will be displayed.

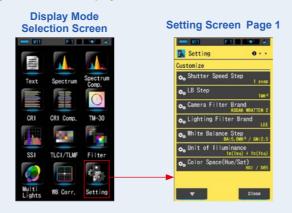

2. Settings show items in white letters and set values in yellow letters.



Touch each item to change the setting.

When the [Close] button is touched, the display returns to the Display Mode Selection screen. For more information about how to set and the details of specifications, see "7-1-1 Item List". (+ P126)

5. Measuring Light Sources [Measurement Screen]

5-1 Measurement Method


5-1-1 Balancing Color Temperatures of Light Sources

When multiple light sources are being used, the color temperature of each light source must be measured separately. If light sources with different color temperatures are used together in the same image, inconsistent color will be present in the shadows and highlights. Take a measurement by facing the Light Receptor 1 towards the light source to correctly measure the color temperature of the light source.

Light Receptor 1





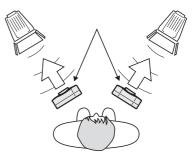

NOTICE

- To get accurate color from a light source, make sure not to get bounced or reflected light from a colored surface, or another light.
- Damage and dirt on the Light Receptor ① can affect the precision of the measurment. If the Light Receptor ① becomes dirty, wipe it with a dry, soft cloth. Never use organic solvents such as thinner or benzene.
- Be courteous to those around you that may be sensitive to flash, or bright light, please give them notice before taking a measurement.

5-2 Measurement in Ambient Light Mode

Select Ambient Light Mode when taking measurements of natural light (sunlight), and continuous light sources such as LED, tungsten lamps and fluorescent lights.

Do not look directly into sunlight or other strong light when measuring. It may cause severe eye damage or even loss of vision.

Operation


1. On the Measurement screen, touch the [Measuring Mode] icon and select the [Ambient Light Mode] icon on the Measuring Mode Selection screen.

Select the measuring mode. (⇒ P22)



2. Touch the [Target] indication.

Target CCT Input screen will be displayed. (⇒ P26) Set the color temperature.

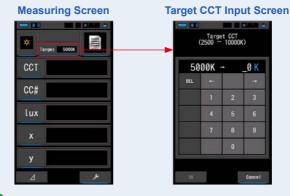

ΝΟΤΕ

If you are not using LB index/filter and CC index/filter values, you can omit this step.

You cannot set the target color temperature in "Spectrum Comp.", "CRI", "CRI Comp.", "SSI", "TLCI/TLMF" and "Multi Lights" Modes.



If necessary, you can select a previously created Preset value from Preset Selection in the Tool Box. (+ P156)



The selected value is indicated by the blue background.

The set content is displayed in yellow letter at the lower right hand corner of the button.

If no presets have been created, the Preset Selection will be grayed out and touching the button will not display the Preset Selection Display. You can omit this step if unnecessary.

3. Confirm the light measuring range.


When you return to the Measurement screen, make

sure to select Range L $\frac{4}{32}$ (\bigcirc).

be displayed.

4. Press the Measuring Button 5.

Measurements are now displayed. While the button is held, the meter measures continuously. When the button is released, the measurements will stop and the value at the time of release will

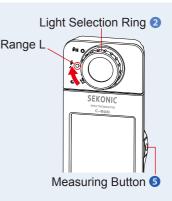

• [Over] or [Under] will be displayed if the light source illumination is too bright or not bright enough, or if the color temperature is out of the measurement range, when the Measuring Button is pressed.

In this case, adjust the brightness or color temperature of light source.

 Measurements and display will take longer in light levels below 30lx. The LCD illumination will normally switch off during measurements to avoid influence to measurements.

Measurement in Ambient Light Mode is complete.

5-3 Measurement in Cordless Flash Mode

Cordless Flash Mode is preferable when the flash to subject distance is too far to use a sync cord or when wireless measuring is desired.

In this measuring mode, the meter will go into measurement standby mode (for 90 seconds) to wait for a burst of flash to measure.




1. On the Measuring screen, touch the [Measuring Mode] icon and select the [Cordless Flash Mode] icon on the Measuring Mode Selection screen.

 
Select the measuring mode. (⇒ P22)



2. Touch the [Target] indication.

Target CCT Input screen will be displayed. (⇒ P26) Set the color temperature.

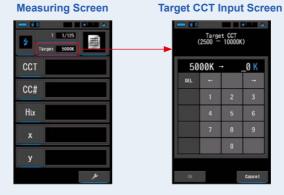




If you are not using LB index/filter and CC index/filter values, you can omit this step.

You cannot set the target color temperature in "Spectrum Comp.", "CRI", "CRI Comp.", "SSI", "TLCI/TLMF" and "Multi Lights" Modes.

3. Touch the [T (Shutter Speed)] indication on the Measuring screen.


Set the shutter speed used for measurements. (⇒ P24)

Match the blue background with the desired shutter speed.

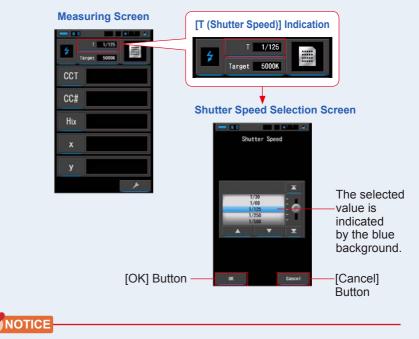

Select a shutter speed range that will synchronize with your camera and flash system.


4. Confirm the light measuring range.

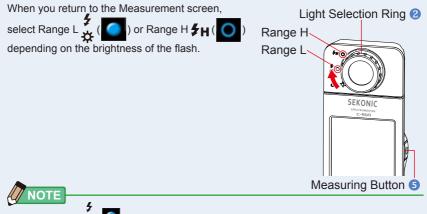

- Range L ☆ (): Select when measuring small and low power flash units (lower than 640lx⋅s), [Over] will appear if flash power is too high. Select Range H.
- Range H \$\mathcal{FH}(\logo): Select when measuring powerful flash units (brighter than 580lx·s), [Under] will appear if flash power is too low. Select Range L.

5. Press the Measuring Button 5.

 The meter will enter measurement standby mode. While the icon is blinking, manually trigger the flash. The [Measuring Mode] icon will blink for 90 seconds when measuring.



The display illumination will dim when the measuring button is pressed as the display illumination can affect the reading. This is normal.

When the flash light is fired, the measured value will be displayed for 3 seconds, and the display will return to measurement standby mode.

To cancel standby mode, touch the screen or press the Menu Button ${\color{black} 6}$.



When the icon stops blinking before triggering the flash, or when you want to take measurements again, press Measuring Button (5) again.

Measurement in Cordless Flash Mode is complete.

- Do not trigger flash while skin or other objects are in contact with the flash tube. Do not touch the flash tube after repeated flashes. (It may cause burns.)
- Do not trigger flash while near the eyes of people or animals. (It may temporarily affect vision.)
- The flash may be triggered suddenly. Because there is the possibility of burns or negative effects on vision, please handle with care.

NOTICE

- When using Cordless Flash Mode, the LCD screen backlight dims during measurement, and the LCD backlight is illuminated for only 3 seconds after measurement. To cancel standby mode, touch the screen or press the Menu Button ⁽³⁾.
- In case of the following, please follow "5-4 Measurement in Cord (PC) Flash Mode" (⇒ P93)
 - If the flash output power is too weak compared to the surrounding light, the meter may not detect the flash output.
 - Pulsed light sources such as fluorescent lights or special lighting could cause the meter to take cordless flash measurements in rare cases.
 - If the Light Receptor 1 detects a sudden and bright change in lighting intensity, the meter may mistakenly take a measurement.
 - Because the light radiated from a flash bulb gradually builds, the meter will not detect the light when used in Cordless Flash Mode.

- When using the meter in Cordless Flash Mode, it is possible to mount the meter to a light stand, tripod or similar support using the Tripod Socket 10.
- [Over] or [Under] will be displayed if the light source illumination is too bright or not bright enough, or if the color temperature is out of the measurement range, when the Measuring Button is pressed. In this case, adjust the brightness or color temperature of light source, or switch the light range. (> P100)

5-4 Measurement in Cord (PC) Flash Mode

Cord (PC) Flash Mode is preferable when lighting conditions prevent the use of cordless measurements or when certain types of equipment require a physical sync connection.

In Cord (PC) Flash Mode, the meter and flash unit are connected with a Sync Cord (sold separately).

- Do not handle this product with wet hands, or leave it in the rain or in a location where it may be splashed with water, submerged, or come into contact with moisture. There is a danger of electric shock in Cord (PC) Flash Mode. This may also result in damage to the product.
- When using flash with high voltage, there is a danger of electric shock if you touch the Sync Terminal (2). Handle the flash with care when using for measurement.

Operation


1. On the Measuring screen, touch the [Measuring Mode] icon and select the [Cord (PC) Flash Mode] icon on the Measuring Mode Selection screen.

Select the measuring mode. (⇒ P22)




2. Touch the [Target] indication.

Target CCT Input screen will be displayed. (⇒ P26) Set the color temperature.

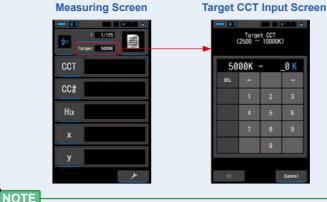

- If you are not using LB index/filter and CC index/filter values, you can omit this step.
- You cannot set the target color temperature in "Spectrum Comp.", "CRI", "CRI Comp.", "SSI", "TLCI/TLMF" and "Multi Lights" Modes.
- **3.** Connect the sync cord (sold separately) to the Sync Terminal **1** of the meter.

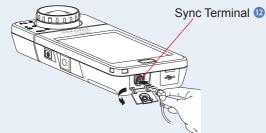


Depending on the flash equipment used, the flash may be triggered when the sync cord is connected to the Sync Terminal (2) or when operating the Power Button (3). Because there is the possibility of burns or negative effects on vision, please handle with care.



4. Touch the [T (Shutter Speed)] indication on the Measuring screen. Set the shutter speed used for measurements. (⇒ P24)

Match the blue background with the desired shutter speed.

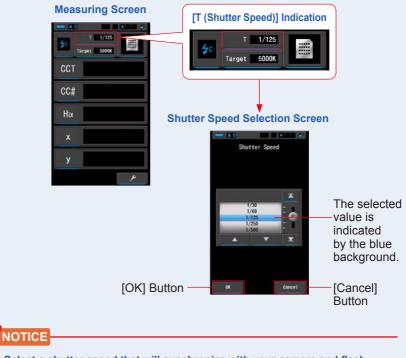

Select a shutter speed that will synchronize with your camera and flash system.

5. Confirm the light measuring range.



- Range L ☆ (): Select this when measuring small and low power flash units (lower than 640lx⋅s), [Over] will appear if flash power is too high. Select Range H.
- Range H **F**_H (○): Select when measuring powerful flash units (brighter than 580lx·s), [Under] will appear if flash power is too low. Select Range L.

6. Press the Measuring Button 5.

4

Measurement will be taken with flash, and the light source values will be displayed.

Because it affects measurement while measuring, the LCD backlight will dim. It is not a defect.

Measurement in Cord (PC) Flash Mode is complete.

AUTION

- Depending on the flash equipment used, the flash may be triggered when the sync cord is connected to the Sync Terminal (2) or when operating the Power Button (3). Because there is the possibility of burns or negative effects on vision, please handle with care.
- Do not trigger flash while skin or other objects are in contact with the flash tube. Do not touch the flash tube after continuous flashes. (It may cause burns.)
- Do not trigger flash while near the eyes of people or animals. (It may temporarily affect vision.)
- The flash may be triggered suddenly. Because there is the possibility of burns or negative effects on vision, please handle with care.

NOTICE

- If the triggering voltage of the flash used is extremely low, the flash may not trigger. In this care, use "5-3 Measurement in Cordless Flash Mode". (⇒ P89)
- When measuring flash bulbs, make sure the shutter sync speed is set to the proper synchronization range of your camera.

[Over] or [Under] will be displayed if the light source illumination is too bright or not bright enough, or if the color temperature is out of the measurement range, when the Measuring Button is pressed.

In this case, adjust the brightness or color temperature of light source, or switch the light range. (\Rightarrow P100)

5-5 Comparison Function (in Ambient Light Mode only)

Comparison Function is available in the following Display Modes with all Display Items (except LB, CC filter name).

Text, Spectrum, CRI, TM-30, Filter and WB Corr..

When you touch the [Delta] icon (\square), the [Delta] icon changes to (\square).

While this mode, the difference between standard value and currently being measured value is displayed as long as the Measuring Button **S** is pressed.

The reference value is the measurement value when the [Delta] icon is pressed.

When the Measuring Button **5** is released, the standard value is displayed as the last measurement.

The graphs in Spectrum, CRI, TM-30, and White Balance Correction modes show the standard value only even if Comparison Function is activated.



Operation

1. Press the Measuring Button 5 and start measurements.

The measurement results will be displayed.

Image: 1000K Image: 1000K CCT 5614K CC# 0.5M Lux 2161x x 0.3298 y 0.3447 A

Measuring Screen



Measurements and display will take longer in light levels below 30lx. The LCD illumination will normally switch off during measurements to avoid influence to measurements.

Measuring Screen

5614K

0.5M

216lx

0.3298

0.3447

CCT

CC#

lux

y

2. Touch the [Delta] (_____) icon.

The measurement results right before touching the icon will become the standard values.

The [Delta] icon will change to (



[Delta] Icon

3. Hold the Measuring Button 5.

While the [Delta] icon is activated (_____), the difference with the standard value is displayed as long as the Measuring Button (5) is pressed.

| Meas | Measuring Screen | | |
|-------|------------------|--|--|
| | | | |
| × Tai | rget 5000K | | |
| CCT | ⊿-648K | | |
| CC# | ⊿+1.3M | | |
| lux | ∆+87.0lx | | |
| x | ⊿+0.0176 | | |
| У | ∆+0.0218 | | |
| 4 | 1 | | |

4. Comparison Function is complete.

When the Measuring Button **5** is released, the standard value is displayed.

5. Touch the [Delta] (_____) icon.

The [Delta] icon will be deactivated (



- If the [Delta] icon shows _____, take a measurement first to activate Comparison function.
- The [Delta] icon (4) is deactivated when the power is turned OFF.
- When the [Delta] icon is displayed, the Memory Button 🥑 is disabled.

5-6 When [Over], [Under], [Filter N/A] or red letter is Displayed

When [Over] or [Under] is displayed, measurement cannot be taken. When [Filter N/A] is displayed, the indicated value is out of display range, but measurement can still be taken.

5-6-1 Display of [Over], [Under], [Filter N/A] or red letter

) to H 🗲 H (🌔

When [Over] is displayed:

If the indicated values are higher than the maximum measuring range, [Over] is displayed.

When measuring ambient light, decrease the brightness of the illumination.

When measuring flash light, turn the Light Selection Ring 2,

and change the range from L $\frac{1}{2}$

lower the flash output power.

When [Under] is displayed:

If the indicated values are lower than the minimum measuring range, [Under] is displayed.

When measuring ambient light, increase the brightness of the illumination.

When measuring flash light, turn the Light Selection Ring 2,

and change the range from H f () to L f (

raise the flash output power.

When [Filter N/A] is displayed:

If [Filter N/A] appears in the filter number indication, it is out of display range (combination) of filter number.

 
Take a new measurement after changing the target color temperature.

 
When the value of Hue is displayed in red letter:

When using the Hue & Saturation function, it is possible for the hue value to turn from white text to red text. This is an indication that the saturation of the light measured is too low for an accurate hue measurement. You will find this if a light has a saturation below 30%.



Measurements and display will take longer in light levels below 30lx. The LCD illumination will normally switch off during measurements to avoid influence to measurements.







| Display range: Color Temperature LB Index | : 1,600K ~ 40,000K : -500 to +500MK ⁻¹ |
|--|---|
| LB Filter Numbers Camera Filter | |
| Kodak WRATTEN 2/LEE | : 80A+80B to 85B+85 |
| FUJIFILM LBA/LBB | : LBB-20 + LBB-16 to LBA-20 + LBA-16 |
| Lighting Filter | : L287 DOUBLE CTO + L204 FULL CTO to L200 |
| | DOUBLE CTB + L283 1.5 CTB |
| ROSCO CINEGEL | : R3420 DOUBLE CTO + R3407 FULL CTO to R3220 DOUBLE CTB + R3202 FULL CTB |
| ROSCO E-COLOUR+ | : E287 DOUBLE CTO + E204 FULL CTO to E200 DOUBLE CTB + E283 1.5 CTB |
| CC Index | : 80G to 80M |
| CC Filter Numbers Camera Filter | : 200G to 200M |
| Camera Filler | |
| Kodak WRATTEN 2/LEE | : CC50M + CC40M to CC50G + CC40G |
| Kodak WRATTEN 2/LEE FUJIFILM CC | : CC50M + CC40M to CC50G + CC40G : CC-50M + CC-40M to CC-50G + CC-40G |
| Kodak WRATTEN 2/LEE | : CC-50M + CC-40M to CC-50G + CC-40G |
| Kodak WRATTEN 2/LEE FUJIFILM CC Lighting Filter | |
| Kodak WRATTEN 2/LEE FUJIFILM CC Lighting Filter | : CC-50M + CC-40M to CC-50G + CC-40G : L247 MINUS GREEN + L248 1/2 MINUS GREEN to |
| Kodak WRATTEN 2/LEE FUJIFILM CC Lighting Filter LEE | CC-50M + CC-40M to CC-50G + CC-40G L247 MINUS GREEN + L248 1/2 MINUS GREEN to L244 PLUS GREEN + L245 1/2 PLUS GREEN R3308 MINUS GREEN + R3309 3/4 MINUS GREEN to |
| Kodak WRATTEN 2/LEE FUJIFILM CC Lighting Filter LEE ROSCO CINEGEL | CC-50M + CC-40M to CC-50G + CC-40G L247 MINUS GREEN + L248 1/2 MINUS GREEN to L244 PLUS GREEN + L245 1/2 PLUS GREEN R3308 MINUS GREEN + R3309 3/4 MINUS GREEN to R3304 PLUS GREEN + R3315 1/2 PLUS GREEN E247 MINUS GREEN + E248 1/2 MINUS GREEN to |
| Kodak WRATTEN 2/LEE FUJIFILM CC Lighting Filter LEE ROSCO CINEGEL ROSCO E-COLOUR+ Illuminance lux Exposure lux-second | CC-50M + CC-40M to CC-50G + CC-40G L247 MINUS GREEN + L248 1/2 MINUS GREEN to L244 PLUS GREEN + L245 1/2 PLUS GREEN R3308 MINUS GREEN + R3309 3/4 MINUS GREEN to R3304 PLUS GREEN + R3315 1/2 PLUS GREEN E247 MINUS GREEN + E248 1/2 MINUS GREEN to E244 PLUS GREEN + E245 1/2 PLUS GREEN 11x to 200,000lx 20lx·s to 20,500lx·s |
| Kodak WRATTEN 2/LEE FUJIFILM CC Lighting Filter LEE ROSCO CINEGEL ROSCO E-COLOUR+ | CC-50M + CC-40M to CC-50G + CC-40G L247 MINUS GREEN + L248 1/2 MINUS GREEN to L244 PLUS GREEN + L245 1/2 PLUS GREEN R3308 MINUS GREEN + R3309 3/4 MINUS GREEN to R3304 PLUS GREEN + R3315 1/2 PLUS GREEN E247 MINUS GREEN + E248 1/2 MINUS GREEN to E244 PLUS GREEN + E245 1/2 PLUS GREEN 11x to 200,000lx 20lx·s to 20,500lx·s 0.1fc to 18,600fc |

5-6-2 Changing the Light Range

Change and use the light range depending on the brightness of the flash.

| Light Selection Ring (Status Bar Display) | | | Content | | |
|--|---|--------|---|--|--|
| Dark Calibration Position | | | Select for dark calibration only. Measurement cannot be made in this position. | | |
| Range L | | ∳ ☆ | Select for ALL ambient light measurement, and low power flash units (lower than 640lx·s/59.5fc·s) | | |
| Range H | 0 | \$н | Select for powerful flash units (brighter than 580lx·s/53.9fc·s) only. | | |

Turn the Light Selection Ring 2 and select the desired range. The set range will be displayed on the LCD screen's status bar.



6. Measurement Tool [Tool Box] Screen

Selecting Screens from the Tool Box

Touch the [Tool Box (_____)] icon in the Measuring screen to display the Tool Box screen. (♦ P15) You can select screens from the Tool Box as follows.



6-1 Setting Preset Contents [Preset Selection] Screen

Presets are a quick way to introduce adjustments to the camera/light source filter recommendations.

You can create and store Presets for different lighting conditions or color effects to use when ever needed. (⇒ P156)

Also, when you use several target color temperatures, setting them in "Edit a Preset" beforehand makes it easier to change target color temperatures by recalling one of presents in Tool Box even if you do not input a target color temperature every time.



Preset Selection Screen



1. Touch the [Preset Selection] button in the Tool Box.

The Preset Selection screen will be displayed.



Editing function under the "Setting Mode" icon before it can be used. (+ P156)

Preset Selection buttons will be grayed out until settings are created and set to "Displayed".

2. Select desired preset no. $(01 \sim 19)$.

Touch Up/Down buttons or move slide to position the desired Preset under the blue bar.



3. Touch the [OK] button.

Confirm and return to the Measuring screen.

To cancel the setting, touch the [Cancel] button.

The selected status will be displayed on the status bar.

The selected preset no. is

displayed.


The preset is set.



When selected, the Preset Color Temperature is used by the meter in place of the Target Color Temperature that was selected from the Measuring screen.

6-2 Using the Memory Function

The memory function enables storing light source data for single sources and groups of sources for recall at any time. Up to 99 measurements can be stored. Memory function also enables naming or renaming the title of memory and clearing the stored value.

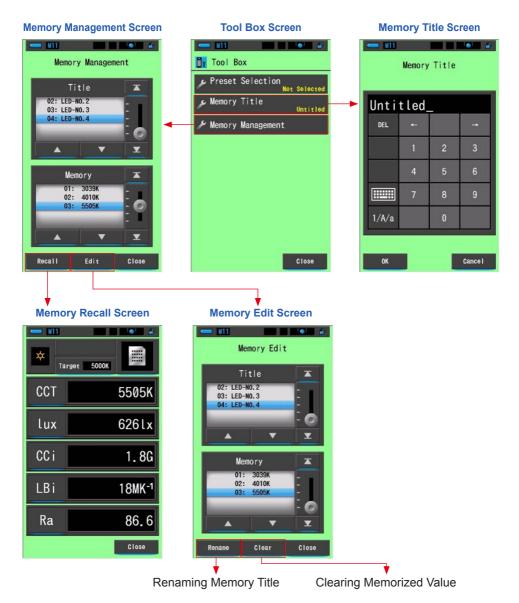

6-2-1 Naming Measurement Being Memorized [Memory Title] Screen

You can create special titles for memorized values to make them easier to select, view and use data later.

To use this function the order of operation:

- · Create memory title
- Measure light source
- Press Memory button 7 to memorize

Memory Title Screen



- A title can be a maximum of 16 alphanumeric characters.
- More than one measurement can be stored under one title.
- Up to 99 titles can be created.




1. Touch and select the [Memory Title] button in the Tool Box. The Memory Title screen will be displayed.



2. Enter the memory title. (⇒ P18)

Use the keyboard to create a name for the measured light.

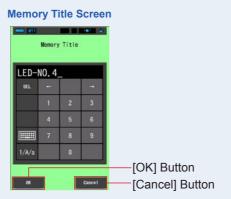

3. Touch the [OK] button.

Confirm and return to the Measuring screen.

To cancel the setting, touch the [Cancel] button.

The memory title is entered.

NOTICE

The memory title needs to be entered before memorizing. The title can be changed after memorizing in Memory Management function. (⇒ P116)



Measuring Button 5



Measuring Screen

| | Tar | yet 5000K |
|----|-----|-----------|
| | CCT | 5614K |
| nt | CC# | 0.5M |
| | lux | 216lx |
| | x | 0.3298 |
| | У | 0.3447 |
| | ۵ | × |


5. Press Memory Button **7** to memorize light source values and link the reading to the created title name.



Memory Button 🥑

6-2-2 Recalling Measurement Results [Memory Recall] Screen


The Memory Recall screen enables selecting a specific Title and Memory number to view and inspect values stored in the memory under any Display Mode.

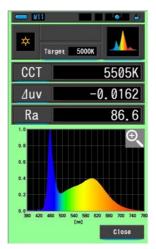

Ex.) Memory Recall Spectrum Screen

Operation

- 1. Touch the [Memory Management] button in the Tool Box. Memory Management screen will be displayed.
- 2. Select the "Title" and "Memory" to recall with the blue background positions.

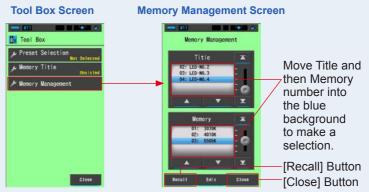


3. Touch the [Recall] button.

The meter will display the display mode viewed when the light source was measured.

To cancel the setting, touch the [Cancel] button.

4. Confirm the memory contents.

Display Mode at the time when measured appears. In Memory Recall Mode, the background color becomes green. Memory Title of recalled value appears every two seconds on the status bar.

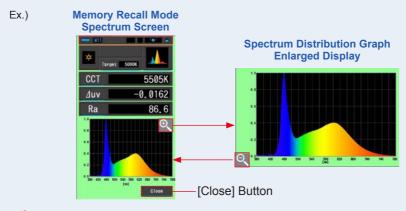

NOTICE

- Only the current reading can be memorized in the [Spectrum Comparison] Mode. If the Spectrum Comparison screen is displayed when the memory button is pressed, the stored data will be displayed on the Spectrum display screen.
- In Memory Recall Mode, measurement cannot be made.

5. Touch the [Close] button.

Returns to the Measuring screen.

Changing Memory Recall Mode Display

Touch one of the [Display Mode] icons in Memory Recall Mode, and the specified display with memorized data for that Memory Recall Mode will appear.

1.8G

18MK-1

86.6 Close

 


Mode Text Mode Target 5000K CCT 5505K 6261x lux

Ra

1 Memory Recall

2 Memory Recall Mode Spectrum Mode



5 Memory Recall Mode SSI Mode

5171K Juy 0,0036

83

Close

62 SSI

 
Tunasten(3200K) +

12 . CIE 055 .

÷.

SSL





6 Memory Recall Mode TLCI/TLMF Mode



9 Memory Recall Mode WB Corr. Mode

| * | Target 600 | |
|--------------|------------|----------------------------|
| LB i CC i | | 18MK ⁻¹ 1.8G |
| в | G | A |
| 84.55 | | Gi Shee 2.5 Close |



4 Memory Recall

Mode

TM-30 Mode

7 Memory Recall Mode 8 Memory Recall Mode **Camera Filter Mode**

| Tarpi | н 5000K |
|-------|-----------------|
| CCT | 5505K |
| LBi | 18MK-1 |
| LBef | 81A |
| CCi | 1.8G |
| CCcf | CC025G |
| Brand | KODAK WRATTEN 2 |
| | Close |

| Lig | hting | Filt | er I | Nod | e |
|-----|--------|-------|------|-----|---|
| - | U | | | 14 | |
| * | Target | 5000K | | | |

| Tary | PE DOUDK |
|-------|-----------------|
| CCT | 5505K |
| LBi | 18MK-1 |
| LBif | |
| CCi | 1.8G |
| CClf | L278 1/8 PLUS G |
| Brand | LEE |
| | Close |

113

| No. | Display Mode Icon | Part Name | Description |
|-----|----------------------|--|--|
| 1 | Text | Memory Recall Mode [Text] Icon | Displays user-selected 5 items in numeric values. (➡ P34) |
| 2 | Spectrum | Memory Recall Mode [Spectrum] Icon | Displays 3 user-selected values and spectrum distribution graph. (➡ P37) |
| 3 | CRI | Memory Recall Mode [CRI] Icon | Displays the selected average CRI (Ra) or individual CRI (R1 ~ R15) numerically. Each CRI is displayed in a graph. (➡ P43) |
| 4 | TM-30 | Memory Recall Mode [TM-30] Icon | Displays four current measurement values (Rf, Rg, CCT, \triangle uv) and color vector graphic. (\Rightarrow P49) |
| 5 | SSI | Memory Recall Mode [SSI] Icon | Compares the current measurement value and up to 2 reference values (color temperature and \triangle uv), and displays SSI index with the SSI spectrum graph. (\Rightarrow P51) |
| 6 | TLCI/TLMF | Memory Recall Mode [TLCI/TLMF] Icon | Displays the current measurement values and memorized values (in color temperature and ⊿ uv), TLCI and TLMF with spectrum graph. (➡ P62) |
| 7 | Camera Filter | Memory Recall Mode [Camera Filter] Icon | Displays correction values and camera filter names required to adjust measured source to Target Color temperature. (➡ P70) |
| 8 | Lighting Filter | Memory Recall Mode [Lighting Filter] Icon | Displays correction values and lighting filter names required to adjust measured source to Target Color temperature. (➡ P66) |
| 9 | WB Corr. | Memory Recall Mode [WB Corr.] Icon | Displays correction values in LB index and CC index between the current measurement value and the target color temperature in a white balance graph. (➡ P81) |




The contents of Memory Recall Mode display the selected display items in the current Display Modes instead of display items at the time when memorized.



1. Touch the [Display Mode] icon on the Memory Recall Mode.

Display modes of Memory Recall Mode will be displayed. Memory Title of recalled value appears every two seconds on the status bar.

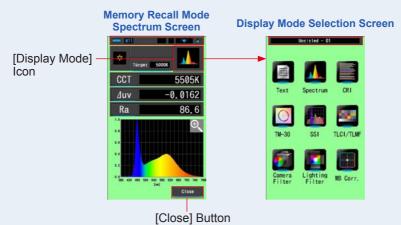

2. Touch the desired [Display Mode] icon to display. Switches to each display mode screen.

3. Touch the [Close] button. Returns to the Measuring screen.

115

6-2-3 Renaming Memory Title [Memory Rename] Screen


The title of measurements of the memory can be changed.

| Memory Rename Screen | | | | | |
|----------------------|--------|------|--------|---------|-----------------|
| | - 1/11 | | | | |
| | Ме | mory | Rename | | |
| | | | | | |
| | LED-N(|).4_ | | | |
| | DEL | - | | | |
| | | 1 | 2 | 3 | |
| | | 4 | 5 | 6 | |
| | | 7 | 8 | 9 | |
| | 1/A/a | | 0 | | |
| | | | | | |
| [OK] Button — | OK | | | Cance I | [Cancel] Button |

Operation


1. Touch the [Memory Management] button in the Tool Box. Memory Management screen will be displayed.

| Tool Box Screen | Memory Management Screen |
|---|---|
| Tool Box | Memory Management |
| Preset Selection Not Selected Memory Title Memory Management | Title X 02::LD=M0.2 1 03::LD=M0.4 1 |
| | Memory X 01: 303% X 02: 4010K X 03: 5509K X |
| Close | Recall] Button [Editl] Button |

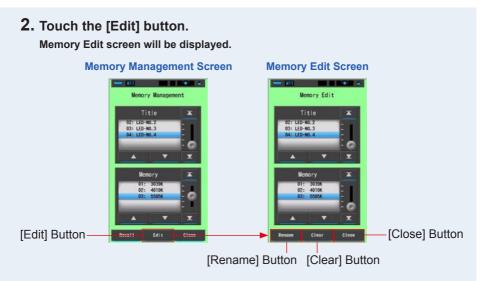


- **3.** Select the "Title" and "Memory" to rename with the blue background positions.
- **4.** Touch the [Rename] button.

Memory Rename screen will be displayed.

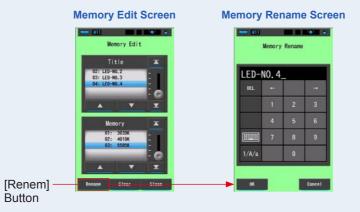

5. Enter the Memory Title to rename. (> P18)

Use the keyboard to create a name for the memorized value.

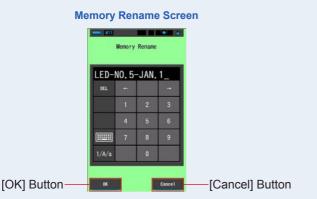

6. Touch the [OK] button.


Confirm and return to the Memory Edit screen.

To return to the "Memory Edit" screen without confirming, touch the [Cancel] button.

The memory title is entered.

7. Touch the [Close] button.


Close and return to the Memory Management screen. Touch the [Close] button to return to Measuring screen.

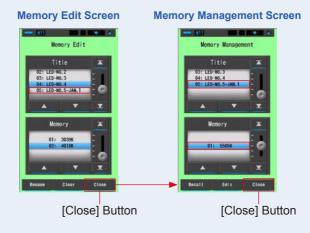

6-2-4 Deleting Saved Measurement Results [Memory Clear] Screen

You can delete memorized measurement values individually or every Memory Title at once.

In Memory Clear, titles and memory contents (memory numbers and measurement values) are displayed in the registered order.

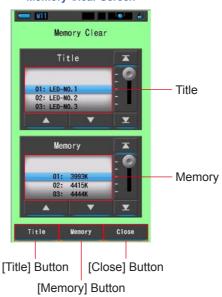


Memory Clear Screen

Operation


1. Touch and select the [Memory Management] button in the Tool Box.

The Memory Clear screen will be displayed.

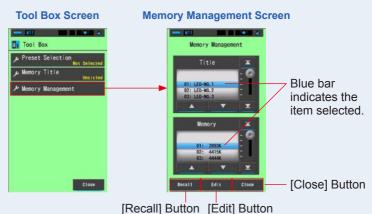

2. Touch the [Edit] button.

Memory Edit screen will be displayed.

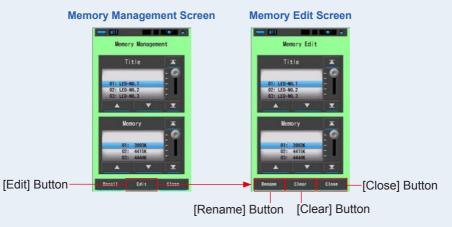

3. Select the "Title" and "Memory" to clear with the blue background positions.

4. Touch the [Clear] button.

Memory Clear screen will be displayed.




[Erasing Individual Values]

1. Select the Title to display the memorized value you want to delete. Then select the specific light source value under that title, if more than one value has been memorized.

2. Touch the [Memory] button.

This will display the Memory Clear Confirmation screen. "Remove the selected memory data. Are you sure?" will be displayed.

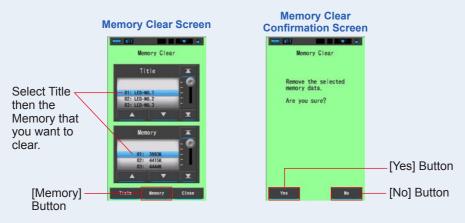


3. Touch the [Yes] button.

"Deleting Memory. Please wait." will appear while the memory is being deleted. After the memory is cleared, the meter will return to the Memory Clear Screen.

While the progress bar is running, the deletion is in progress. The process may require time depending on the number of memories to be deleted. Do not perform other work.

You can clear (delete) additional memories by repeating steps 1-3. If you decide not to delete a memory, touch the [No] button to return to the Memory Clear Screen.

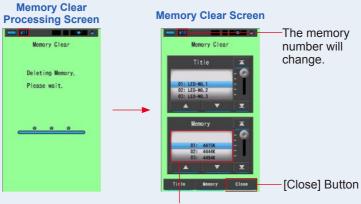

The selected memory will be deleted, and the numbers after the selected number will decrease by one.

4. Touch the [Close] button.

Returns to the Memory Edit screen. Touch the [Close] button until returning to Measuring screen.

[Erasing the Memory Title]


1. Match the "Title" to be deleted with the blue background positions.

Select the "Title" to be deleted.

2. Touch the [Title] button.

This will delete the title. All the memory data linked to the title will be deleted.

This will display the Memory Clear Confirmation screen. "Remove the selected memory title. Are you sure?" will be displayed.

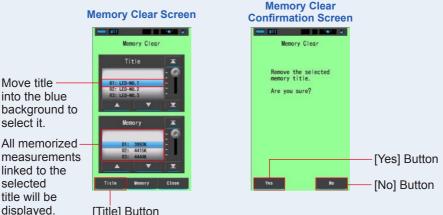


[Title] Button

3. Touch the [Yes] button.

"Deleting Memory. Please wait." will be displayed. Returns to the Memory Clear screen after deletion.

While the progress bar is running, the deletion is in progress. The process may require time depending on the number of memories to be deleted. Do not perform other work.

If you do not want to delete the memorized values, touch the [No] button. Returns to the Memory Clear screen.

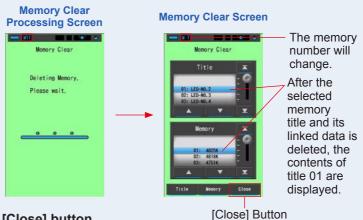

4. Touch the [Close] button.


Returns to the Memory Edit screen.

Touch the [Close] button until returning to Measuring screen.

7. Meter Settings [Setting] Screen

7-1 Setting Items

Here you can customize your meter for your preference in advance.

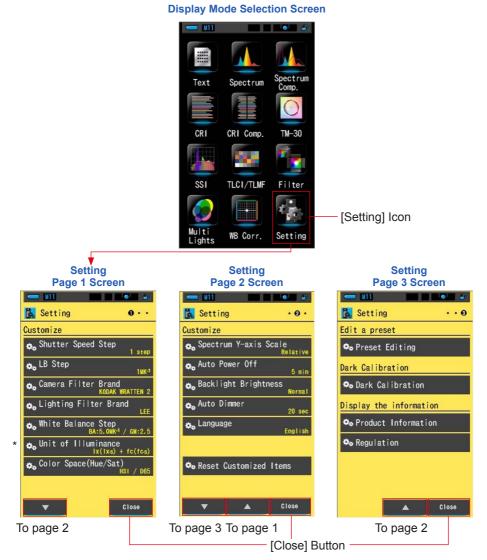

* Models sold in some countries do not display illuminance and exposure in "fc (fc·s)" due to legal restrictions. In this case, Unit of Illuminance is not displayed.

Operation

- 1. Touch the [Setting] icon on the Display Mode Selection screen. Setting will be displayed.
- **2.** Touch the one step icons $[\blacktriangle][\nabla]$ to display the desired page.

 
3. Touch the desired setting name.

That setting screen will be displayed.

When the [Close] button is touched, the display returns to the Display Mode Selection screen.



Pressing the Menu Button **6** will exit the settings and return to the Display Mode Selection screen.



7-1-1 Item List

The Setting screen items are as follows.

| Item Name | Description | | | |
|--|---|--|--|--|
| Customize | | | | |
| Shutter Speed Step | Select the shutter speed from 1 step, 1/3 step, and 1/2 step. (♥P129) | | | |
| LB Step | Select the LB index display step from $1MK^{-1}$, $1daMK^{-1}$ (no decimal point) step, and $0.1daMK^{-1}$ (with decimal point) step. (\Rightarrow P132) | | | |
| Camera Filter Brand | Select KODAK WRATTEN 2, FUJIFILM or LEE as the camera filter brand. (➡ P134) | | | |
| Lighting Filter Brand | Select LEE, ROSCO CINEGEL or ROSCO E-COLOUR+ as the lighting filter brand. (➡ P136) | | | |
| White Balance Step | Set the step for 1 grid square on the WB Corr. screen from the ranges below. BA: 0.5 to 100.0MK ⁻¹ GM: 0.5 to 20.0. (➡ P138) | | | |
| Unit of Illuminance* | Select the unit from $lx(lx \cdot s)$, fc(fc $\cdot s$) or both when measuring illuminance. (\Rightarrow P140) | | | |
| Color Space (Hue/Sat) | Set the color space and white point to use for Hue/Saturation measurement from the ranges below. (➡ P142) Color space: HSV, HSI White point : D65, D55, D50, 3200K, 2800K | | | |
| Spectrum Y-axis Scale | Select relative, auto, or spectral radiant intensity. (⇒ P144) | | | |
| Auto Power Off | Select the time before the power automatically turns off after last use (5min, 10min, 20min, No Auto Power Off). When No Auto Power Off is set, the automatic power OFF function is not activated. (+ P147) | | | |
| Backlight Brightness | Select the LCD backlight brightness from dark, normal, or bright. (⇒ P149) | | | |
| Auto Dimmer | Select the time before the backlight dims after last use to save extra power or adjust the visibility under the surrounding lighting conditions. (20sec, 40sec, 60sec, No Dimmer) (➡ P151) | | | |
| Language | Select the language displayed on the touch panel from English, Japanese or Chinese. (➡ P153) | | | |
| Reset Customized ItemsInitialize (reset) only contents of "Customize" in Setting to the default (12 items). (➡ P155) | | | | |
| Edit a preset | | | | |
| Preset Editing | Edit a preset separately. (➡ P156) | | | |
| Dark Calibration | | | | |
| Dark Calibration | Perform a dark calibration. (⇒P170) | | | |
| Display the information | | | | |
| Product Information | Display the product Information. (➡ P173) | | | |
| | | | | |

* Models sold in some countries do not display illuminance and exposure in "fc (fc·s)" due to legal restrictions.

7-2 Customize

You can set the display contents of 12 items in Customize (P1 to 2 of Setting) to customize your meter for your preference.

The current setting for each item is displayed in yellow letters.



Operation

- 1. Touch the [Setting] icon on the Display Mode Selection screen. Setting will be displayed.
- **2.** Touch the one step icons $[\blacktriangle][\nabla]$ to display the desired page.

3. Touch the desired item.

The item screen will be displayed.

When the [Close] button is touched, the display returns to the Display Mode Selection screen.

7-2-1 Item Specifications

| No. | Setting Name | Item | | | | |
|-----|------------------------------|--|-----------------------------|-------------------------------|--|------------------------|
| | | | | | | (Default) |
| 1 | Shutter Speed Step | 1 Step | 1/3 Step | 1/2 Step | - | 1 Step |
| 2 | LB Step | 1MK ⁻¹ Step | 1daMK ⁻¹ Step | 0.1daMK ⁻¹ Step | - | 1MK ⁻¹ Step |
| 3 | Camera Filter Brand | KODAK WRATTEN 2 | FUJIFILM | LEE | - | KODAK WRATTEN 2 |
| 4 | Lighting Filter Brand | LEE | ROSCO CINEGEL | ROSCO E-COLOUR+ | - | LEE |
| 5 | White Balance Step | BA: 0.5 to 100.0MK ⁻¹ GM: 0.5 to 20.0 | | | BA: 5MK ⁻¹ GM: 2.5 | |
| 6 | Unit of Illuminance* | lx(lx·s)+ fc(fc·s) | lx(lx·s) | fc(fc⋅s) | - | lx(lx·s)+ fc(fc·s) |
| 7 | Color Space (Hue/Sat) | Color space: HSV, HSI White point: D65, D55, D50, 3200K, 2800K | | | Color space: HSI White point: D65 | |
| 8 | Spectrum Y-axis Scale | Relative | Auto | | liant Intensity 0W·m⁻²·nm⁻¹ | Relative |
| 9 | Auto Power Off | 5min | 10min | 20min | No Auto Power Off | 5min |
| 10 | Backlight Brightness | Dark | Normal | Bright | - | Normal |
| 11 | Auto Dimmer | 20sec | 40sec | 60sec | No Dimmer | 20sec |
| 12 | Language | English | Japanese | Chinese | - | Selected by default |
| 13 | Reset Customized Items | When you touch the [OK] button, the Setting contents will be reset to factory default. | | | | - |

The specifications of each "Customize" item is as follows.

* Models sold in some countries do not display illuminance and exposure in "fc (fc·s)" due to legal restrictions.



- 1MK⁻¹ is equivalent to 1Mired.
- The unit "MK⁻¹" is now used based on the International System of Units (SI) instead of traditional unit "Mired". The latest unit is adopted to the Spectromaster.

7-2-2 Selecting the Shutter Speed Step

Select the shutter speed from 1 step, 1/3 step, and 1/2 step.

Image: Shutter Speed Step 1 step 1/3 step 1/2 step


Shutter Speed Step Screen

Selectable Shutter Speeds (in seconds)

| 1 Step (Default) | 1, 1/2, 1/4, 1/8, 1/15, 1/30, 1/60, 1/125, 1/250, 1/500, 1/75, 1/80, 1/90, 1/100, 1/200, 1/400 |
|---------------------|---|
| 1/3 Step | 1, 0.8, 0.6, 0.5, 0.4, 0.3, 1/4, 1/5, 1/6, 1/8, 1/10, 1/13, 1/15, 1/20, 1/25, 1/30, 1/40, 1/50, 1/60, 1/80, 1/100, 1/125, 1/160, 1/200, 1/250, 1/320, 1/400, 1/500, 1/75, 1/80, 1/90, 1/100, 1/200, 1/400 |
| 1/2 Step | 1, 0.7, 1/2, 1/3, 1/4, 1/6, 1/8, 1/10, 1/15, 1/20, 1/30, 1/45, 1/60, 1/90, 1/125, 1/180, 1/250, 1/350, 1/500, 1/75, 1/80, 1/90, 1/100, 1/200, 1/400 |

Operation

1. Touch the item [Shutter Speed Step] button on page 1 of Setting. The shutter speed step will be displayed.

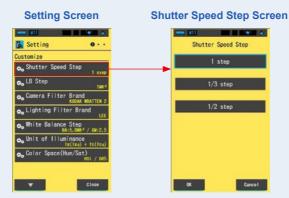

2. Touch the desired shutter speed step to use.

Select from 1 step, 1/3 step, or 1/2 step.



Shutter Speed Step Screen

3. Touch the [OK] button.

Confirms the settings, and returns to Setting screen.

To return to the Setting screen without confirming, touch the [Cancel] button.




The shutter speed step is set.

7-2-3 Selecting the LB Step

Select the LB index display step from $1MK^{-1}$, $1daMK^{-1}$ (no decimal point) step, and $0.1daMK^{-1}$ (with decimal point) step.

Ex) 38MK⁻¹ is displayed as 38MK⁻¹ in 1MK⁻¹ step, 4MK⁻¹ in 1daMK⁻¹ step, and 3.8MK⁻¹ in 0.1daMK⁻¹ step.

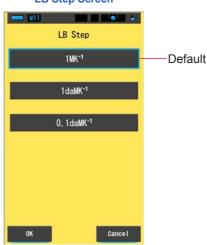

LB Step Screen


Operation

1. Touch the item [LB Step] button on page 1 of Setting. The LB step will be displayed.



2. Touch the desired LB step value to use.

Select the LB Step value.

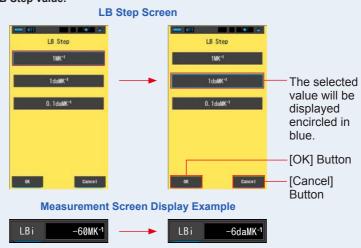

3. Touch the [OK] button.

Confirms the settings, and returns to Setting screen.

To return to the Setting screen without confirming, touch the [Cancel] button.




The LB step is set.



- 1MK⁻¹ is equivalent to 1Mired.
- The unit "MK⁻¹" is now used based on the International System of Units (SI) instead of traditional unit "Mired". The latest unit is adopted to the Spectromaster.

7-2-4 Selecting the Camera Filter Brand

Select KODAK WRATTEN 2, FUJIFILM or LEE as the camera filter brand.

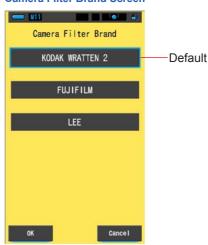

Camera Filter Brand Screen


Operation

1. Touch the item [Camera Filter Brand] button on page 1 of Setting. The camera filter brand will be displayed.



2. Touch the desired camera filter brand to use.

Select the filter brand of the camera used.

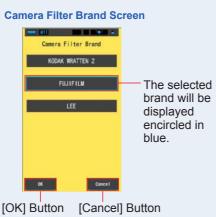

3. Touch the [OK] button.

Confirms the settings, and returns to Setting screen.


To return to the Setting screen without confirming, touch the [Cancel] button.



The camera filter brand is set.

7-2-5 Selecting the Lighting Filter Brand

Select LEE, ROSCO CINEGEL, or ROSCO E-COLOUR+ as the lighting filter brand.

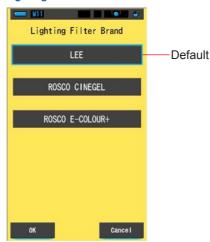

Lighting Filter Brand Screen

Operation

1. Touch the [Lighting Filter Brand] button on page 1 of Setting. The lighting filter brand will be displayed.



2. Touch the desired filter brand to use.

Select the filter brand of the lighting used.



3. Touch the [OK] button.

Confirms the settings, and returns to Setting screen.

To return to the Setting screen without confirming, touch the [Cancel] button.



The lighting filter brand is set.

7-2-6 Selecting the White Balance Step

Select the unit per step displayed per grid cell on the WB Corr. Mode measurement screen from a range of BA: 0.5 to 100.0MK⁻¹,GM: 0.5 to 20.0.

Some cameras have white balance function, however, the setting of grid cell varies depending on the cameras. Match the setting to the camera.


| Blue/Am | ber Step | T | |
|------------|----------------|------|------|
| | 0MK-1 5MK-1 | - | |
| 5. | OMK-1 | | Defa |
| | 0MK-1 0MK-1 | : 1 | |
| _ A | • | T | |
| | jenta Step | T | |
| | 1.0 2.0 | | |
| | 2.5 | - 69 | |
| | 4.0 | - | |

White Balance Step Screen

Operation

1. Touch the item [White Balance Step] button on page 1 of Setting. The white balance step will be displayed.



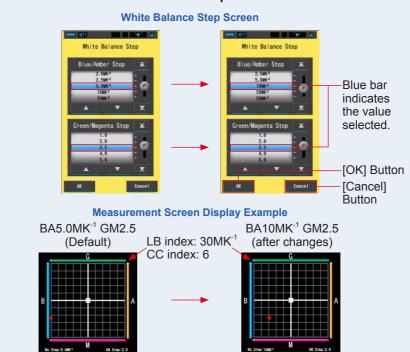

2. Select the desired white balance step to use.

3. Touch the [OK] button.

Confirms the settings, and returns to Setting screen.

To return to the Setting screen without confirming, touch the [Cancel] button.




The white balance step is set.

7-2-7 Selecting the Unit of Illuminance

Select the unit when measuring illuminance.

* Models sold in some countries do not display illuminance and exposure in "fc (fc·s)" due to legal restrictions. In this case, "Unit of Illuminance" button will not appear in Setting screen.

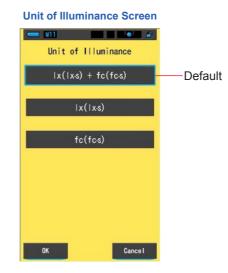


Operation

1. Touch the item [Unit of Illuminance] button on page 1 of Setting. The unit of illuminance will be displayed.



2. Touch the desired unit to use. Select the unit of illuminance.



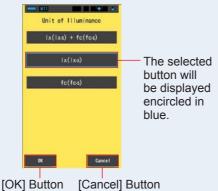

3. Touch the [OK] button.

Confirms the settings, and returns to Setting screen.


To return to the Setting screen without confirming, touch the [Cancel] button.



The unit of illuminance is set.

7-2-8 Selecting the Color Space (Hue/Sat)

Set the color space (HSV, HSI) and white point (D65, D55, D50, 3200K, 2800K) to use for Hue/Saturation measurement.

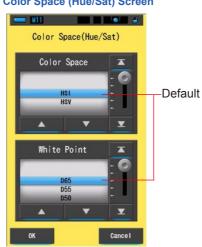

Color Space (Hue/Sat) Screen


Operation

1. Touch the item [Color Space (Hue/Sat)] button on page 1 of Setting screen.

The Color Space (Hue/Sat) will be displayed.



2. Select the color space to use (HSI or HSV), and white point (D65 to 2800K).

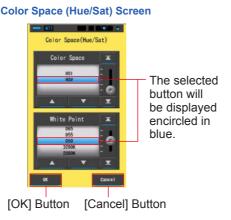

3. Touch the [OK] button.

Confirms the settings, and returns to Setting screen.

To return to the Setting screen without confirming, touch the [Cancel] button.



The Color Space (Hue/Sat) is set.



Three primaries R/G/B used to calculate the color space are Sekonic own values. Also, depending on the set white point, the set value of your lighting equipment may vary from the measured value of the meter.

7-2-9 Selecting the Spectrum Y-axis Scale

Select Relative, Auto, or any specific number of spectral irradiance as the maximum display value for the spectrum Y-axis.



Spectrum Y-axis Scale Screen

Operation


1. Touch the item [Spectrum Y-axis Scale] button on page 2 of Setting.

The maximum display value of the spectrum Y-axis scale will be displayed.



2. Select the desired spectrum Y-axis scale.

Select from relative, auto, or spectral radiant intensity.

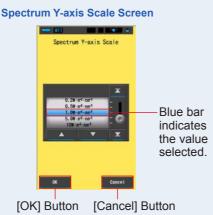

3. Touch the [OK] button.

Confirms the setting, and returns to Setting screen.


To return to the Setting screen without confirming, touch the [Cancel] button.




The spectrum Y-axis scale is set.




| Relative | Regardless of brightness of light so | urce, the peak of brightness |
|--|--------------------------------------|------------------------------|
| | in each measurement and memoriz | 8 |
| | to compare the light sources in sha | |
| Auto | The appropriate Y-axis value is aut | omatically selected and |
| | spectral irradiance can be compare | |
| Spectral IrradianceSpecific value can be selected from 1.0u to 100 W·m ⁻² ·nm ⁻¹ . | | |
| Relative | Auto | Spectral Irradiance |

 

 



 

7-2-10 Selecting the Auto Power Off Time

Select the time before the power automatically turns off after last use (5min, 10min, 20min, No Auto Power Off). When No Auto Power Off is set, the automatic power OFF function is not activated.

| Auto Power Off | |
|-------------------|---------|
| 5 min | Default |
| 10 min | |
| 20 min | |
| No Auto Power Off | |
| | |
| OK Cance I | |

Auto Power Off Screen

Operation

1. Touch the item [Auto Power Off] button on page 2 of Setting. The auto power off time will be displayed.



2. Touch the desired time on the Auto Power Off screen. Select 5min, 10min, 20min, or No Auto Power Off.



3. Touch the [OK] button.

Confirms the settings, and returns to Setting screen.


To return to the Setting screen without confirming, touch the [Cancel] button.



The auto power off time is set.

7-2-11 Selecting the Backlight Brightness

Select the LCD backlight brightness from Dark, Normal or Bright to save extra power or adjust the visibility under the surrounding light condition.

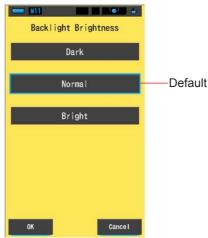

Backlight Brightness Screen

Operation

1. Touch the item [Backlight Brightness] button on page 2 of Setting.

The backlight brightness will be displayed.



2. Touch the desired brightness on the Backlight Brightness screen. Select dark, normal or bright.



3. Touch the [OK] button.

Confirms the settings, and returns to Setting screen.


To return to the Setting screen without confirming, touch the [Cancel] button.



The backlight brightness is set.

7-2-12 Selecting the Auto Dimmer Time

Select the time before the backlight dims after last use to save extra power. (20sec, 40sec, 60sec, No Dimmer)

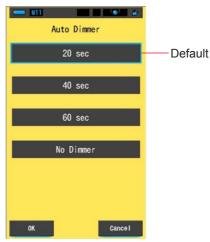

Auto Dimmer Screen

Operation

1. Touch the [Auto Dimmer] button on page 2 of Setting.

The auto dimmer time will be displayed.



2. Touch the desired time on the Auto Dimmer screen.

Select 20sec, 40sec, 60sec, or No Dimmer.



3. Touch the [OK] button.

Confirms the settings, and returns to Setting screen.

To return to the Setting screen without confirming, touch the [Cancel] button.



The auto dimmer time is set.

7-2-13 Selecting the Language

Select the language displayed in the meter from English, Japanese or Chinese.



Language Screen

Operation


1. Touch the item [Language] button on page 2 of Setting. The language will be displayed.

* You can change the language set when power is turned on for the first time.



2. Touch the desired language to use.

Select English, Japanese or Chinese.

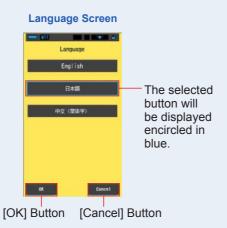

3. Touch the [OK] button.

Confirms the settings, and returns to Setting screen.

To return to the Setting screen without confirming, touch the [Cancel] button.



The language is set.

7-2-14 Reset Customized Items

Initialize (reset) only contents of "Customize" in Setting to the factory default.

Reset Customized Items Screen

Operation

1. Touch the item [Reset Customized Items] button on page 2 of Setting.

"Initialize the contents of "Customize". Are you sure?" is displayed.

| Setting Screen | Reset Customized Items S | Screen |
|---|---|----------------|
| Setting • • • • Custonize • • • • • • • • • • • • • • • • • • • • • • • | Initialize the contents of "Customize". Are you sure? | |
| ◆oReset Customized Items | | — [Yes] Button |
| V 🔺 Close | Yes No | — [No] Button |

2. Touch the [Yes] button.

Custom settings are reset. After finishing initialization, returns to Setting screen. To return to the Setting without initializing, touch the [No] button.


7-3 **Preset Editing**

Presets are a quick way to introduce adjustments to the camera/light source filter recommendations.

You can create and store Presets for different lighting conditions or color effects to use when ever needed.

The Spectromaster has been calibrated to Sekonic standards. However if the indicated compensating values do not yield the desired or expected color reproduction, than it will be necessary to modify the filter compensation values. In this case, if you save the compensation values in memory as a preset number and then take measurements, you can display results with the compensated values.

Also, when you use several target color temperatures, you can easily set the target color temperature by recalling one of presents in Tool Box even if you do not input a target color temperature every time.

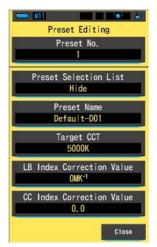

Preset Editing Screen



Up to 19 presets can be registered.




1. Touch the item [Preset Editing] button on page 3 of Setting. The Preset Editing screen of Setting will be displayed.

| Setting Screen | Preset Editing Screen |
|--|---|
| Setting · · O Edit a preset | Preset Editing Preset No. |
| ◆ Preset Editing Dark Calibration ◆ Dark Calibration | Preset Selection List Hide Preset Name |
| Display the information •• Product Information | Default-D01 Target CCT 5000K |
| ♀ Regulation | LB Index Correction Value OMK ¹ CC Index Correction Value 0.0 |
| Liose | 0.0 Close |


2. Touch the [Preset No.] button.

The preset number is displayed.

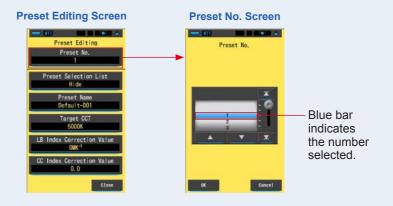

3. Select the desired present number $(1 \sim 19)$ to edit.

Preset No. Screen

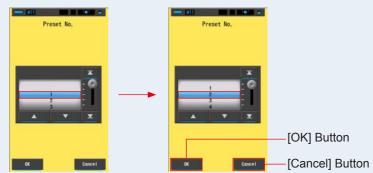

4. Touch the [OK] button.

The number is fixed, and returns to the Preset Editing screen.

The desired preset number to edit is displayed.

To return to the Preset Editing screen without confirming, touch the [Cancel] button.



5. Edit each setting item.

Refer to the follow reference pages for editing each setting item.

- Preset Selection List (⇒ P159)
- Preset Name (⇒ P161)
- Target CCT (➡ P163)
- LB Index Correction Value (⇒ P166)
- CC Index Correction Value (⇒ P168)

6. Touch the [Close] button.

Returns to Setting screen.

Preset editing is complete.

7-3-1 Displaying the Preset Selection List

Select to display or not in the Preset Selection list in the Tool Box.

Display in the Preset Selection List Screen



Operation

1. Touch the [Preset Selection List] button. Display in the Preset Selection List will appear.



2. Select the [Displayed] to set.

The selected icon will be displayed encircled in blue.

Display in the Preset Selection List Screen



[OK] Button [Cancel] Button

3. Touch the [OK] button.

The set item is fixed, and returns to the Preset Editing screen.

To return to the Preset Editing screen without confirming, touch the [Cancel] button.

Preset Editing Screen



The Preset Selection List is set.

7-3-2 Setting the Present Name

Edit the preset name.

| Preset Name Screen | | | |
|--------------------|---|---|---------|
| - 111 | | | • |
| Preset Name | | | |
| Default-D01_ | | | |
| DEL | + | | - |
| | 1 | 2 | 3 |
| | 4 | 5 | 6 |
| | 7 | 8 | 9 |
| 1/A/a | | 0 | |
| | | | |
| OK | | | Cance I |

Up to 16 alphanumeric characters can be input for Preset name.




1. Touch the [Preset Name] button.

The Preset Name Input screen is displayed.



2. Use the keyboard to create a name for preset. (+ P18)

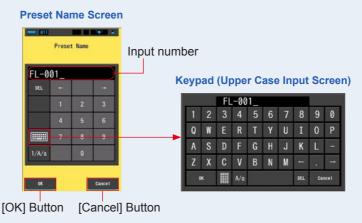

3. Touch the [OK] button.

The Preset name is fixed, and returns to Preset Editing screen.

To return to the Preset Editing screen without confirming (registering/editing), touch the [Cancel] button.



The preset name is set.

Setting the Preset Target Color Temperature 7-3-3

Input the target color temperature for preset.

| Target CCT Screen | | | |
|-------------------------------|---|---|---|
| 💳 M11 | | | |
| Target CCT (2500 ~ 10000K) | | | |
| 5000K → _0 K | | | |
| DEL | + | | |
| | 1 | 2 | 3 |
| | 4 | 5 | 6 |
| | 7 | 8 | 9 |
| | | 0 | |
| | | | |
| OK Cancel | | | |

Target CCT Screen


Operation

1. Touch the [Target CCT] button. The Target CCT screen will be displayed.



2. Enter the value of the target color temperature. (⇒ P17)

* The units place is fixed as 0.

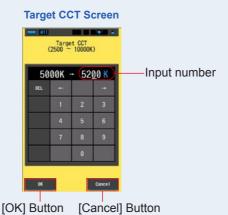

3. Touch the [OK] button.

The number is fixed, and returns to the Preset Editing screen.

To return to the Preset Editing screen without confirming, touch the [Cancel] button.



The target color temperature is edited.



- Set the meter to the same color temperature that was selected in your camera. Please note that many digital cameras reproduce color better at certain color temperature settings. If your work requires optimum color reproduction and high color fidelity, select the camera manufacturers recommended color temperature for best color reproduction. Please refer to your digital camera's operating manual.
- You can set the color temperature from 2,500K to 10,000K.
- When you frequently use several target color temperatures, use preset for convenience.

7-3-4 Setting the LB Index Correction Value

Sets the preset LB index Correction value.

| LB Index Correction Value (-100 ~ +100MK ⁻¹) | | | |
|---|--------|---|------|
| 0 | MK-1 - | • | MK-1 |
| DEL | | | -> |
| | 1 | 2 | 3 |
| | 4 | 5 | 6 |
| | 7 | 8 | 9 |
| | +/- | 0 | |
| OK Cancel | | | |

LB Index Correction Value Screen


Operation

1. Touch the [LB Index Correction Value] button.

The LB index correction value will be displayed.



2. Set the correction value within a range of ±100MK⁻¹. (⇒ P17)

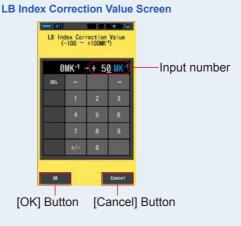

When input, the value becomes automatically positive (+) number. If you change the positive (+) or negative (-) number, touch the [+/-] key.

3. Touch the [OK] button.

The number is fixed, and returns to the Preset Editing screen.

To return to the Preset Editing screen without confirming, touch the [Cancel] button.



The LB index correction value is edited.

7-3-5 Setting the CC Index Correction Value

Sets the preset CC index Correction value.



CC Index Correction Value Screen


Operation

1. Touch the [CC Index Correction Value] button.

The CC index correction value will be displayed.



Set the CC index correction value within a range of 40.0G ~ 40.0M. (➡ P17)

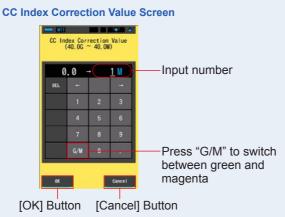

3. Touch the [OK] button.

The number is fixed, and returns to the Preset Editing screen.

To return to the Preset Editing screen without confirming, touch the [Cancel] button.



The CC index correction value is edited.

Because the CC index correction value unit is an index, 1 of CC index is equivalent to 2.5 CC filter number.

7-4 Dark Calibration

Dark calibration is performed when there is a big change in temperature between turning power OFF and ON.

Except the cases above, dark calibration after power ON is skipped.

Accordingly, if you want to perform dark calibration manually, do it from this screen.

| Dark Calibration Confirmation Screen | Light Selection Ring Status Indicator Chart | | | |
|---|---|--|--|--|
| | → Icon | Content | | |
| | О \$н | If either of icons appears, set the Light Selection Ring 2 to | | |
| Perform Dark Calibration? | ○ ∮ ☆ | the dark calibration position. | | |
| | CAL | This icon is the dark calibration position. Perform dark calibration after making sure it is set to this position. | | |
| | | | | |



Yes

No

1. Touch the item [Dark Calibration] button on page 3 of Setting. "Perform Dark Calibration?" will be displayed.



2. Turn the Light Selection Ring 2 to set to the dark calibration position CAL (

The status bar will display the dark calibration lcon.



Light Selection Ring 2

3. Touch the [Yes] button.

"Dark calibration in progress. Please wait" and the status bar will appear while calibrating.

To return to the Setting screen without performing dark calibration, touch the [No] button.





While the message "Dark calibration in progress. Please wait." or the progress bar is displayed, do not turn the power off.

The dark calibration is completed.

When the Following Screen is Displayed

Dark Calibration Position Confirmation Screen



Dark Calibration failure Screen

Dark calibration failed. Please check Light Selection Ring position.



 
 $f_{H}(\bigcirc)$ or Range L f_{K} (\bigcirc), and dark calibration could not be performed. Set the Light Selection Ring 2 to the dark calibration position **CAL** (\square), and perform dark calibration.

The Light Selection Ring 2 is set to Range H

While the dark calibration is being performed, the position of Light Selection Ring 2 is changed. so dark calibration could not be completed normally. Set the Light Selection Ring 2 to the dark calibration position **CAL** () again, and perform dark calibration again.




- Dark calibration can be done by turning the Light Selection Ring 2 to set to the dark calibration position CAL () in Measuring Screen and Display Mode Selection screen.
- Dark calibration is performed when there is a big change in temperature between turning power OFF and ON.
 Except the cases above, dark calibration after power ON is skipped.



7-5 **Product Information Display**

The Product Information screen displays detailed information not displayed in the Measurement screen.

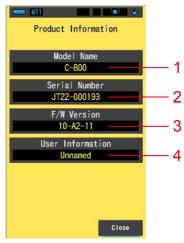

Product Information Screen

* The screen contents differs depending on model.

| No. | Item Name | Description | |
|-----|---------------------|---|--|
| 1 | Model Name | Displays the model number of the meter. | |
| 2 | Serial Number | Displays the serial number of the meter. | |
| 3 | F/W Version | Displays the firmware version. | |
| 4 | User Information | Displays user-input information such as ownership or meter function, etc which is set in the "Hardware Setting Screen". (➡ P176) | |




1. Touch the item [Product Information] button on page 3 of Setting. The Product Information screen will be displayed.



2. Touch the [Close] button. Returns to the Setting screen.

7-5-1 Regulation Display

The Regulation screen displays the symbols, approved number, regulation names, etc. which the meter is compliance with.

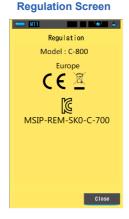

Operation

1. Touch the item [Regulation] button on page 3 of Setting. The Regulation screen will be displayed.

The display contents will differ depending on the product you have purchased.




2. Touch the [Close] button. Returns to the Setting screen.

8. Hardware Setting Screen

You can set the follow on the Hardware Setting screen.

- Adjust Touch Panel
- Edit User Information
- Factory Setting

Hardware Setting Screen

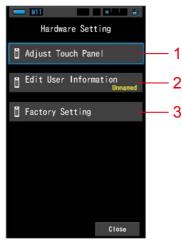

| No. | Item Name | Description | |
|-----|--|--|--|
| 1 | Adjust Touch Panel | Adjust the position of touch panel display. (➡P178) | |
| 2 | 2 Edit User Information Edit user information to display the User Information screen in Set (+ P181) | | |
| 3 | Factory Setting | Returns all display and setting contents to the factory default. (➡ P183) | |


Operation

 
1. With the meter turned OFF, hold down the Menu Button (6) and press the Power Button (3).

* Until the Hardware Setting screen is displayed, do not release the Menu Button (6) and the Power Button (3).

If you release the button before the Hardware Setting screen is displayed, the Measuring screen will be displayed.

The Hardware Setting screen is displayed.

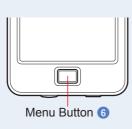



2. Touch the desired menu item.

The setting screen of the selected item will be displayed. Refer to the explanations on the following page for each item setting.

3. When finished, touch the [Close] button.

This will return the display to the Measuring screen.

8-1 Adjust Touch Panel

Adjust the position of touch panel display.


Adjust Touch Panel Screen



Operation


1. Touch the [Adjust Touch Panel] button on the Hardware Setting screen.

"Touch the center of cursor." will be displayed.

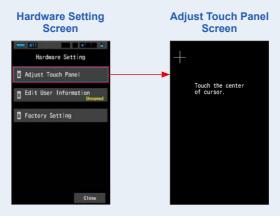

2. Touch the center of the white cross in the upper left corner of the screen.


The touched position will be shown with a red cross cursor, and the white cross cursor will move to the next position.

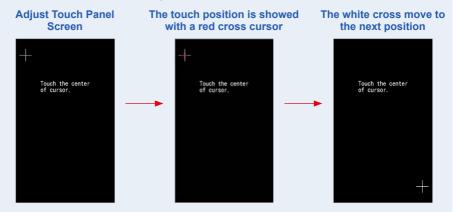

3. Repeat in 7 places.

Continue and repeat in 7 places.

The screen of "Press the "OK" to determine the touch panel adjustment." will be displayed.

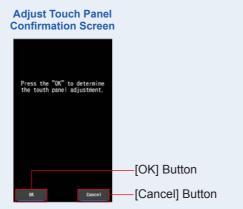


4. Touch the [OK] button.

Adjustment of touch panel is completed, and returns to the Hardware Setting screen.

To return to the Hardware Setting screen without adjusting the setting, touch the [Cancel] button.

Touch panel adjustment is completed.

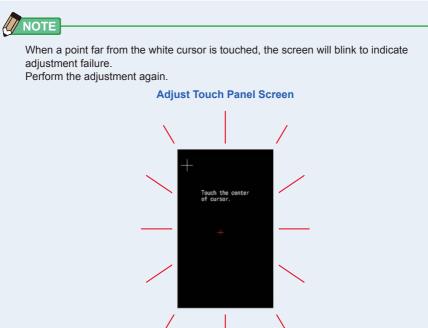

8-2 Edit User Information

User information can be input on this screen.

User Information Screen Edit User Information Unnamed_ DEL ← → 1 2 3 4 5 6 1/A/a 0 0K Cancel

Up to 16 alphanumeric characters can be input.

Operation

1. Touch the [Edit User Information] button on the Hardware Setting screen.

The Edit User Information Input screen is displayed.



2. Edit the user information. (⇒ P18)

Edit User Information Input Screen

| Ed |) lit User | Informa | tion | |
|---------|---------------|---------|--------|-----------|
| Stu | dio-1_ | | | |
| DEL | + | | * | |
| | 1 | 2 | 3 | |
| | 4 | 5 | 6 | |
| | 7 | 8 | 9 | |
| 1/A/a | 1 | 0 | | |
| | | | | |
| ОК | | | Cance1 | |
| [OK] Bu | tton | [Ca | ance | I] Button |

3. Touch the [OK] button.

Registers the user information, and returns to the Hardware Setting screen.

To return to the Hardware Setting screen without registering the user information, touch the [Cancel] button.



The user information is input.

8-3 Factory Setting

Return all display and setting contents of the meter to the factory default.




Factory Setting Screen

Operation

1. Touch the [Factory Setting] button on the Hardware Setting screen.

The Factory Setting screen of "Reset to factory default settings. Are you sure?" will be displayed.

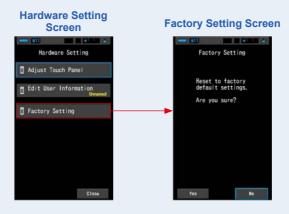

2. Touch the [Yes] button.

The factory setting confirmation message "All measurements will be lost when you perform this operation. Are you sure?" will be displayed.

Confirm again.

To return to the Hardware Setting screen without resetting to factory default settings, touch the [No] button.




3. Touch the [Yes] button.

NOTICE


When the message "Deleting Memory. Please wait." or the progress bar is displayed, do not turn the power off.

All measurement values are deleted, and returns to the Hardware Setting screen. (English display is the default factory setting.)

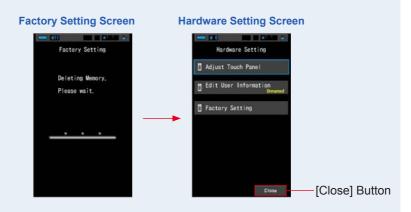

4. Touch the [Close] button.

The Language Selection screen is displayed. Select the language to use. (\Rightarrow P6)

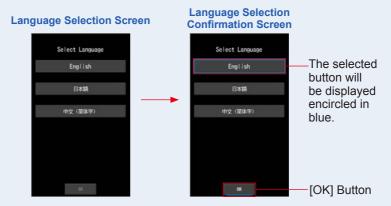

5. Touch the [OK] button.

The Measuring Screen will appear.

Measuring Screen

| Target 5000K |
|--------------|
| ССТ |
| CC# |
| lux |
| x |
| У |
| 4 |

Factory setting is completed.

9. Appendix

9-1 Glossary

| Term | Description |
|--------------------------------------|---|
| Color Temperature | Color temperature refers to the chromaticity of a heated object (commonly refer to as a black body) that will vary according to its temperature. The color temperature is measured in units of Kelvin (K) and refers to the temperature of a heated object at a given color or chromaticity. The higher color temperature is, the bluer the light, and the larger the Kelvin value becomes. The lower the color temperature is, the redder the light, and the smaller the Kelvin value becomes. A figure that plots the changes of color temperatures on an xy chromaticity diagram is called the black body radiation locus. |
| Correlated Color Temperature | Not all light sources match the black body radiation locus when measuring light sources. In this case, the correlated color temperature is used. The correlated color temperature is a color temperature obtained by drawing an isotemperature line from the black body radiation locus which matches the measured value. |
| Photographic Color Temperature | Color temperature calculated by using the ratio of R, G and B characteristics obtained by measurement to match to the characteristic of film. |
| Light (Visible light) | This refers to the electromagnetic wavelength ranging from 380nm to 780nm that can be detected by the human eye. |
| Black Body | Theoretically, this is an object that absorbs all wavelengths and when heated, emits light equivalent to the applied color temperature. |
| Black-body Radiation | This refers to the light emitted by a black body. The amount of energy released for each wavelength changes with the applied color temperature, resulting in visible color variations. |
| к | Expressed in absolute Kelvin temperature, with units of "K". 0 (zero) K is equivalent to -273.15 °C or -459.67 °F. |
| ⊿uv | The deviation between the correlated color temperature and the black body radiation locus. When the correlated color temperature is above the black body radiation locus, a "+" sign is assigned; when below, a "-" sign is assigned. |

| Term | Description |
|------------------------------|---|
| МК ⁻¹ | Read as "per mega Kelvin", this unit is based on the International System of Units and is equivalent to the traditional unit of MIRED (mrd). It expresses the inverse of the color temperature. The inverse of the color temperature is 1,000,000 divided by the color temperature. Inverse color temperature = 1,000,000/Color temperature The inverse color temperature decreases as the color temperature increases. Ex.) 10,000K=100MK ⁻¹ , 3200K=312.5MK ⁻¹ If a 100K change is applied to both 10,000K and to 3,200K, the human eye perceives the change applied to 3,200K as larger. In other words, there is a difference in perception of the same change in color temperature depending on the color temperature's numerical value. When the inverse color temperature is used, the human eye perceives a given amount of change as the same for any color temperature. |
| daMK ⁻¹ | MK ⁻¹ divided by 10. Because the unit MK ⁻¹ is extremely small compared to the amount of change in color temperature the human eye can perceive, and because performing corrections is difficult, for practical purposes the unit daMK ⁻¹ (deca per Mega Kelvin) is used. This unit is also used in conventional filters that change color temperature. |
| LB Index | The difference of the reciprocal of the selected color temperature and the reciprocal of the measured color temperature. It is expressed in units of MK ⁻¹ (equivalent to MIRED) or daMK ⁻¹ . |
| LB Filter | Stands for "Light Balancing Filter", and refers to a filter used for correcting color temperature in photography. A blue filter is used to raise the light source color temperature, while an amber filter is used to lower it. By using the custom settings in the C-800, the display can be changed to show the type of the filter brand being used. |
| CC Index | Number that expresses the amount of difference between the G component (Green range) of the measured light source and the base black body radiation of the color temperature. 1CC index is equivalent to 2.5CC filter number. |
| CC# (CC Filter Number) | Number that expresses the amount of difference between the G component (Green range) of the measured light source and the base black body radiation of the color temperature. 1 CC# is equivalent to 0.4 CC index. In the past when film was popular, CC filter number is related to the actual CC filter. However, the sensor of C-800 which represents human eyes sensitivity sees the light in a different way from film, CC# is not related to CC filter directly. |
| CC Filter | Stands for "Color Compensating Filter", and refers to a filter used for correcting color in lighting. There are 6 different types of filters Yellow (Y), Magenta (M), Cyan (C), Blue (B), Green (G), and Red (R), but the C-800 uses the Magenta (M) and Green (G) types. |


| Term | Description |
|---------------------|---|
| CRI | The Colour Rendering Index (CRI), defined by CIE (International Commission on Illumination) Publication 13.3, is widely used for assessing the colour rendering characteristics (the color appearance of objects) of light sources. The CRI values are based on the color appearance of objects compared to their appearance under the defined reference illuminant. In the CRI, there are special color rendering indices (R1 to R14, and R15) and the general color rendering index (Ra) which is the avaraged value from R1 to R8. It was first published in 1965 after fluorescent lamps had emerged, and was last improved in 1974. |
| ТМ-30 | Technical Memorandum TM-30 is, published by Illuminating Engineering Society (IES), the method for evaluating light source color rendition including LED lights. The C-800 with latest firmware shows TM-30-18 which Rf is identical with Rf of CIE 224:2017. The values are based on color appearance of objects with 99 color samples compared to their appearance under the defined reference illuminant. In the TM-30, there are Fedelity Index (Rf) which is to express how the accurate rendition of color is, and Gumut Index (Rg) to express what the average level of saturation is. |
| SSI | Spectral Similarity Index (SSI) is, defined by Academy of Motion Picture Arts and Sciences, Science and Technical Council, the method to express how close a test spectrum is to a reference spectrum. It is the index (SSI) to evaluate the similarity of spectrum of two light sources. |
| TLCI-2012 | Television Lighting Consistency Index (TLCI), developed by EBU (European Broadcasting Union), the method to evaluate the color rendition (the color appearance of objects) under the reference light source with 24 color samples and a mathematical model of a broadcast camera to 'see' the colors. TLCI is suitable index to the evaluation of television lighting equipment. |
| TLMF-2013 | Television Luminaire Matching Factor (TMLF) is, developed by EBU (European Broadcasting Union), a new companion metric to TLCI,TLMF allows you to compare two different lights to each other, rather than to a perfect reference, and see if they will play well together. TLMF is suitable index to the evaluation of televisioni lighting equipment. |
| Hue | Hue is the word to express the color such as red, yellow, green, pale blue, blue, etc. The unit of hue is a degree. |
| Sat (Saturation) | Saturation is the index to express the intensity or chroma. The unit is from 0 to 100%, which means 0% is no saturation and 100% is maximum saturation. |
| HSI Color Space | HSI is the abbreviation of Hue, Saturation and Intensity which the color space is composed of. Because the C-800 measures the light source, it shows the hue and saturation at 50% of intensity. |

| Term | Description | | |
|--------------------|--|--|--|
| HSV Color Space | HSV is the abbreviation of Hue, Saturation and Value which the color space is composed of. Because the C-800 measures the light source, it shows the hue and saturation at 100% of value. | | |
| White Point | It is the coordinates of "white color" which is the standard of color space on the chromaticity diagram. | | |


NOTE

 LBi (LB index) is the correction value between target color temperature and actual measured color temperature. CCi (CC index) and CC# (CC filter number) are the values to correct a difference from black body radiation. In the past years when film mode is available (such as C-700, C-500 and other traditional photographic color meters), LBi, CCi or CC# can be correlated with actual lighting filter or camera filter number (LBIf: LB lighting filter, LBcf:LB camera filter, CCIf: CC lighting filter or CCcf: CC camera filter). However, in digital mode or industrial spectrometer, LBi, CCi or CC# has no more correlation with actual lighting filter or camera filter or camera filter number (LBIf, LBcf, CCIf or CCcf). This is because these filters were designed in film age, and spectral sensitivity of filters were designed to match to film sensitivities which Blue, Green and Red sensitivity is clearly separate. So, LB index or CC index (CC filter number) can be simply calculated in formula. However, digital mode which represents human eyes characteristic has close sensitivities between Green and Red sensor. This makes both LB filter and CC filter to be used at the same time to achieve the target color temperature, and LB/CC index or CC# has no direct correlation with lighting or camera filter numbers.





Human Eyes Sensitivity

 

9-2 Filter Types

When using camera LB/CC filters based on the recommended compensation displayed in the meter (C-800), please note that camera lens filters block or absorb light to produce their effect and thus the amount of light passing through them for exposure will be reduced.

If your camera does not have a through the lens exposure system and you are using a handheld exposure meter to determine camera settings, consult the table below to find how much to increase the exposure to compensate for the light absorbed by the lens filter.

When you use a lighting filter, exposure compensation is not necessary, because the intensity of the light is already decreased.

Kodak WRATTEN 2/LEE Filter [Camera Filter]

| Amber Type | | Blue Type | |
|---------------|---|---------------|---|
| Filter Number | Exposure Increase Increment (+EV) | Filter Number | Exposure Increase Increment (+EV) |
| 81 | 1/3 | 82 | 1/3 |
| 81A | 1/3 | 82A | 1/3 |
| 81B | 1/3 | 82B | 2/3 |
| 81C | 1/3 | 82C | 2/3 |
| 81D | 2/3 | 80D | 2/3 |
| 81EF | 2/3 | 80C | 1 |
| 85C | 1/3 | 80B | 1 ² /3 |
| 85 | 2/3 | 80A | 2 |
| 85B | 2/3 | | |

| Magenta Type | | Green Type | |
|---------------|---|---------------|---|
| Filter Number | Exposure Increase Increment (+EV) | Filter Number | Exposure Increase Increment (+EV) |
| CC025M | 0 | CC025G | 0 |
| CC05M | 1/3 | CC05G | 1/3 |
| CC10M | 1/3 | CC10G | 1/3 |
| CC20M | 1/3 | CC20G | 1/3 |
| CC30M | 2/3 | CC30G | 2/3 |
| CC40M | 2/3 | CC40G | 2/3 |
| CC50M | 1 | CC50G | 2/3 |

FUJIFILM Filter [Camera Filter]

| Amber Type | | Blue Type | |
|---------------|--|---------------|--|
| Filter Number | Exposure Increase Increment (+EV) | Filter Number | Exposure Increase Increment (+EV) |
| LBA-1 | 0 | LBB-1 | 0 |
| LBA-2 | 1/3 | LBB-2 | 1/3 |
| LBA-3 | 1/3 | LBB-3 | 1/2 |
| LBA-4 | 1/3 | LBB-4 | 2/3 |
| LBA-6 | 2/3 | LBB-6 | 2/3 |
| LBA-8 | 2/3 | LBB-8 | 1 |
| LBA-12 | 2/3 | LBB-12 | 1 ² / ₃ |
| LBA-16 | 1 | LBB-16 | 2 |
| LBA-20 | 1 | LBB-20 | 2 ¹ /3 |

| Magen | Magenta Type | | n Type |
|---------------|--|---------------|--|
| Filter Number | Exposure Increase Increment (+EV) | Filter Number | Exposure Increase Increment (+EV) |
| CC-1.25M | 0 | CC-1.25G | 0 |
| CC-2.5M | 0 | CC-2.5G | 0 |
| CC-5M | 1/3 | CC-5G | 1/4 |
| CC-7.5M | 1/3 | CC-7.5G | 1/3 |
| CC-10M | 1/2 | CC-10G | 1/3 |
| CC-20M | 2/3 | CC-20G | 1/2 |
| CC-30M | 2/3 | CC-30G | 2/3 |
| CC-40M | 1 | CC-40G | 2/3 |
| CC-50M | 1 ¹ / ₃ | CC-50G | 1 |

LEE [Lighting Filter]

| Filter No. | Filter Name | CCT(K) Conversion |
|------------|---------------------------|-------------------|
| L218 | 1/8 CTB | 3200 to 3400 |
| L203 | 1/4 CTB | 3200 to 3600 |
| L202 | 1/2 CTB | 3200 to 4300 |
| L281 | 3/4 CTB | 3200 to 5000 |
| L201 | FULL CTB | 3200 to 5700 |
| L283 | ONE AND 1/2 CTB (1.5 CTB) | 3200 to 8888 |
| L200 | DOUBLE CTB | 3200 to 26000 |
| L223 | 1/8 CTO | 6500 to 5550 |
| L206 | 1/4 CTO | 6500 to 4600 |
| L205 | 1/2 CTO | 6500 to 3800 |
| L285 | 3/4 CTO | 6500 to 3600 |
| L204 | FULL CTO | 6500 to 3200 |
| L286 | ONE AND 1/2 CTO (1.5 CTO) | 6500 to 2507 |
| L287 | DOUBLE CTO | 6500 to 2147 |

| Filter No. | Filter Name | CC Filter Equivalent |
|------------|------------------------------|----------------------|
| L278 | 1/8 PLUS GREEN (1/8 PLUS G) | CC 035 Green |
| L246 | 1/4 PLUS GREEN (1/4 PLUS G) | CC 075 Green |
| L245 | 1/2 PLUS GREEN (1/2 PLUS G) | CC 15 Green |
| L244 | FULL PLUS GREEN (PLUS GREEN) | CC 30 Green |
| L279 | 1/8 MINUS GREEN | CC 035 Magenta |
| L249 | 1/4 MINUS GREEN | CC 075 Magenta |
| L248 | 1/2 MINUS GREEN | CC 15 Magenta |
| L247 | FULL MINUS GREEN | CC 30 Magenta |

() Displayed in C-800

ROSCO CINEGEL [Lighting Filter]

| Filter No. | Filter Name | CCT(K) Conversion |
|------------|-------------|-------------------|
| R3216 | 1/8 CTB | 3200 to 3300 |
| R3208 | 1/4 CTB | 3200 to 3500 |
| R3206 | 1/3 CTB | 3200 to 3800 |
| R3204 | 1/2 CTB | 3200 to 4100 |
| R3203 | 3/4 CTB | 3200 to 4700 |
| R3202 | FULL CTB | 3200 to 5500 |
| R3220 | DOUBLE CTB | 2800 to 10000 |
| R3410 | 1/8 CTO | 5500 to 4900 |
| R3409 | 1/4 CTO | 5500 to 4500 |
| R3408 | 1/2 CTO | 5500 to 3800 |
| R3411 | 3/4 CTO | 5500 to 3200 |
| R3407 | FULL CTO | 5500 to 2900 |
| R3420 | DOUBLE CTO | 10000 to 2400 |

| Filter No. | Filter Name | CC Filter Equivalent |
|------------|-------------------------------|----------------------|
| R3317 | 1/8 PLUS GREEN (1/8 PLUS G) | CC 035 Green |
| R3316 | 1/4 PLUS GREEN (1/4 PLUS G) | CC 075 Green |
| R3315 | 1/2 PLUS GREEN (1/2 PLUS G) | CC 15 Green |
| R3304 | PLUS GREEN | CC 30 Green |
| R3318 | 1/8 MINUS GREEN (1/8 MINUS G) | CC 035 Magenta |
| R3314 | 1/4 MINUS GREEN (1/4 MINUS G) | CC 075 Magenta |
| R3313 | 1/2 MINUS GREEN (1/2 MINUS G) | CC 15 Magenta |
| R3309 | 3/4 MINUS GREEN (3/4 MINUS G) | CC 22.5 Magenta |
| R3308 | MINUS GREEN | CC 30 Magenta |

() Displayed in C-800

ROSCO E-COLOUR+ [Lighting Filter]

| Filter No. | Filter Name | CCT(K) Conversion |
|------------|---------------------------|-------------------|
| E218 | 1/8 CTB | 3200 to 3400 |
| E203 | 1/4 CTB | 3200 to 3600 |
| E202 | 1/2 CTB | 3200 to 4300 |
| E281 | 3/4 CTB | 3200 to 5000 |
| E201 | FULL CTB | 3200 to 5700 |
| E283 | ONE AND 1/2 CTB (1.5 CTB) | 3200 to 8900 |
| E200 | DOUBLE CTB | 2800 to 10000 |
| E223 | 1/8 CTO | Daylight to 5300 |
| E206 | 1/4 CTO | Daylight to 4600 |
| E205 | 1/2 CTO | Daylight to 3800 |
| E285 | 3/4 CTO | Daylight to 3500 |
| E204 | FULL CTO | Daylight to 3200 |
| E286 | ONE AND 1/2 CTO (1.5 CTO) | Daylight to 2507 |
| E287 | DOUBLE CTO | Daylight to 2120 |

| Filter No. | Filter Name | CC Filter Equivalent |
|------------|------------------|----------------------|
| E278 | 1/8 PLUS GREEN | CC 035 Green |
| E246 | 1/4 PLUS GREEN | CC 075 Green |
| E245 | 1/2 PLUS GREEN | CC 15 Green |
| E244 | FULL PLUS GREEN | CC 30 Green |
| E279 | 1/8 MINUS GREEN | CC 035 Magenta |
| E249 | 1/4 MINUS GREEN | CC 075 Magenta |
| E248 | 1/2 MINUS GREEN | CC 15 Magenta |
| E247 | FULL MINUS GREEN | CC 30 Magenta |

() Displayed in C-800

* Kodak and Wratten are trademarks of Eastman Kodak Company.

* Fujifilm is a registered trademark of Fujifilm Corporation.

* LEE is a registered trade mark of Lee Filters, a division of Panavision Europe Ltd.

* Rosco, Cinegel, and E-Colour+ are a registered trademarks of Rosco Laboratories Inc.

* All other company or product names are trademarks or registered trademarks of the respective companies.

9-3 Specifications

Туре

Spectrometer with CMOS linear image sensor for digital cameras

Illuminance meter class

• Conforms to JIS C 1609-1:2006 for General Class A Illuminance Meters

Light receiving method

Incident light

Light receptor

• White diffuser (fixed type)

Measuring distance

• 0.5m to ∞ = 1.64ft to ∞

Light receptor element

• CMOS linear image sensor 128 pixels

Spectral wavelength range

380nm to 780nm

Spectral bandwidth

• Approximately 11nm (half bandwidth)

Measurement system Measuring mode • Ambient light Ambient light mode Flash light Cord flash mode with sync cord Cordless flash mode Measurement Color Color temperature measurement based on type measurement color matching function (Correlated color temperature) Illuminance Complies with JIS C1609-1:2006 general A class illuminometer Display mode Color Text mode, Spectrum mode, measurement Spectrum Comp. mode, CRI mode, CRI Comp. mode, TM-30 mode, SSI mode, TLCI/TLMF mode, Filter (Camera/Lighting) mode, Multi Lights mode, WB Corr. mode

| Mossuromont ran | | | | |
|--|---|---|--|--|
| Measurement ran | • | | | |
| Illuminance in color temperature measurement | Ambient light Flash light | 5lx to 200,000lx 0.46fc to 18,600fc 20lx·s to 20,500lx·s 1.86fc·s to 1,900fc·s | | |
| • Illuminance | Ambient light | 1 x to 200,000 x 0.09 fc to 18,600 fc | | |
| • Exposure | • Flash light | Range L: 20lx·s to 640lx·s (f/2.8 to f/16) 1.86fc·s to 59.5fc·s Range H: 580lx·s to 20,500lx·s (f/11.9 to f/90) 53.9fc·s to 1,900fc·s | | |
| Correlated color | Ambient light | 1,600K to 40,000K | | |
| temperature | • Flash light | 4,000K to 10,000K (20Ix·s to 20,500Ix·s = 1.86fc·s to 1,900fc·s 380nm to 780nm) 2,500K to 4,000K, 10,000K to 40,000K (20Ix·s to 10,200Ix·s = 1.86fc·s to 947fc·s 400nm to 700nm) | | |
| Color rendering properties | • CRI • TM-30 • SSI • TLCI-2012 • TLMF-2013 | Ra, R1 to R15 -100.0 to 100.0 Rf 0 to 100 Rg 0 to 200 SSI 0 to 100 Qa 0 to 100 ⊿ Qa 0 to 100 (5lx to 200,000lx = 0.46fc to 18,600fc) | | |
| • Chromaticity coordinate x, y | • CIE1931 | 0.0000 to 1.0000 (5lx to 200,000lx = 0.46fc to 18,600fc) | | |
| • Hue | • HSV • HSI | 0° to 359° 0° to 359° (5lx to 200,000lx = 0.46fc to 18,600fc) | | |
| Saturation | • HSV • HSI | 0% to 100% 0% to 100% (5lx to 200,000lx = 0.46fc to 18,600fc) | | |
| Accuracy | | | | |
| Illuminance | | ±5% ±1digit of indicated value (Complies with JIS C1609-1:2006 general A class illuminometer) | | |
| Color temperature | | ±4MK ⁻¹ (Light source A, 800lx = 74.3fc) | | |

| Illuminance 1% + 1digit (Light source A, 301x ~ 200,0001x to 2.79fc to 18,600fc) 5% + 1digit (Light source A, 11x ~ 301x to 0.09fc to 2.79fc) Color <licolor< li=""> Color Color Col</licolor<> | Repeatability (2σ) | | | |
|---|---|---|--|--|
| temperature 5001x ~ 200,0001x to 46.5fc to 18,600fc) 4MK-1 (Light source A, 1001x ~ 5001x to 9.29fc to 46.5fc) 8MK-1 (Light source A, 301x ~ 1001x to 2.79fc to 9.29fc) 17MK-1 (Light source A, 51x ~ 301x to 0.46fc to 2.79fc) Switching range L/H • Torelance of color temperature ±8MK ⁻¹ Spectral response characteristics • f1' 9% or less (Complies with JIS C1609-1:2006 general A class illuminometer) Oblique incident light characteristics • f2 6% or less (Complies with JIS C1609-1:2006 general A class illuminometer) Temperature characteristics • f1 • Illuminance ±5% of indicated value (Complies with JIS C1609-1:2006 general A class illuminometer) • Color temperature ±12MK ⁻¹ (Light source A, 1,0001x =92.9fc) Humidity characteristics • Illuminance ±3% of indicated value (Complies with JIS C1609-1:2006 general A class illuminometer) • Color temperature ±12MK ⁻¹ (Light source A, 1,0001x =92.9fc) Humidity characteristics • Illuminance ±3% of indicated value (Complies with JIS C1609-1:2006 general A class illuminometer) • Color temperature ±12MK ⁻¹ (Light source A, 1,0001x =92.9fc) Humidity characteristics • Illuminance ±3% of indicated value (Complies with JIS C1609-1:2006 general A class illuminometer) • Color temperature settings 2,500K to 10,000K | • Illuminance | | 30lx ~ 200,000lx to 2.79fc to 18,600fc) 5% + 1digit (Light source A, | |
| Torelance of color temperature ±8MK ⁻¹ Spectral response characteristics f1' 9% or less (Complies with JIS C1609-1:2006 general A class illuminometer) Oblique incident light characteristics f2 6% or less (Complies with JIS C1609-1:2006 general A class illuminometer) Temperature characteristics t12 e llluminance t5% of indicated value (Complies with JIS C1609-1:2006 general A class illuminometer) temperature characteristics t12MK ⁻¹ (Light source A, 1,0001x =92.9fc) Humidity characteristics e llluminance t3% of indicated value (Complies with JIS C1609-1:2006 general A class illuminometer) tocolor temperature t12MK ⁻¹ (Light source A, 1,0001x =92.9fc) Humidity characteristics t3% of indicated value (Complies with JIS C1609-1:2006 general A class illuminometer) t12MK ⁻¹ (Light source A, 1,0001x =92.9fc) Display range target color temperature settings 2,500K to 10,000K target color temperature settings target color temperature settings | | | 500lx ~ 200,000lx to 46.5fc to 18,600fc) 4MK-1 (Light source A, 100lx ~ 500lx to 9.29fc to 46.5fc) 8MK-1 (Light source A, 30lx ~ 100lx to 2.79fc to 9.29fc) 17MK-1 (Light source A, | |
| Spectral response characteristics • f1' 9% or less (Complies with JIS C1609-1:2006 general A class illuminometer) Oblique incident light characteristics • f2 6% or less (Complies with JIS C1609-1:2006 general A class illuminometer) Temperature characteristics • llluminance ±5% of indicated value (Complies with JIS C1609-1:2006 general A class illuminometer) • Color temperature ±12MK ⁻¹ (Light source A, 1,000lx =92.9fc) Humidity characteristics ±3% of indicated value (Complies with JIS C1609-1:2006 general A class illuminometer) • Color temperature ±12MK ⁻¹ (Light source A, 1,000lx =92.9fc) Humidity characteristics ±3% of indicated value (Complies with JIS C1609-1:2006 general A class illuminometer) • Color temperature ±3% of indicated value (Complies with JIS C1609-1:2006 general A class illuminometer) • Color temperature ±3% of indicated value (Complies with JIS C1609-1:2006 general A class illuminometer) • Color temperature ±12MK ⁻¹ (Light source A, 1,000lx =92.9fc) Display range ±12MK ⁻¹ (Light source A, 1,000lx =92.9fc) • Target color temperature settings 2,500K to 10,000K • LB Index • 1MK ⁻¹ step -500MK ⁻¹ to +500MK ⁻¹ to +5004MK ⁻¹ • 1daMK ⁻¹ step • 1daMK ⁻¹ step • 500MK ⁻¹ to +5004MK ⁻¹ | Switching range | e L/H | | |
| • f1' 9% or less (Complies with JIS C1609-1:2006 general A class illuminometer) Oblique incident light characteristics 6% or less (Complies with JIS C1609-1:2006 general A class illuminometer) • f2 6% or less (Complies with JIS C1609-1:2006 general A class illuminometer) Temperature characteristics ±5% of indicated value (Complies with JIS C1609-1:2006 general A class illuminometer) • Illuminance ±5% of indicated value (Complies with JIS C1609-1:2006 general A class illuminometer) • Color temperature ±12MK ⁻¹ (Light source A, 1,0001x =92.9fc) Humidity characteristics ±3% of indicated value (Complies with JIS C1609-1:2006 general A class illuminometer) • Color temperature ±3% of indicated value (Complies with JIS C1609-1:2006 general A class illuminometer) • Color temperature ±12MK ⁻¹ (Light source A, 1,0001x =92.9fc) Display range ±12MK ⁻¹ (Light source A, 1,0001x =92.9fc) • Target color temperature settings 2,500K to 10,000K • LB Index • 1MK ⁻¹ step -500MK ⁻¹ to +500MK ⁻¹ • 1daMK ⁻¹ step • 104MK ⁻¹ step • 104MK ⁻¹ step | • Torelance of co | lor temperature | ±8MK ⁻¹ | |
| Oblique incident light characteristics • f2 6% or less (Complies with JIS C1609-1:2006 general A class illuminometer) Temperature characteristics • Illuminance ±5% of indicated value (Complies with JIS C1609-1:2006 general A class illuminometer) • Color temperature ±12MK ⁻¹ (Light source A, 1,0001x =92.9fc) Humidity characteristics ±3% of indicated value (Complies with JIS C1609-1:2006 general A class illuminometer) • Color temperature ±3% of indicated value (Complies with JIS C1609-1:2006 general A class illuminometer) • Color temperature ±3% of indicated value (Complies with JIS C1609-1:2006 general A class illuminometer) • Color temperature ±12MK ⁻¹ (Light source A, 1,0001x =92.9fc) Display range ±12MK ⁻¹ (Light source A, 1,0001x =92.9fc) • Target color temperature settings 2,500K to 10,000K • LB Index • 1MK ⁻¹ step -500MK ⁻¹ to +500MK ⁻¹ • 1daMK ⁻¹ step Without decimal point: -50daMK ⁻¹ to +50daMK ⁻¹ | Spectral respor | nse characteristics | | |
| f2 6% or less (Complies with JIS C1609-1:2006 general A class illuminometer) Temperature characteristics Illuminance ±5% of indicated value (Complies with JIS C1609-1:2006 general A class illuminometer) Color temperature ±12MK⁻¹ (Light source A, 1,000lx =92.9fc) Humidity characteristics Illuminance ±3% of indicated value (Complies with JIS C1609-1:2006 general A class illuminometer) Color temperature ±3% of indicated value (Complies with JIS C1609-1:2006 general A class illuminometer) Color temperature ±12MK⁻¹ (Light source A, 1,000lx =92.9fc) Display range Target color temperature settings 2,500K to 10,000K LB Index 1MK⁻¹ step 500MK⁻¹ to +500MK⁻¹ HadMK⁻¹ step | ● f1' | | | |
| Temperature characteristics • Illuminance ±5% of indicated value (Complies with JIS C1609-1:2006 general A class illuminometer) • Color temperature ±12MK ⁻¹ (Light source A, 1,000lx =92.9fc) Humidity characteristics ±3% of indicated value (Complies with JIS C1609-1:2006 general A class illuminometer) • Illuminance ±3% of indicated value (Complies with JIS C1609-1:2006 general A class illuminometer) • Color temperature ±3% of indicated value (Complies with JIS C1609-1:2006 general A class illuminometer) • Color temperature ±12MK ⁻¹ (Light source A, 1,000lx =92.9fc) Display range ±12MK ⁻¹ (Light source A, 1,000lx =92.9fc) • Target color temperature settings 2,500K to 10,000K • LB Index • 1MK ⁻¹ step -500MK ⁻¹ to +500MK ⁻¹ • 1daMK ⁻¹ step • Without decimal point: -50daMK ⁻¹ to +50daMK ⁻¹ | Oblique incident light characteristics | | | |
| • Illuminance ±5% of indicated value (Complies with JIS C1609-1:2006 general A class illuminometer) • Color temperature ±12MK ⁻¹ (Light source A, 1,000lx =92.9fc) Humidity characteristics • 112MK ⁻¹ (Light source A, 1,000lx =92.9fc) • Illuminance ±3% of indicated value (Complies with JIS C1609-1:2006 general A class illuminometer) • Color temperature ±12MK ⁻¹ (Light source A, 1,000lx =92.9fc) • Color temperature ±12MK ⁻¹ (Light source A, 1,000lx =92.9fc) Display range • 12MK ⁻¹ (Light source A, 1,000lx =92.9fc) • Target color temperature settings 2,500K to 10,000K • LB Index • 1MK ⁻¹ step -500MK ⁻¹ to +500MK ⁻¹ • 1daMK ⁻¹ step • Without decimal point: -50daMK ⁻¹ to +50daMK ⁻¹ | • f2 | | | |
| C1609-1:2006 general A class illuminometer) • Color temperature ±12MK ⁻¹ (Light source A, 1,000lx =92.9fc) Humidity characteristics ±3% of indicated value (Complies with JIS C1609-1:2006 general A class illuminometer) • Illuminance ±3% of indicated value (Complies with JIS C1609-1:2006 general A class illuminometer) • Color temperature ±12MK ⁻¹ (Light source A, 1,000lx =92.9fc) Display range • Target color temperature settings 2,500K to 10,000K • LB Index • 1MK ⁻¹ step -500MK ⁻¹ to +500MK ⁻¹ • 1daMK ⁻¹ step Without decimal point: -50daMK ⁻¹ to +50daMK ⁻¹ | - | aracteristics | | |
| Humidity characteristics • Illuminance ±3% of indicated value (Complies with JIS C1609-1:2006 general A class illuminometer) • Color temperature ±12MK ⁻¹ (Light source A, 1,000lx =92.9fc) Display range • Target color temperature settings 2,500K to 10,000K • LB Index • 1MK ⁻¹ step • 1daMK ⁻¹ step • 500MK ⁻¹ to +50daMK ⁻¹ to +50daMK ⁻¹ | Illuminance | | | |
| Illuminance ±3% of indicated value (Complies with JIS C1609-1:2006 general A class illuminometer) Color temperature ±12MK⁻¹ (Light source A, 1,000lx =92.9fc) Display range Target color temperature settings 2,500K to 10,000K LB Index • 1MK⁻¹ step • -500MK⁻¹ to +500MK⁻¹ to +50daMK⁻¹ to +50daMK⁻¹ | Color temperature | | ±12MK ⁻¹ (Light source A, 1,000lx =92.9fc) | |
| C1609-1:2006 general Å class illuminometer) • Color temperature ±12MK ⁻¹ (Light source Å, 1,000lx =92.9fc) Display range • Target color temperature settings 2,500K to 10,000K • LB Index • 1MK ⁻¹ step • 1daMK ⁻¹ step • 500MK ⁻¹ to +500dMK ⁻¹ • Without decimal point: -50daMK ⁻¹ to +50daMK ⁻¹ | Humidity characteristics | | | |
| Display range • Target color temperature settings 2,500K to 10,000K • LB Index • 1MK ⁻¹ step • 1daMK ⁻¹ step • 500MK ⁻¹ to +500MK ⁻¹ • Without decimal point: -50daMK ⁻¹ to +50daMK ⁻¹ | Illuminance | | | |
| Target color temperature settings 2,500K to 10,000K LB Index · 1MK ⁻¹ step · 1daMK ⁻¹ step Without decimal point: -50daMK ⁻¹ to +50daMK ⁻¹ | Color temperate | ure | ±12MK ⁻¹ (Light source A, 1,000lx =92.9fc) | |
| LB Index 1MK ⁻¹ step -500MK ⁻¹ to +500MK ⁻¹ ·1daMK ⁻¹ step Without decimal point: -50daMK ⁻¹ to +50daMK ⁻¹ | Display range | | | |
| • 1daMK ⁻¹ step Without decimal point: -50daMK ⁻¹ to +50daMK ⁻¹ | Target color temperature settings | | 2,500K to 10,000K | |
| | LB Index | • 1MK ⁻¹ step | -500MK ⁻¹ to +500MK ⁻¹ | |
| • 0.1daMK ⁻¹ step With decimal point: -50.0daMK ⁻¹ to +50.0daMK ⁻¹ | | 1daMK⁻¹ step | Without decimal point: -50daMK ⁻¹ to +50daMK ⁻¹ | |
| | | • 0.1daMK ⁻¹ step | With decimal point: -50.0daMK ⁻¹ to +50.0daMK ⁻¹ | |
| • CC index • 80G ~ 80M | CC index | • 80G ~ 80M | | |
| | | | | |

| Illuminance | Ambient | light | 1lx to 200,000lx (3 significant digits) 0.09fc to 18,600fc (3 significant digits) |
|--|---|-----------|--|
| Exposure | • Flash lig | ht | Range L: 20lx·s to 640lx·s 1.86fc·s to 59.5fc·s Range H: 580lx·s to 20,500lx·s 53.9fc·s to 1,900fc·s |
| Shutter speed | • Flash lig | ht | 1 second to 1/500 second (in 1, 1/2, 1/3 step) plus: 1/75, 1/80, 1/90, 1/100, 1/200, 1/400 second |
| Color rendering properties | • CRI • TM-30 • SSI • TLCI-20 • TLMF-20 | | Ra, R1 to R15 -100.0 to 100.0 Rf 0 to 100 Rg 0 to 200 SSI 0 to 100 Qa 0 to 100 ⊿ Qa 0 to 100 (5lx to 200,000lx = 0.46fc to 18,600fc) |
| • Chromaticity coordinate x, y | • CIE1931 | | 0.0000 to 1.0000 (5lx to 200,000lx = 0.46fc to 18,600fc) |
| • Hue | • HSV • HSI | | 0° to 359° 0° to 359° (5lx to 200,000lx = 0.46fc to 18,600fc) |
| Saturation | • HSV • HSI | | 0% to 100% 0% to 100% (5lx to 200,000lx = 0.46fc to 18,600fc) |
| Other functions | | | |
| Preset setting | | Preset | $1 \sim 19$ settings for each digital or film mode |
| Custom Setting | | • 12 item | IS |
| Memory function Up to 9 | | • Up to 9 | 99 measurements or titles |
| Memory clear/recall /rename function | | | |
| Out of measurement range • [Under or out of display range | | • [Under] |]/[Over]/[Filter N/A] warning display |
| Battery capacity indicator With 4 display | | • With 4 | level status icons |
| Automatic power function | OFF | | able from 20min., 10min., 5min. from last use or o power off. |

| LCD backlight | Brightness can be selectable from bright, normal, or dark. | | | |
|--|--|--|--|--|
| | • Dimmer can be selectable from 20, 40, 60 sec. from last use or no dimmer. | | | |
| Touch panel lock function | Hold MENU button down for 3 seconds to lock and unlock. | | | |
| Tripod socket | • 1/4-inch, 20 threads | | | |
| Display | | | | |
| LCD display resolution | • 4.3 inch QVGA 480×800 dots | | | |
| Recommended battery | | | | |
| AA batteries | 1.5V × 2 alkaline,manganese | | | |
| USB bus-power | 5V/500mA or less (via USB cable when connected to computer) | | | |
| Operating temperature | | | | |
| -10°C ~ 40°C (without condensation) | | | | |
| Operating humidity | | | | |
| 85%RH or less (at 35°C) (without condensation) | | | | |
| Transportation and storage | conditions | | | |
| -10°C ~ 60°C (without condensation) | | | | |
| Dimensions | | | | |
| Approx. 73 (width) × 183 (height) × 27 (depth) mm (excluding protruding part of light receiving) (max. thickness 40mm) | | | | |
| Weight | | | | |
| • approx. 230g (without batteries) | | | | |
| Included accessories | | | | |

- Soft case, Strap, Start-up Guide, Safety Precaution
- * Models sold in some countries do not display illuminance and exposure in "fc (fc·s)" due to legal restrictions. In this case, Unit of Illuminance is not displayed.
- * Specifications and appearance described in this Operating Manual are subject to change without prior notice for improvements.

9-4 Legal Requirement

Legal Requirement

This product complies with the following legal requirements.

| Destination | St | andard | Details |
|------------------|----------------|---------------|--|
| Europe | CE | SAFETY | EN 60950-1 EN 62368-1 |
| | CE | EMC | EMS: EN 55024 EMI : EN 55032 |
| | | Environmental | WEEE |
| | | | RoHS |
| | | | REACH |
| North America | FCC (US) | EMC | FCC Part15 SubpartB ClassB |
| | IC (Canada) | EMC | ICES-003 |
| Japan | Environme | ntal | Containers and Packaging Recycling Law |
| China | Environme | ntal | China RoHS (GB 189455) |
| South Korea | KC | EMC | KN 11 KN 61000-6-1 |
| | | | 1. 기자재의명칭(모델명) :COLOR METER (C-800) 2. 식별부호 : MSIP-REM-SKO-C-700 3. 상호명 : SEKONIC CORPORATION 4. 제조자 : SEKONIC CORPORATION 5. 제조국가 : 일본 |

 
10. Optional Accessories

Synchro Cord

This is a five-meter (16.4 feet) long cord with three plugs.

An exposure meter, a camera and a flash can all be connected at the same time without having to plug or unplug the cord during shooting. Also, the connection terminal (male) on the light meter side of the synchro cord has a locking mechanism to ensure it remains connected to the meter.

(1 male terminal on the light meter side, 1 male terminal and 1 female terminal)



11. Troubleshooting

The following cases may not suggest failures. Please check again before requesting repair. When the meter does not function normally after checking the following, it may be damaged. Remove the battery, and ask the retailer or us to repair it.

| Status | Check item | Measure |
|---|--|--|
| It does not turn on (It does not display) | Are you pressing and holding the Power Button for one or more seconds? | Press and hold the Power Button for one or more seconds. |
| | Are $\oplus \ominus$ of the batteries inserted properly? | Check the $\oplus \ominus$ signs. (\Rightarrow P4) |
| | Is there enough battery? | Replace the battery. (⇒P10) |
| | Are the battery terminals dirty? | Wipe them off with a dry cloth. |
| | Are you using the specified batteries? | Check the batteries. (➡P4) |
| The LCD does not respond | Is the screen locked? | Press and hold the Menu Button ⓒ to unlock the screen. (➡ P19) |
| Sometimes, measurement cannot be made with USB bus power | Is C-800 Utility communicating with the meter? | If the USB icon appears on the C-800 LCD, the meter is communicating with Utility. Please wait until the communication is finished. Also, if you open the [Memory Data] screen in the Utility, it is always communicating with the meter. Please close [Memory Data] screen to use the meter with bus power. |
| The measured values are wrong | Is the Light Selection Ring 2 in the middle position? The light distribution characteristics change and suitable measurements cannot be made. | Rotate the Light Selection Ring 2 until it clicks. |
| | Are any unnecessary corrections or filter corrections set? | Check the Target (color temperature) to see if the setting is wrong. (➡ P26) |
| | | Check the Preset Target Color Temperature and confirm the setting is correct. (➡ P163) |

| Status | Check item | Measure |
|---|--|---|
| The measured values are wrong | Is the measuring mode wrong? (Such as measuring in Ambient Light Mode in flash light) | Check if the measuring mode is correct. (➡ P22) |
| | Are you using the pre-flash function when measuring in Cordless Flash Mode? | In Cordless Flash Mode, the measurement value of the main flash may not be displayed because the pre-flash is measured at first. Cancel the pre-flash function. |
| Setting values and measurement values of the spectrometer are not in the camera settings | Do the shutter speed and iris setting step of the camera and the shutter speed and iris setting step of the spectrometer match? | Some cameras can select 1/3 step, 1 step and 1/2 step, like a spectrometer. Match the step of the spectrometer with the step of the camera. (Shutter Speed Step) (➡ P129) |
| The memory function cannot be used | Is the comparison mode activated? | The memory function cannot be used when the comparison mode is used. Deactivate the comparison mode. |
| | Is "Memory Full" displayed when pressing the Memory Button? | The memory can store up to 99 values. Clear unnecessary memory values in advance, measure, and memorize it. |
| The spectrum graph does not appear in the measuring of blue LED. | Is the measured light source bright enough? | If the measured light source is not bright enough, increase the output of the light source and measure it. There is a possibility that LED with narrow spectral half bandwidth cannot give enough light amount to measure properly. |
| There is a rattling in the light receptor. | Is the light selection ring smoothly rotating? Does the light receptor go up and down smoothly? | Small rattling is not malfunction and necessary as the mechanism for switching. However, when the rattling is too much, or there is any abnormality in rotating the light selection ring, there is a possibility of faulty in the products. Contact with local retailer or Sekonic. |

| Status | Check item | Measure |
|--|--|---|
| There is some difference in reading between range L and range H when switching. | Is the light selection ring smoothly rotating? Does the light receptor go up and down smoothly? | When the location of light selection ring is not correct, the measurement may be wrong. Check if it is located properly. The torelance range of measurement for product assurance between range L and H is ± 8 MK-1. |
| The sensitivity of touch screen is not good. | Is there any difference between the touch panel sensor position and actual touched position? | According to this operating manual "8-1. Adjust Touch Panel" (\Rightarrow P178), proceed the adjustment of touch panel position. To prevent misoperation, the resistance film type touch panel is used instead of electrostatic capacitance system touch panel used in the general smart phone. Press the touch panel with your nail if the sensitivity is not enough. |
| In some cases, the measuring time is longer. | Are you measuring the ambient light with range H by mistake? | For ambient light measurement, please use the range L. If you use the range H, the less light through ND filter is coming into the sensor and it takes longer time to measure. This product uses the spectral distribution type sensor, so depending on the illuminance of light, the measuring time to display the reading will vary from 1sec. to 15sec. |

12. After-sales Services

- Contact your local distributor or camera store that you purchased from for warranty and service.
- Even within the warranty period, repair services may be provided on a paid basis. Check the conditions of warranty provided by local distributor or retailer.
- The warranty is not valid unless the copy of proof of purchase with the date of purchase and the retailer name. Be sure to store such information (bill of purchase or receipt) in a safe location.
- We will retain performance parts for repairs for approximately seven years after production is discontinued. Therefore, we may not be able to carry out repairs after this period has elapsed.
- When requesting repairs, please provide us with as much detail as possible about the failure or specific failure locations that you are able to identify. In certain cases, some products that are returned to us for repairs are not malfunctioning, and begin to operate normally again when we simply replace the batteries. Before requesting repairs, please confirm that the batteries are installed in the correct polarities, contain sufficient charge, and that they match the rating.

FCC & IC compliance information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determine by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

For Canada CAN ICES-003(B) / NMB-003 (B)

IC Warning

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'encompromettre le fonctionnement.

SEKONIC CORPORATION

7-24-14, Oizumi-Gakuen-Cho, Nerima-Ku, Tokyo 178-8686 Japan Tel +81-3-3978-2335 Fax +81-3-3978-5229 https://www.sekonic.com

> JT8197562 December 2020